

SIEMENS

SIMATIC

Industrial PC SIMATIC IPC847C

Operating Instructions

<u>Introduction</u>	1
<u>Safety notes</u>	2
<u>Description</u>	3
<u>Application planning</u>	4
<u>Installing/Mounting</u>	5
<u>Connecting</u>	6
<u>Commissioning</u>	7
<u>Integration into an automation system</u>	8
<u>Functions</u>	9
<u>Expansions and parameter assignment</u>	10
<u>Service and maintenance</u>	11
<u>Alarm, error, and system messages</u>	12
<u>Troubleshooting/FAQs</u>	13
<u>Technical data</u>	14
<u>Dimension drawings</u>	15
<u>Detailed descriptions</u>	16
<u>Appendix</u>	A
<u>ESD directive</u>	B
<u>List of abbreviations</u>	C

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

⚠ DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.
⚠ WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.
⚠ CAUTION
with a safety alert symbol, indicates that minor personal injury can result if proper precautions are not taken.
CAUTION
without a safety alert symbol, indicates that property damage can result if proper precautions are not taken.
NOTICE
indicates that an unintended result or situation can occur if the relevant information is not taken into account.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

⚠ WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction.....	9
1.1	Preface.....	9
1.2	Guideline to the operating instructions.....	10
2	Safety notes.....	11
3	Description.....	13
3.1	Overview.....	13
3.2	Areas of application.....	13
3.3	Highlights.....	14
3.4	Function.....	15
3.5	Features.....	15
3.6	Installation.....	20
3.6.1	External structure.....	20
3.6.2	Operator Controls.....	21
3.6.3	Connecting elements.....	23
3.6.4	Status displays.....	26
4	Application planning.....	29
4.1	Transport.....	29
4.2	Unpacking and checking the delivery unit.....	29
4.3	Ambient and environmental conditions.....	31
4.4	Access protection.....	32
5	Installing/Mounting.....	33
5.1	Installing the device.....	33
6	Connecting.....	35
6.1	Connecting peripherals.....	35
6.2	Connecting the power supply.....	36
6.3	Equipotential bonding.....	39
6.4	Strain relief for network cables.....	39
7	Commissioning.....	41
7.1	Requirements for commissioning.....	41
7.2	Initial commissioning.....	41
7.3	Windows Security Center.....	42
7.4	Notes on operation.....	43
7.4.1	Opening the front door.....	43

7.4.2	DVD burner (optional)	43
7.4.3	Removable hard disks.....	44
7.4.4	2HDD system (optional).....	46
7.4.5	RAID systems	46
7.4.6	Integrated SATA RAID system	47
7.4.7	Hardware SAS RAID system	53
8	Integration into an automation system	59
8.1	Integration	59
8.2	PROFINET	60
9	Functions.....	63
9.1	Overview of the monitoring functions.....	63
9.2	Temperature monitoring and temperature display.....	64
9.3	Watchdog (WD).....	64
9.4	Fan monitoring	65
9.5	RAID monitoring.....	66
9.6	Battery monitoring	66
9.7	Status of the redundant power supply	66
9.8	Active Management Technology (AMT).....	67
10	Expansions and parameter assignment.....	69
10.1	Open the device.....	69
10.2	Memory expansion.....	71
10.2.1	Installing memory modules	71
10.3	Installing expansion cards.....	73
10.3.1	Notes on the modules	73
10.3.2	Installing an expansion module.....	73
10.3.3	Installing the RAID card	74
10.4	Installing drives	78
10.4.1	Options of installing disk drives.....	78
10.4.2	Installing and removing disk drives in the front drive bay	79
10.4.3	Installing and removing drives in the front drive bay.....	81
10.4.4	Installing / removing hard disk drives in the fixed hard disk rack.....	83
11	Service and maintenance	85
11.1	Removing and installing hardware components	85
11.1.1	Repairs.....	85
11.1.2	Preventive maintenance.....	86
11.1.3	Replacing filters.....	86
11.1.4	Removing the device / drive cooling fan	87
11.1.5	Replacing the backup battery	90
11.1.6	Removing the AC power supply.....	92
11.1.7	Removing the redundant AC power supply	92
11.1.8	Replacing the redundant power supply completely	93
11.1.9	Removing the bus board.....	94
11.1.10	Removing the OP.....	95

11.1.11	Removing the motherboard	96
11.1.12	Processor replacement	98
11.2	Reinstalling the software	98
11.2.1	General installation procedure	98
11.2.2	Restoring the delivery state	98
11.2.3	Installing Windows	100
11.2.3.1	Installing Windows XP	100
11.2.3.2	Installation of Windows 7, Windows Server 2008 or Windows Server 2008 R2	102
11.2.4	Setting up the language selection by means of the Multilanguage User Interface (MUI).....	102
11.2.5	Installing drivers and software	104
11.2.6	Installing the Intel RAID controller software	104
11.2.7	Installing the optional burner or DVD software	105
11.2.8	Update installation	105
11.2.8.1	Updating the operating system	105
11.2.8.2	Installing or updating application programs and drivers	105
11.2.9	Data backup / subsequent modification of partitions	106
11.2.9.1	Hardware supported	106
11.2.9.2	Creating an image.....	106
11.2.9.3	Modifying the partitions	106
11.2.10	CP 1616 onboard.....	106
11.3	BIOS update.....	107
11.4	BIOS Recovery	107
12	Alarm, error, and system messages	109
12.1	Boot error messages.....	109
12.2	BIOS beep codes	110
13	Troubleshooting/FAQs.....	117
13.1	General troubleshooting.....	117
13.2	Troubleshooting RAID.....	119
13.3	Notes on the use of third-party modules.....	120
14	Technical data	121
14.1	General specifications.....	121
14.2	Power requirements of components (maximum values)	127
14.3	AC power supply	128
14.4	AC power supply, redundant.....	129
14.5	Technical data of the telescopic rails.....	129
15	Dimension drawings	131
15.1	Dimensional drawing of the device	131
15.2	Dimensional drawing for the use of telescopic rails.....	132
15.3	Dimensional drawings for installation of expansion modules	132
16	Detailed descriptions	135
16.1	Motherboard.....	135

16.1.1	Structure and functions of the motherboard.....	135
16.1.2	Technical features of the motherboard	136
16.1.3	Position of the interfaces on the motherboard	138
16.1.4	External interfaces	139
16.1.5	Internal ports	147
16.2	Displays and operator panel	154
16.2.1	Operating panel - Layout and function.....	154
16.2.2	Pin assignment of the OP connectors.....	154
16.3	Bus board	155
16.3.1	Bus board - Layout and principle of operation	155
16.3.2	Pin assignment of the bus board connectors.....	157
16.3.3	Interrupt assignment of the slot connectors on the bus board.....	162
16.3.4	Exclusive PCI hardware interrupt.....	163
16.4	System resources	164
16.4.1	Currently allocated system resources.....	164
16.4.2	System resources used by the BIOS/DOS	165
16.4.2.1	I/O address allocation	165
16.4.2.2	Interrupt assignments.....	167
16.4.2.3	Memory address assignments	168
16.5	BIOS Setup	169
16.5.1	Overview	169
16.5.2	Starting BIOS Setup.....	169
16.5.3	BIOS Setup menus	170
16.5.4	Main menu.....	171
16.5.5	Advanced menu	173
16.5.6	"Advanced, Active Management Technology Support" menu	180
16.5.7	Security menu	184
16.5.8	"Power" menu.....	185
16.5.9	Boot Menu	186
16.5.10	Version Menu	189
16.5.11	Exit menu	190
16.5.12	BIOS Setup default settings	191
16.6	Active Management Technology (AMT).....	195
16.6.1	AMT basics.....	195
16.6.2	Enabling AMT, basic configuration	197
16.6.3	Advanced settings.....	198
16.6.4	Resetting with Un-configure	198
16.6.5	Determining the network address	199
16.6.6	Forcing user consent.....	199
16.7	CP 1616 onboard communications processor	199
16.7.1	Introduction	199
16.7.1.1	Network connections.....	200
16.7.1.2	Typical Communication Partners	200
16.7.2	Firmware Loader	201
16.7.2.1	Loading firmware.....	203
16.7.3	Further actions in STEP 7/NCM PC.....	204

A	Appendix.....	205
	A.1 Guidelines and declarations.....	205
	A.2 Certificates and Approvals.....	206
	A.3 Service and support.....	207
	A.4 Retrofitting instructions.....	208
B	ESD directive.....	211
C	List of abbreviations.....	213
	Glossary.....	219
	Index.....	231

Introduction

1.1 Preface

Purpose of this documentation

These operating instructions contain all the information you need for commissioning and operation of the SIMATIC IPC847C.

These operating instructions are aimed at both programming and testing personnel who commission the device and connect it with other units (automation systems, programming devices), as well as for service and maintenance personnel who install add-ons or carry out fault/error analyses.

Scope of this documentation

This documentation is valid for all supplied versions of the SIMATIC IPC847C.

Position in the information landscape

These operating instructions are available on the "Documentation and Drivers" CD included with your product.

For supplementary instructions on how to handle the software, please refer to the corresponding manuals.

Conventions

The term "rack PC" or "device" is sometimes used to refer to the SIMATIC IPC847C product in this documentation. The abbreviation "CP" stands for CP 1616 onboard.

History

The following releases of the operating instructions have previously been published:

Edition	Comment
05/2010	First Edition
11/2010	Second edition changes: BIOS setup, AMT, technical data
06/2011	Third edition changes: 64-bit operating systems, SAS Hardware RAID Controller, redundant power supply with monitoring, BIOS setup, technical specifications

1.2 Guideline to the operating instructions

Content structure	Contents
Table of contents	Detailed organization of the documentation, including the index of pages and chapters
Introduction	Purpose, layout and description of the important topics.
Safety instructions	Covers all general safety-related aspects of statutory regulations in terms of the installation, commissioning and operation of the product/system.
Description	Fields of application, features and installation of the product/system
Application planning	Aspects of storage, transport, environmental and EMC conditions to be considered in the preparatory stage
Installing	Product installation options and installation instructions
Connecting	Options of connecting the product and wiring instructions
Commissioning	Commissioning the product/system.
Integration	Options of integrating the product into existing or planned system environments/networks.
Functions	Monitoring and display functions
Expansions / Programming	Installation of expansion devices (memory, modules, drives)
Maintenance and service	Replacement of hardware components, restoring and setup of the operating system, installation of drivers and software
Troubleshooting	Problems, cause, remedy
Technical specifications	General specifications in compliance with relevant standards and current/voltage values
Dimensional drawings	Dimensions of the device and of modules
Detailed descriptions	Structure, function and features of vital components, distribution of system resources and use of the BIOS Setup routine
Appendix	Guidelines and certifications, service and support, notes on retrofitting
ESD directives	General ESD directives.

Safety notes

 WARNING

Please observe the safety instructions on the back of the cover sheet of this documentation. You should not expand your device unless you have read the relevant safety instructions.

This device is compliant with relevant safety directives to IEC, VDE, EN and UL. If you have questions about the validity of the installation in the planned environment, please contact your service representative.

Opening the device/repairs

Only qualified personnel are permitted to repair the device.

 WARNING

Unauthorized opening and improper repairs can cause considerable damage to property or danger for the user.

System expansions

Only install system expansion devices designed for this device. Installation of other expansions may damage the system or violate safety requirements and RF interference suppression regulations. Contact your technical support team or where you purchased your PC to find out which system expansion devices may safely be installed.

CAUTION

If you install or exchange system expansions and damage your device, the warranty becomes void.

Battery

This device is equipped with a Lithium battery. Batteries may only be replaced by qualified personnel.

 **CAUTION**

There is the risk of an explosion if the battery is not replaced as directed. Replace only with the same type or with an equivalent type recommended by the manufacturer. Dispose of used batteries in accordance with local regulations.

 **WARNING**

Risk of explosion and release of harmful substances!

Therefore, do not throw Lithium batteries into an open fire, do not solder or open the cell body, do not short-circuit or reverse polarity, do not heat up above 100° C, dispose of in accordance with regulations and protect against direct exposure to sunlight, moisture and condensation.

ESD directives



Electrostatic-sensitive devices (ESDs) can be identified by an appropriate label.

Strictly follow the guidelines mentioned below when handling modules which are sensitive to ESD:

- Always discharge your body's static electricity before handling modules that are sensitive to ESD (for example, by touching a grounded object).
- All devices and tools must be free of static charge.
- Always pull the mains connector and disconnect the battery before you install or remove modules which are sensitive to ESD.
- Handle modules fitted with ESDs by their edges only.
- Do not touch any wiring posts or conductors on modules containing ESDs.

Description

3.1 Overview

SIMATIC IPC847C is an industrial PC in 19" rack format (4HU) with high-performance industrial functionality.

- Wide range of expansion options
- High degree of ruggedness
- Extensive product continuity



Figure 3-1 SIMATIC IPC847C

3.2 Areas of application

SIMATIC Rack PCs provide a high-performance and highly flexible 19" rack PC platform to machine, systems and control cabinet engineering for machine-oriented industrial applications:

- Measuring, open-loop control and closed-loop control of process data and machine data
- Visualization of production sequences and processes
- Image processing and evaluation in the context of quality inspection
- Data acquisition and management, server applications

The SIMATIC IPC847C is certified to CE for use in the following fields:

- Industry
- Domestic
- Business and commercial use

The device can therefore not only be used in industrial applications but also in building automation or in public facilities.

3.3 Highlights

Highly compatible to industrial standards:

- High operational vibration and shock resistance
- Wide operational temperature range
- High service friendliness
- Distinct diagnostic features

High-performance industrial functionality:

- Integrated PROFIBUS DP / MPI interface (optional)
- Integrated PROFINET interface CP 1616 onboard (optional)
- PCI-, PCIe x1-, PCIe x16 slots
PEG graphics and onboard graphics can be used simultaneously
- High flexibility and expansibility of components

High investment security:

- High continuity of the components/design
- Guaranteed spare parts availability for at least 5 years

High system availability:

- SIMATIC IPC DiagMonitor – PC diagnostics/message software by way of OPC/SNMP/LAN
- SIMATIC IPC/PG Image Creator – data imaging software
- RAID based on SAS hard disks through intelligent expansion module
- RAID based on SATA hard disks on-board
- RAID1 – redundant data storage on two hard drives, also "hot swap" in connection with removable racks
- RAID5 – striping with parity on three hard disks, "hot swap" in connection with removable racks
- Optional ECC memory module
- Redundant power supply with status message

3.4 Function

- Integrated programmable monitoring functions (program execution (watchdog), internal housing temperature, fan speed)
- Enhanced diagnostic/messaging by way of Ethernet, e-mail, SMS, and for direct input in SIMATIC software by way of OPC (optional using SIMATIC IPC DiagMonitor V4.2 or higher):
 - Operating hours counter
 - Hard disk status
 - System status (heartbeat)
 - Automatic logging of all messages to a log file
 - Option of remote monitoring of networked SIMATIC IPCs
- RAID1 (mirroring):
For automatic data mirroring on two hard disks
- RAID5 (striping with parity):
For increased memory capacity and improved data security on three hard disks

3.5 Features

General features	
Design	<ul style="list-style-type: none"> • 19" rack, 4 HU • Rugged panel-mount housing, all metal • Prepared for mounting telescopic rails • Horizontal and vertical mounting position is possible • Tower installation by means of Tower Kit • Lockable front cover as access protection
Enclosure	<ul style="list-style-type: none"> • Dust protection by means of overpressure ventilation using bearing seated front fan through filter • Enclosure cover fastened with a single screw • Front fan can be exchanged without tools • Card retainer for reliable operation of PC modules under vibration and shock conditions
Drive bays	<ul style="list-style-type: none"> • Front: 3 x 5.25" or 1 x 5.25" and a maximum of 3 x Slimline removable racks and 1 x 3.5" • Internal: 2 x 3.5" (fixed installation or in vibration-damping drive bracket)

General features	
Slots for expansion cards (long)	<ul style="list-style-type: none"> • 7 x PCI (5 V, 32 bits) • 1x PCI Express x16 ¹⁾ • 3 x PCI Express x4 (optional) for max. 11 modules
Graphics	<ul style="list-style-type: none"> • Onboard Intel® CPU with integrated HD Graphic Controller and Intel® QM57 Express Chipset Platform Controller Hub, 2-D and 3-D engine integrated on the processor Dynamic Video Memory Technology (uses up to 1.7 GB of RAM) Up to 1600x1200 at 120 Hz / 32-bit color depth Max. resolution: VGA 2560x1600 at 60 Hz / 32-bit color depth DVI 2048x1152 at 60 Hz / 32-bit color depth • in PCIe x16 slot (optional) PCIe x16 graphics card (dual head: 2x DP, 2x VGA or 2x DVI-D through DP adapter), 256 MB memory at 75 Hz / 32-bit color depth Maximum resolution: DP 2560x1600 at 60 Hz / 32-bit color depth DVI 1920x1200 at 60 Hz / 32-bit color depth VGA 2048x1536 at 60 Hz / 32-bit color depth
Interfaces	
PROFIBUS/MPI	12 Mbps (isolated potential, compatible to CP 5611); optional
PROFINET	10/100 Mbps (CP 1616 onboard), three RJ45; optional
Ethernet	2 x 10/100/1000 Mbps (two RJ45) Wake on LAN and Remote Boot supported
USB	2 x front panel, 4 x rear panel, 1 x internal; (high current)
Serial	COM1 (V.24), COM2 (V.24) 9-pin
Parallel	LPT1
Monitor	1 x DVI-I (for DVI-D or VGA using cable adapter)
Keyboard	PS/2
Mouse	PS/2
Audio	Microphone, Line out / Headset
Power supply	100 VAC to 240 VAC, wide range; with short-term power failure backup in accordance with NAMUR: Max. 20 ms at 0.85 rated voltage

Monitoring functions	
Temperature	<ul style="list-style-type: none"> • Overshoot/undershoot of permissible operating temperature • Messages can be evaluated by an application program.
Fan	<ul style="list-style-type: none"> • Speed monitoring • Messages can be evaluated by an application program.
Watchdog	<ul style="list-style-type: none"> • Monitoring of the IPC • Monitoring time can be parameterized in software • Restart can be parameterized in the event of a fault • Messages can be evaluated by an application program.
Status LEDs	<ul style="list-style-type: none"> • POWER (internal power supply unit, PC switched On) • HDD (access to hard disk drive) • ETHERNET 1, ETHERNET 2 (Ethernet status) • PN I MPI/DP (activity display of the PROFIBUS/MPI interface, optional product feature or status display of the CP 1616 onboard interface, optional product feature) • WATCHDOG (Watchdog function/error display) • TEMP (temperature status) • FAN (speed monitoring) • HDD1, HDD2, HDD3 Alarm RAID status message in conjunction with SIMATIC monitoring software (only with RAID option)

Basic variant	
CPU motherboard	Motherboard without Fieldbus
Bus module	8 slots (7 x PCI, 1 x PCIe x16) or 11 slots (7 x PCI, 1 x PCIe x16, 3 x PCIe x4)
Processor	Intel® Core™ i3-330E (2.13 GHz, 2 cores, 4 threads, 1066 MT/s FSB, 3 MB cache, EM64T, VT-x)
RAM expansion	1 GB SDRAM DDR3 1066MT/sec (PC3-8500) Single Channel without ECC 2 DIMM base for maximum of 8 GB (without or with ECC) ¹⁾
Drives	
Hard disks	250 GB SATA, 3.5", internal installation
Operating system	without

¹⁾ memory expansions ≥ 4 GB can only be used in combination with 64-bit operating systems.

Optional accessories	
Processor	<ul style="list-style-type: none"> Intel® Core™ i5-520E (2.4 GHz, 2 cores, 4 threads, 1066 MT/s FSB, 3 MB cache, TB, EM64T, VT-x, VT-d, AMT) Intel® Core™ i7-610E, (2.53 GHz 2 cores, 4 threads, 1066 MT/s FSB, 4 MB cache, TB, EM64T, VT-x, VT-d, AMT)
RAM expansion	Up to 8 GB, Dual Channel (without or with ECC) ¹⁾
PROFIBUS/MPI	12 Mbps (isolated potential, compatible to CP 5611)
PROFINET	10/100 Mbps (CP 1616 onboard, three RJ45)
Drives	
DVD ROM	Read: DVD ROM: Single layer 16x, Dual layer 10x DVD+R/RW, DVD-R/RW 12x, DVD-RAM 5x CD-ROM: CD-R 48x, CD-RW 40x
DVD burner	Read: DVD ROM: Single layer 18x, Dual layer 12x DVD-R/+R: Single layer 16x, Dual layer 12x DVD-RW/+RW 13x, DVD-RAM 12x CD-ROM: CD-R 48x, CD-RW 40x Write: DVD+R 24x, DVD+RW 8x, DVD-R 24x, DVD-RW 6x, DVD+R (DL) 12x, DVD-R DL 12x, DVD-RAM 6x, CD-R 48x, CD-RW 32x
Hard disks 3.5" (SATA/SAS)	Installation in internal drive bay (fixed or vibration-damping) <ul style="list-style-type: none"> 250 GB (SATA) 2 x 500 GB (SATA) RAID1: 500 GB (2x 500 GB, SATA)
	Installation in the front bracket of the removable rack <ul style="list-style-type: none"> 250 GB (SATA) 500 GB (SATA) 2 x 500 GB (SATA) RAID1: <ul style="list-style-type: none"> 500 GB (2x 500 GB, SATA) 1000 GB (2x 1000 GB, SAS) RAID5: <ul style="list-style-type: none"> 1 TByte (3x 500 GB, SATA) 2TByte (3x 1000 GB, SAS)
Solid State Drive 2.5" (SATA)	<ul style="list-style-type: none"> 50 GB SLC

Optional accessories	
Expansion modules	
SAS hardware RAID controller ²⁾	Intelligent PCIe-x8 RAID controller type: AD-5405Z <ul style="list-style-type: none"> • for max. 3 SAS drives • with CPU, cache memory (for little retroactive effect on system) • with buffer for data safety in the event of power failures
Optional accessories	
Graphic modules ²⁾	<ul style="list-style-type: none"> • Graphics card PCIe x16, Dual Head (2 x DP or 2 x VGA or 2 x DVI-D)
DVI-I to VGA adapter	Used to connect a monitor with a VGA port to the PC (can be ordered by configurator).
DVI-I to VGA and DVI Y-adapter (dual display)	<ul style="list-style-type: none"> • Used to directly connect two monitors to the PC (without Dual Head graphics card). • Available as option (not per configurator).
Operating system	Preinstalled and activated / included on restore DVD <ul style="list-style-type: none"> • Windows XP Professional MUI*, 32 bits • Windows Server 2008 Standard Edition (including 5 clients), MUI *, 32 bits • Windows Server 2008 R2 Standard Edition (including 5 clients), MUI *, 64 bits • Windows 7 MUI*, 32 bits / 64 bits *MUI: M ulti language U ser I nterface; 5 languages (German, English, French, Spanish, Italian)

¹⁾ memory expansions ≥ 4 GB can only be used in combination with 64-bit operating systems.

²⁾ SAS hardware RAID controller and graphic module cannot be used together.

Operating system languages

The following languages for the operating system can be installed at a later time from the recovery DVD:

Language	Windows XP	Windows Server 2008	Windows Server 2008 R2	Windows 7 32-bit	Windows 7 64-bit
German	X	X	X	X	X
English		X	X	X	X
French	X	X	X	X	X
Italian	X	X	X	X	X
Spanish	X	X	X	X	X
Japanese	X	X	X	X	X
Chinese (Hong Kong)	X	X	X	X	X
Chinese (simplified)	X	X	X	X	X
Chinese (Taiwan)		X	X	X	X
Korean	X	X			
Russian	X	X	X	X	X


3.6 Installation

Optional expansions	
SIMATIC IPC DiagMonitor SW	Software tool for monitoring local and remote SIMATIC PCs: <ul style="list-style-type: none"> • Watchdog • Temperature • Fan speed • Hard disk monitoring (SMART, RAID status) • Monitoring modules of the redundant power supply • System / Ethernet monitoring (Heartbeat)
SIMATIC IPC Image & Partition Creator SW	Software tool for local data backup and setting up of the hard disks


3.6 Installation

3.6.1 External structure

Front view of the device (example)	Item	Description
	①	Front panel with vent openings (filter mat and fan behind the front panel). Check the filter mat regularly for soiling and, if appropriate, replace it.
	②	Status displays
	③	Cover screws
	④	On/off button
	⑤	Reset button
	⑥	Lock
	⑦	Features for the installation of DVD ROM drives, DVD burners and removable racks
	⑧	Installation option for 3.5" drive
	⑨	2 x USB interface
	⑩	Lockable front door for access security. Keep the front door closed during normal operation.

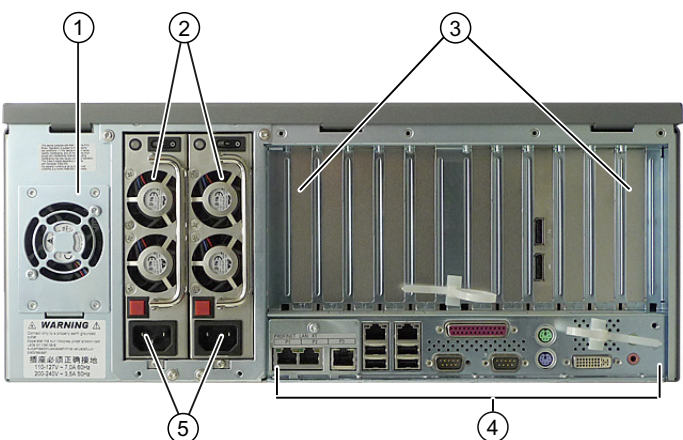
Rear view of the device (example)	Item	Description
	①	Rear drive cooling fan
	②	Modules of the redundant power supply (optional)
	③	Expansion slots
	④	Connection elements
	⑤	Mains connection of the redundant power supply modules

3.6.2 Operator Controls



 WARNING
The on/off button and on/off switch(es) do not disconnect the power from the PC!

Note

Data may be lost when the PC performs a hardware reset.

Operator control element	Item	Description
	①	On/off button Used to switch the device on or off. Note: The device rear has one or 2 line side switches ③. These have to be switched on so that the on/off button at the front functions.
	②	Reset button The reset button can be operated using a pointed object or a paper clip, for example. The button signal triggers a hardware reset. The PC performs a restart (cold start).

3.6 Installation

Operator control element	Item	Description
	<p>③</p>	<p>On/Off switch (simple power supply) Used to connect the device to the mains. Depending on the "After Power Failure" BIOS setting, the PC may turn on automatically. Otherwise, you may have to operate the on/off button ① on the front.</p>
	<p>③</p>	<p>On/Off switch (redundant power supply) Used to connect the device to the mains. Depending on the "After Power Failure" BIOS setting, the PC may turn on automatically. Otherwise, you may have to operate the on/off button ① on the front.</p>
	<p>④</p>	<p>Acknowledgement button of the redundant power supply The acoustic error signal is deactivated when the button is pressed.</p>

3.6.3 Connecting elements



Interfaces




Layout of the interfaces on the rear of the device		
Item	Designation	Description
①	PROFIBUS/MPI	PROFIBUS interface (RS 485, electrically isolated), 9-pin D-sub socket (optional product characteristic)
	PROFINET	CP-1616 onboard interface, three RJ45 sockets (optional product version)
②	USB	Connection for USB devices, USB Port 1 to 4
③	ETHERNET 1, 2 *	2 x RJ45 connectors, Ethernet 10/100/1000 Mbps (ETHERNET 1 is AMT-capable)
④	COM	Serial interface (V.24), 9-pin sub D plug
⑤	LPT	Parallel interface, 25-pin
⑥	DP	2 x display port, DP connection of Dual Head graphics card (optional)
⑦	KEYBOARD	Connection for a PS/2 keyboard
⑧	MOUSE	Connection for a PS/2 mouse
⑨	DVI-I	DVI/VGA port for CRT or LCD monitor with DVI interface, VGA via DVI/VGA adapter
⑩	Audio (input)	Connection for analog audio source, microphone, 3.5 mm phono jack
⑪	Audio (output)	Connection for active speakers or headset, 3.5 mm phono jack
⑫	DVI-D	DVI-D connection of the DP adapter
⑬	VGA	VGA connection of the DP adapter
⑭	DP	Display port connection of the DP adapter at Dual Head graphics card (optional)
⑮	Connecting potentials	Connection for equipotential bonding

- * For unique labeling, the LAN interfaces are numbered on the enclosure. The numbering by the operating system may deviate from this.

Power supply


Position of the connector for cooling devices	Description
 <p>The image shows the rear panel of a SIMATIC IPC847C. A large fan is visible at the top. Below the fan, there is a power connection socket (16) and a power switch. The socket is labeled 'FULL RANGE'. A callout line points from the socket to the circled number 16.</p>	<p>Power connection socket ⑩ for the power supply of the device. The permitted voltage range is 100 to 240 V AC.</p>
 <p>The image shows the rear panel of a SIMATIC IPC847C with two power connection sockets (16) and two fans. The sockets are labeled 'FULL RANGE'. A callout line points from the left socket to the circled number 16.</p>	<p>Power connection socket ⑩ in case of redundant power supply of the device. The permitted voltage range is 100 to 240 V AC.</p>

3.6.4 Status displays

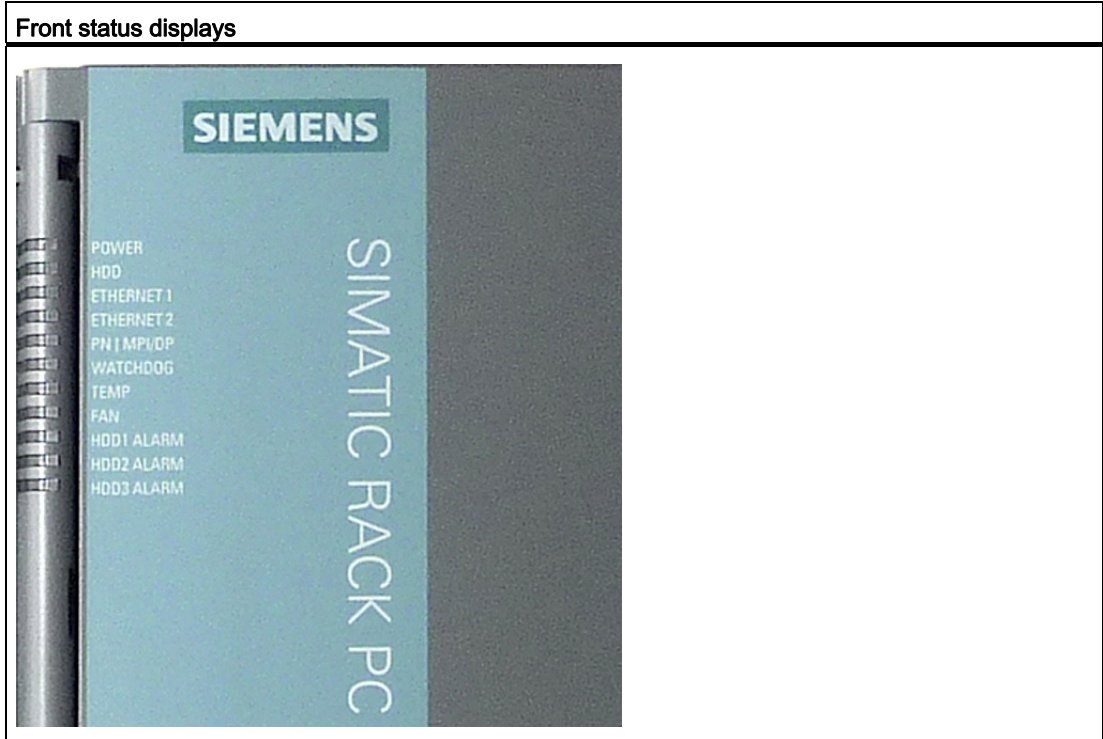

Display	Meaning	LED	Description
POWER	PC status display	OFF	isolated from mains
		YELLOW	Standby (hibernating)
		GREEN	PC in operation
HDD	Display for hard disk access	OFF	no access
		GREEN	Access
ETHERNET 1 *	ETHERNET status display	OFF	<ul style="list-style-type: none"> No connection No data traffic
		GREEN	Data traffic
ETHERNET 2 *	ETHERNET status display	OFF	<ul style="list-style-type: none"> No connection No data traffic
		GREEN	Data traffic
PN I MPI/DP (optional)	Display of the communication status to S7 or PROFIBUS	OFF	<ul style="list-style-type: none"> No connection No data traffic PROFIBUS not equipped
		GREEN	<ul style="list-style-type: none"> MPI/DP data traffic

Front status displays			
	Status display for CP 1616 onboard	OFF	<ul style="list-style-type: none"> • No connection • No data traffic • CP 1616 onboard not equipped • CP disabled • No error, communication established • Charging in progress • CP 1616 driver not installed • CP in NDIS mode
		Flashes slowly RED	<ul style="list-style-type: none"> • Link status error • IO controller: IO device cannot be addressed • IO controller: Duplicate IP address
		Flashes rapidly RED	Exception error: diagnostics via Web or SNMP is no longer possible
		RED	<ul style="list-style-type: none"> • Diagnostics information available • No communication established
WATCHDOG	WATCHDOG status display	OFF	WATCHDOG not activated
		GREEN	WATCHDOG monitoring enabled
		RED	Monitoring time elapsed
TEMP	Internal temperature monitoring	OFF	Internal temperature OK
		RED	Internal temperature critical
FAN	Fan status (only with active DiagBase or DiagMonitor software)	OFF	Fan speed OK
		RED	Fan speed too low
HDD1 ALARM HDD2 ALARM HDD3 ALARM	Hard disk alarm in conjunction with RAID and monitoring software	OFF	RAID is OK
		One RED	HDD1, HDD2 or HDD3 not OK
		All RED	RAID not OK (for information on locating the faulty HDD, refer to the RAID system section)
		All flashing	RAID is synchronized
All displays are lit	Error in early BIOS Post	All lit	CPU startup failure Error in early POST
*	For unique labeling, the LAN interfaces are numbered on the enclosure. The numbering by the operating system may deviate from this.		

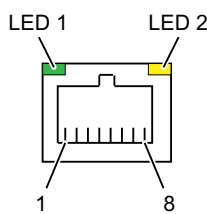Rear status displays			
			
Display	Meaning	LED	Description
Ethernet LAN 1, 2 *	Green LED Link status display	OFF	<ul style="list-style-type: none"> No cable connected Cable disabled Interface disabled, 10 MBit cable active
		GREEN	100 MBit cable active
	Yellow LED Activity status display	OFF	<ul style="list-style-type: none"> No cable connected Cable disabled Interface disabled No activity
		YELLOW	Data transfer active
PROFINET LAN X1, P1, P2, P3 *	Green LED Link status display of CP 1616 channel	OFF	<ul style="list-style-type: none"> No cable connected Cable disabled Interface disabled
		GREEN	Active cable connected
	Yellow LED Activity status display of CP 1616 channel	OFF	<ul style="list-style-type: none"> No cable connected Cable disabled Interface disabled No activity
		YELLOW	Data transfer active
*	For unique labeling, the LAN and PROFINET interfaces are numbered on the housing. The numbering by the operating system may deviate from this.		

Virtual status displays			
The two "virtual" CP 1616 LEDs are only visible in the SIMATIC software and can be read via SNMP.			
PROFINET	Virtual LEDs	RUN	CP is active
		STOP	CP is in the stop state
		Flashes	The states "flashes slowly" or "flashes rapidly" do not exist.

Application planning

4.1 Transport

Despite the device's rugged design, its internal components are sensitive to severe vibrations or shock. You must therefore protect the PC from severe mechanical stress when transporting it.

You should always use the **original packaging** for shipping and transporting the device.

CAUTION

Risk of damage to the device!

When transporting the PC in cold weather, it may be submitted to extreme variations in temperature. In this situation, ensure that no moisture (condensation) develops on or inside the device.

If condensation has developed on the device, wait at least 12 hours before you switch it on.

4.2 Unpacking and checking the delivery unit

Unpacking the device

Note the following points when you unpack the unit

- It is advisable not to dispose of the original packing material. Keep it in case you have to transport the unit again.
- Please keep the documentation in a safe place. It is required for initial commissioning and is part of the device.
- Check the delivery unit for any visible transport damage.
- Verify that the shipment contains the complete unit and your separately ordered accessories. Please inform your local dealer of any disagreements or transport damage.
- Please inform Siemens AG by means of the enclosed SIMATIC IPC/PG quality control report form.

Noting down the device identification data

The device can be clearly identified with the help of this identification data in case of repairs or theft.

Enter the following data in the table below:

- Serial number: The serial number (S VP) is located on the rating plate either on the rear panel of the device or on the inside of the front door.

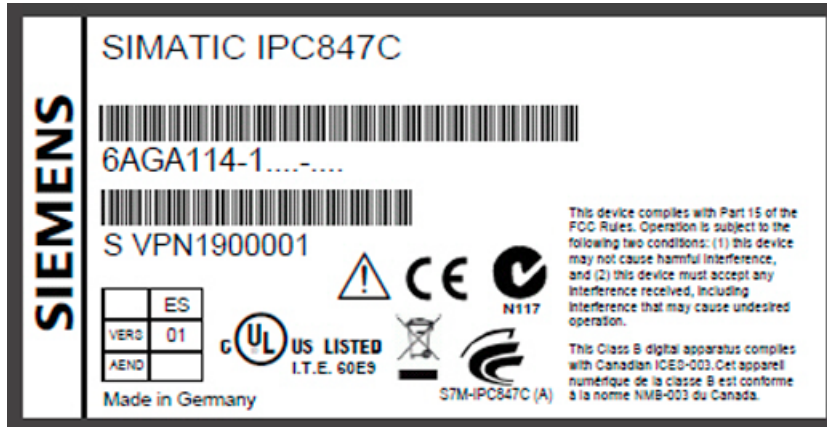


Figure 4-1 Rating plate

- Order number of the device
- Device Ethernet address: The Ethernet address is printed on the device and is stored in the BIOS Setup (F2 key) under "Advanced > Peripheral Configuration".
- Microsoft Windows "Product Key" on the "Certificate of Authenticity" (COA). The COA label is attached to the inside of the front door.
You may need the Product Key in case you reinstall the operating system.

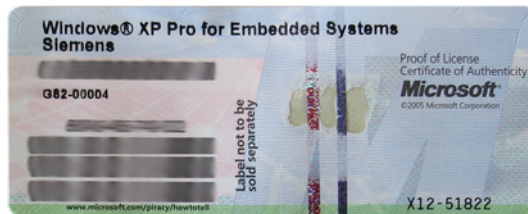


Figure 4-2 COA label

Serial number:	S VP ...
Order no.	6AGA114-1 ...
Microsoft Windows Product Key	
Ethernet 1 address	
Ethernet 2 address	
CP 1616 onboard layer 2	

Device equipment

Information on the device equipment is available on the inside of the front door.

4.3 Ambient and environmental conditions

 WARNING

If the following conditions for system installation are not observed, approvals in accordance with UL 60950-1 and EN 60950-1 are rendered void and there is a risk of overheating and personal injury.

When you plan your project, you should make allowances for:

- Climatic and mechanical environmental conditions defined in the "General technical data" chapter of the operating instructions.
- Avoid extreme ambient conditions as far as possible. Protect your device against dust, moisture and heat.
- This device was designed for use in a normal industrial environment. SIMATIC Rack PCs may not be operated in severe environments which are subject to caustic vapors or gases without taking additional protective measures (such as the provision of clean air.)
- Do not expose the device to direct sunlight.
- Install the device in such a way that it poses no danger, for example, by falling over.
- The device conforms to protection class IP41 at the front panel. Ensure that the installation opening for the device is splash-proof in areas which may be subject to splash water.
- Always maintain a minimum clearance of 50 mm to the area of the ventilation slots in order to ensure adequate ventilation of the PC.
- Do not cover the ventilation slots of the enclosure.
- The device meets requirements for fire protection housings to EN 60950-1 and can be installed without additional fire protection enclosure.
- The connected or built-in peripherals should not introduce a counter emf in excess of 0.5 V into the device.

See also

General specifications (Page 121)

4.4 Access protection

NOTICE
Access protection Unauthorized persons have direct access to the device. Protect the device from unauthorized access with a front door that can be locked and is adequately secured.
 CAUTION
Electrostatic-sensitive devices The device contains electronic components which may be destroyed by electrostatic charge. Before you open the front door, read the (ESD) guidelines for handling electrostatic-sensitive devices.




Installing/Mounting

5.1 Installing the device

Optional installation locations

The device can be mounted horizontally or vertically in control desks, switching cabinets and 19" rack systems.

Optional mounting methods

 WARNING
Function test while installing the device in machines or systems
Following the results of a risk analysis, additional protection equipment on the machine or the system is necessary to avoid endangering persons. With this, especially the programming, configuration and wiring of the inserted peripherals have to be executed, in accordance with the safety performance (SIL, PL or Cat.) identified by the necessary risk analysis.
The intended use of the device has to be ensured.
The proper use of the device has to be verified with a function test on the system. This test can detect programming, configuration and wiring errors. The test results have to be documented and if necessary inserted into the relevant inputs.

Options of mounting the device

- Mounting on cabinet brackets
- Mounting on device bases
- Tower installation: a tower kit can be ordered separately for this (not available in some countries)
- Mounting on telescopic rails

When telescopic rails are used for mounting, the device can be withdrawn fully from the cabinet or rack.

For detailed information on telescopic rails, see the sections Technical data of the telescopic rails (Page 129) and Dimensional drawing for the use of telescopic rails (Page 132).

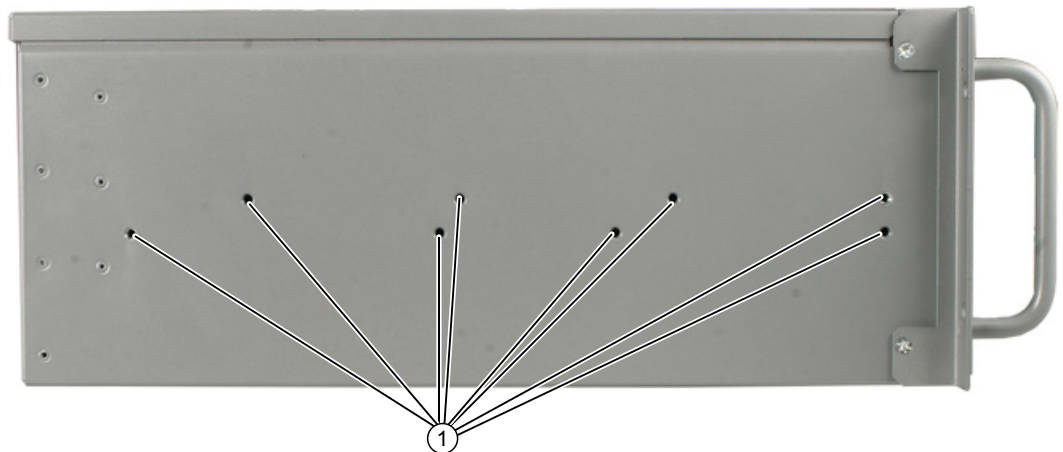


Figure 5-1 Position of the mounting holes

CAUTION

The mounting screws of the telescopic rails may not protrude more than 5 mm into the enclosure.

⚠ CAUTION

Risk of injury!

It is not permitted to install the device only on the 19-inch brackets of the front panel.

Note

For vertical operation, install the device on a horizontal metal base and secure it against tilting. The following RITTAL module panels are available:

Rittal type TE 7000.620, Rittal type VR 3861.580, Rittal type DK 7063.710. Note the information of the switch cabinet supplier.

Connecting

6.1 Connecting peripherals

Note before connecting

NOTICE

Connect only I/Os approved for industrial applications according to EN 61000-6-2. Shielded interface cables must be used for interfaces integrated ex factory.

Note

Hot-plug I/O modules (USB) may be connected while the PC is in operation.

CAUTION

I/O devices that are incapable of hot-plugging may only be connected after the device has been disconnected from the power supply.

**WARNING**

Strictly adhere to the specifications in the I/O manuals.

NOTICE

The connected or built-in I/Os should not introduce a counter emf into the device.

A counter emf greater than 0.5 V to ground on the + 3.3 VDC / + 5 VDC / + 12 VDC power rail due to a connected or integrated component can prevent normal operation or even destroy the computer.

When measuring the counter emf, remember the following:

- The computer in question must be turned off and the power supply connector should be plugged in.
- During the measurement, all cables from the plant to the computer should be connected.
- All other components in the plant must be active.

6.2 Connecting the power supply

Note before connecting

 **WARNING**

Do not connect or disconnect power and data cables during thunderstorms.

 **WARNING**

The device may only be operated on grounded power supply networks (TN systems to VDE 0100, part 300, or IEC 60364-3).

Operation on ungrounded or impedance-grounded power networks (IT networks) is prohibited.

 **WARNING**

The permitted nominal voltage of the device must conform with local mains voltage.

 **WARNING**

The mains connector must be disconnected to fully isolate the device from mains. Ensure easy access to this area.

A master mains disconnect switch must be installed if the device is mounted in a switch cabinet. Always ensure free and easy access to the power inlet on the device or that the safety power outlet of the building installation is freely accessible and located close to the device.

Note

The wide-range power supply module is designed for operation on 100 VAC to 240 VAC mains. The setting of the voltage range takes place automatically.

Note

The power supply contains a PFC (Power Factor Correction) circuit to conform with the EMC directive.

Uninterruptible AC power systems (UPSs) must supply a sinusoidal output voltage in the normal and buffered mode when used with SIMATIC PCs with a PFC circuit.

UPS characteristics are described and classified in the standards EN 50091-3 and IEC 62040-3. Devices with sinusoidal output voltage in the normal and buffered mode are identified with the classification "VFI-SS-...." or "VI-SS-....".

Localized information

Outside of the USA and Canada, operation on a 230 V power supply:

This device is equipped with a safety-tested power cord which may only be connected to a grounded shockproof power outlet. If you choose not to use this cable, you must use a flexible cable of the following type: Min. 18 AWG conductor cross-section and 15-A / 250-V shock-proof connector. The cable set must be compliant with safety regulations and stipulated IDs of the country where the system is to be installed.

For the USA and Canada:

For the United States and Canada, a CSA or UL-listed power cord must be used.

The connector must be compliant with NEMA 5-15.

120 V AC power supply


To be used is a flexible power cord approved to UL and with CSA label, and which has the following features: Type SJT with three leads, min. 18 AWG conductor cross-section, max. length 4.5 m, parallel grounding plug 15 A, min. 125 V.

240 VAC power supply

Use a flexible power cord which is approved to UL and CSA, and which has the following features: Type SJT with three conductors, min. 18 AWG conductor cross-section, max. length 4.5 m, and tandem grounded connector 15 A, min. 250 V.

Connecting


Steps for connecting the device to mains	
1	Make sure that the ON/OFF switch ② is in the '0' (OFF) position. This prevents an unintentional starting of the device when plugging in the power cable.
2	Connect the power cable to the socket ①.
3	Plug the power cable plug into the power outlet.
4	Turn on the ON/OFF switch ②. The yellow power LED (standby) on the front panel of the PC lights up.

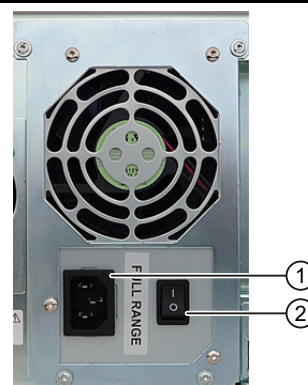


Secure the power plug

You can secure the power plug in order to avoid unintentional disconnection of the power cord.


Steps for securing the power plug	
1	Screw out the lower left-hand fixing screw ② on the power supply unit.
2	Screw on the lock for the mains connector (1) to the power supply unit.

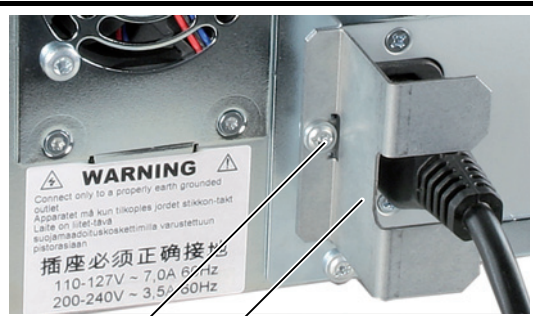

	WARNING
<p>If the power plug is secured with a clamp, the power outlet must be freely accessible to allow the device to be easily removed from the mains.</p>	


Connecting to the redundant power supply

Steps for connecting the device to mains (redundant power supply)	
1	Connect the two connectors for cooling devices ①
2	Turn both on/off switches on or off simultaneously. The green LED at the power supply ③ lights up.
<p>Note: If only one control supply module is switched on or connected, or a module is defective, a warning signal is emitted. You cancel the warning signal by pressing button ④. The status is also displayed and signaled by the SIMATIC monitoring software, if active. You can mute the acoustic alarm in the SIMATIC monitoring software.</p>	

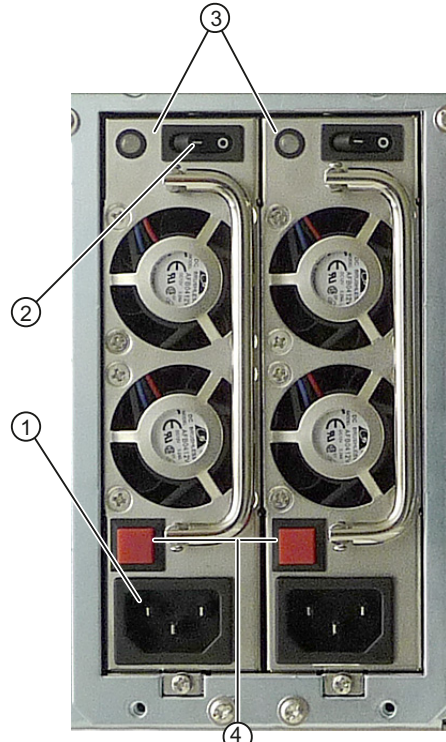

6.3 Equipotential bonding




A low-impedance ground connection improves the discharge of interference generated by external power cables, signal cables or cables for I/O modules to ground.

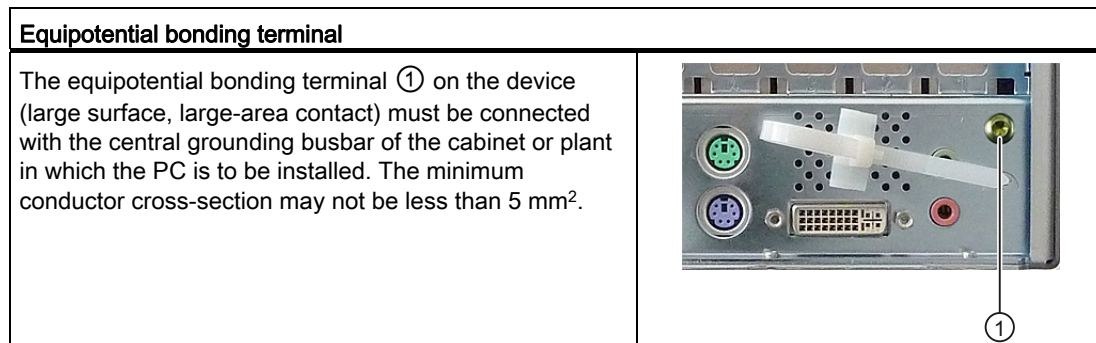

6.4 Strain relief for network cables

The strain relief provided in the scope of delivery is used to prevent accidental loosening of the network cable from the device. One cable tie (not included in the package) is required for each interface.

To fix the strain relief, you will need a TORX T10 screwdriver.

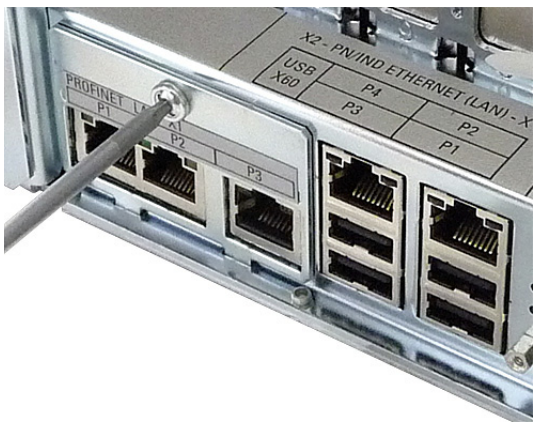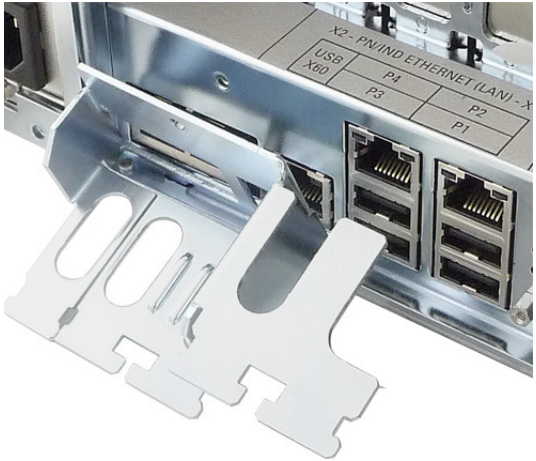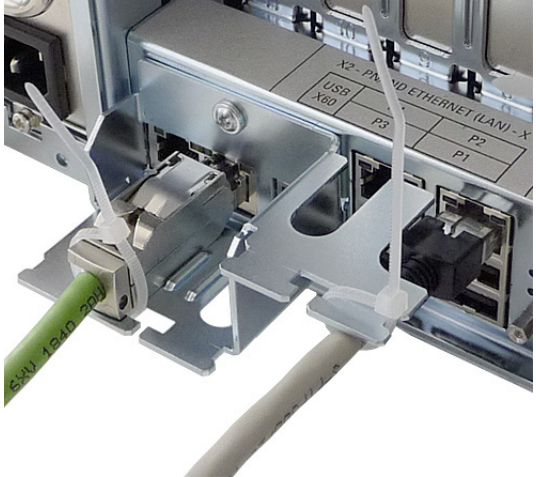Steps for mounting the strain relief	
1 Remove the PROFINET interface plate.	
2 Attach the PROFINET strain relief.	
3 Attach the cable using the cable tie.	

Commissioning

7.1 Requirements for commissioning

CAUTION
Risk of damage to the device!
Make sufficient allowances for the device to acquire room temperature before you put it into use. If condensation has developed on the device wait at least 12 hours before you switch it on.

Note

Switching the device on

The device is equipped with a power supply unit with line side switch.

In the line side switch position "1" the device can be switched on by using the On/Off switch at the front.

If the line side switch is in the position "0", the device draws the lowest power from the AC power supply. It cannot be switched on by using the On/Off switch at the front.

- Before you switch on the device, you should verify that all peripheral devices such the keyboard, mouse, monitor and the power supply are connected.
- The operating system of your device is preinstalled on the hard disk.

7.2 Initial commissioning

Following the initial switch on, the operating system is set up automatically on the device.

CAUTION
Faulty installation
If you change the default values in the BIOS setup or if you turn off the device during installation, you disrupt the installation and the operating system is not installed correctly. The operating safety of the device and the plant is at risk.
Do not switch off the device during the entire installation process. Do not change the default values in the BIOS setup.

Procedure

1. Press the on/off button.

The green POWER LED lights up. The module carries out a self-test. During the self-test, the following message appears:

Press <F2> to go to Setup Utility

Press <F12> to go to Boot Manager

2. Wait for the message to disappear.
3. Follow the instructions on the screen.
4. Make the region and language settings.

If you want your system language to be international, select English. You can find information on retroactively changing the regional and language settings in the chapter "Setting up the language selection by means of the Multilanguage User Interface (MUI) (Page 102)".

Note

Once the operating system has been set up, the device may restart.

5. Type in the product key as required.

The product key is located on the "Certificate of Authentication", in the "Product Key" line.

Result

The interface of the operating system is displayed every time you turn on the device and after the startup routine.

7.3 Windows Security Center

Warning from the Windows Security Center


A warning from the Windows Security Center is displayed the first time you switch on your device. The Security Center checks the status of the device in regard to the three important security aspects listed below. If a problem is detected (an outdated antivirus program, for example), the Security Center issues a warning and makes recommendations on how you can better protect the device.

- **Firewall:** The Windows Firewall adds protection to the device by blocking network or Internet access to the device by unauthorized users. Windows checks if the device is protected by a software firewall.
The firewall is enabled by default in the factory state.
- **Antivirus software:** Antivirus programs add protection to the device by searching for and eliminating viruses and other security threats. Windows checks if a full-range, up-to-date antivirus program is running on the device.
No antivirus software is installed in the factory state.
- **Automatic updates:** Using the Automatic Update feature allows Windows to regularly search for the latest critical updates for the device and to install them automatically. This feature is disabled in the factory state.
- **Real-time protection (Windows 7 only):** Windows Defender displays warnings if spyware or possibly unwanted software is installed or executed on the computer. You will also receive a warning if programs attempt to modify important Windows settings.

Configure the Security Center according to your requirements.

7.4 Notes on operation

7.4.1 Opening the front door

 CAUTION
Electrostatic-sensitive devices The device contains electronic components which may be destroyed by electrostatic charge. Before you open the front door, read the (ESD) guidelines for handling electrostatic-sensitive devices.

7.4.2 DVD burner (optional)

The DVD burner drive is an optional feature. Recording methods supported by the disk drive: Disc-at-once, Track-at-once, Session-at-once, Packet writing. You can write to CD-R, CD-RW, DVD+R, DVD-R, DVD-RW, DVD+RW, DVD-RAM and dual-layer media.

Burner software

You need to install additional software (burn software) to utilize full functionality of the DVD burner, depending on the operating system. This software is included on the CD supplied with the device. Insert the CD in the drive, run setup and follow the instructions on the screen.

NOTICE
When first starting the burner software, no data carriers should be inserted in the drive. This is because data carriers with errors can interrupt the automatic hard drive recognition. This makes it impossible to correctly display the possible burner functions.

Notes on burning optical data carriers

CAUTION
Danger of data errors when burning data carriers!
Burning is permissible only in an undisturbed environment, i.e. shock and vibration stress must be avoided. Because of heavy fluctuation in the quality of CD-Rs, data may be corrupted in a burning session, even if no error message is initially displayed. The written data can only be verified by comparing these with the source. To be on the safe side, data should be verified after every burning session.

7.4.3 Removable hard disks

The removable racks support hot plugging in connection with RAID1 and RAID5 during operation.

Replacing a hard disk

CAUTION
Removing the removable rack in order to replace the hard disk is only permissible when the hard disk is inactive, meaning when the hard disk status display of the removable rack is not flashing. Observe the EGB guidelines.


CAUTION
Always lock the hard disk cartridge in the removable rack to ensure reliable operation of the device.

Note

The table and information below apply only to the delivery state of the device, that is if no changes or expansions were made.

How to remove the hard disk:

1. Identify which hard disk the RAID controller has reported as being faulty.

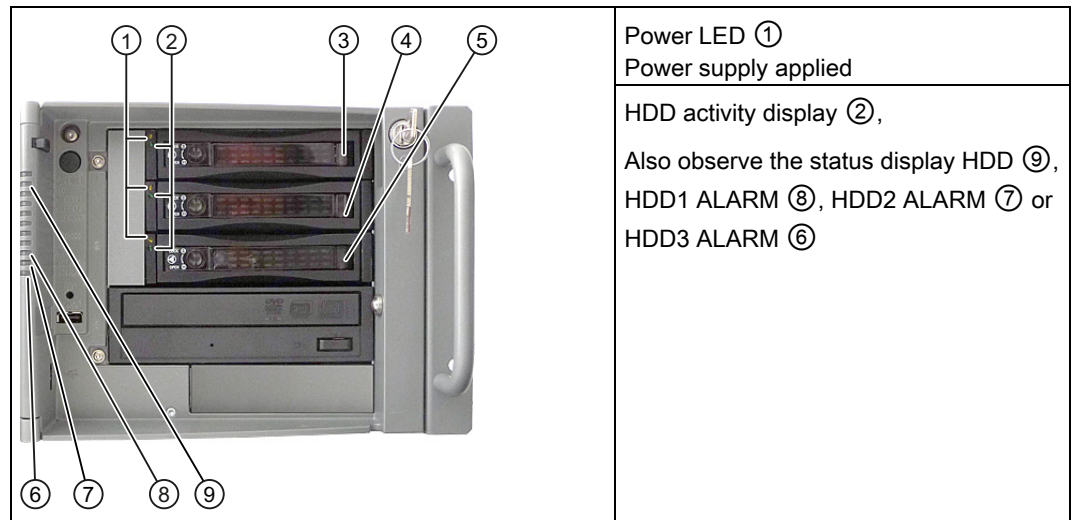

The table below shows the assignment of the removable rack positions in the device to the RAID system reports:

Assigned LED ¹⁾	Installation location	Enclosure labeling
HDD1 ALARM	③ Removable rack	*Type HDD1
HDD2 ALARM	④ Removable rack	*Type HDD2
HDD3 ALARM	⑤ Removable rack	*Type HDD3

¹⁾ If the hard disk is defective and the SIMATIC monitoring software is installed, LEDs ⑥, ⑦, ⑧ light up individually or simultaneously.

Note

*Type stands for SAS or SATA design of the hard disk. Always replace the faulty drive with a new drive of the same type and capacity.


Information about the recovery of the RAID system is available in the section "RAID systems (Page 46)".

2. Set the key switch to the "OPEN" position.
3. Pull the hard disk cartridge out.

Notes on operation

NOTICE

Always interlock the hard disk cartridge with the removable rack in order to ensure reliable operation of the device.

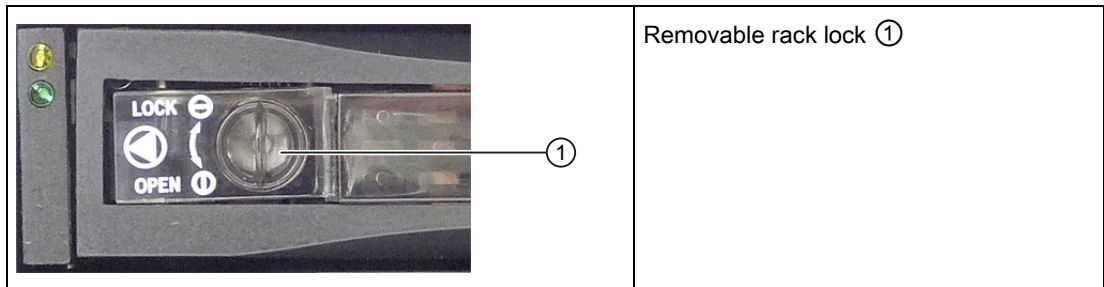

7.4.4 2HDD system (optional)

When the device ships, the second hard disk is connected to SATA port 2. This hard disk drive is not set up. This gives you the option of backing up your data to this hard disk. For information on hard disk capacities, refer to your order documentation.

Booting from the slave hard disk

In order to allow booting from the second hard disk, you need to configure it as the primary boot device. Make the following settings in your BIOS Setup:

Select Boot > Legacy > Hard Disk Drive > <Hard disk name> e.g. P0- ST3500418AS, then press the "+" key to move it up in the boot order.

NOTICE

The drive letters for the partitions on both drives are assigned by the operating system used. You can change these in the Control Panel as required.

7.4.5 RAID systems

Two versions of RAID systems are available.

- Integrated SATA RAID based on the system CPU and chip sets:
 - For standard applications without high demands regarding system effects of the RAID.
 - No expansion slot is used.
- SAS hardware RAID controller with own CPU and cache memory:
 - For applications with high demands regarding system effects of the RAID.
 - With maintenance-free buffering for high data safety.
 - The RAID controller with PCIe-x8 interface uses the PCIe-x16 expansion slot of the device.

7.4.6 Integrated SATA RAID system

Introduction

The system is configured as RAID1 or RAID5: Data backup on two or three SATA hard disks. This configuration enhances system availability as the system is able to continue operation if a hard drive fails or if there is a cable problem at a channel.

Note

You will find information about Intel RAID controllers in the RAID documentation on the "Documentation and Drivers" DVD that ships with the product in the "Drivers\RAID-AHCI\Intel" directory.

```
Intel(R) Rapid Storage Technology - Option ROM - 9.6.0.1014
Copyright(C) 2003-10 Intel Corporation. All Rights Reserved.

RAID Volumes:
ID   Name           Level           Strip           Size Status      Bootable
0    Volume0        RAID5(Parity)   64KB            931.5GB Normal       Yes

Physical Devices:
Port Device Model      Serial #           Size Type/Status(Vol ID)
0    ST3500418AS        6UM87A6V          465.7GB Member Disk(0)
2    ST3500418AS        6UM87A9Z          465.7GB Member Disk(0)
5    ST3500418AS        6UM87ADD          465.7GB Member Disk(0)

Press <CTRL-I> to enter Configuration Utility..
```

Figure 7-1 Example

RAID system management functions

The pre-installed RAID system software offers enhanced functionality for RAID system operation and management. Start the software by selecting "Start > Programs > Intel Rapid Storage Technology".

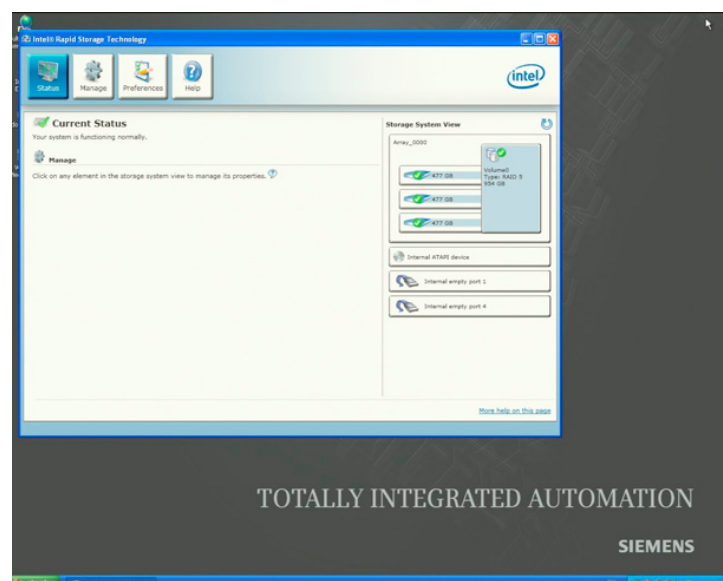


Figure 7-2 Example

The "Manage -> Advanced" command returns details of the RAID system.

Use the command "Help > System Report > Save" to create a report with details of the RAID system.

NOTICE

The RAID system status is displayed by default in the Windows event view and in the log file of the program.

A hard drive can be synchronized at operating system level if a fault is detected. It may take a very long time to synchronize a new hard disk in the background, depending on the size of the hard disk and on the system load. It may take several hours or even days in the case of a high hard disk load.

The redundant system state RAID Level 1 or 5 is only recovered if synchronization has been successfully completed.

Comments about faults

NOTICE

Input delay

The data is synchronized in the case of a hard disk failure. The system response may be delayed depending on the processor and hard disk loads. In extreme cases, the execution of keyboard, mouse or touch screen commands may be briefly delayed.

The result may be faulty operations of the machine or plant.

Do not operate any safety-critical functions during a hard disk failure.

Replacing a faulty RAID system drive

Replace the faulty drive with a new drive of the same type and capacity to return to the secure RAID1 or RAID5 status after a fault.

The RAID software displays the following:

- A defective drive
- Details of the functioning hard drive

The working hard disk is displayed by the BIOS with a port number and by the RAID software with a device port number. To view details about each drive, move the mouse cursor over the drive and press the right mouse button. A pop-up window is then activated.

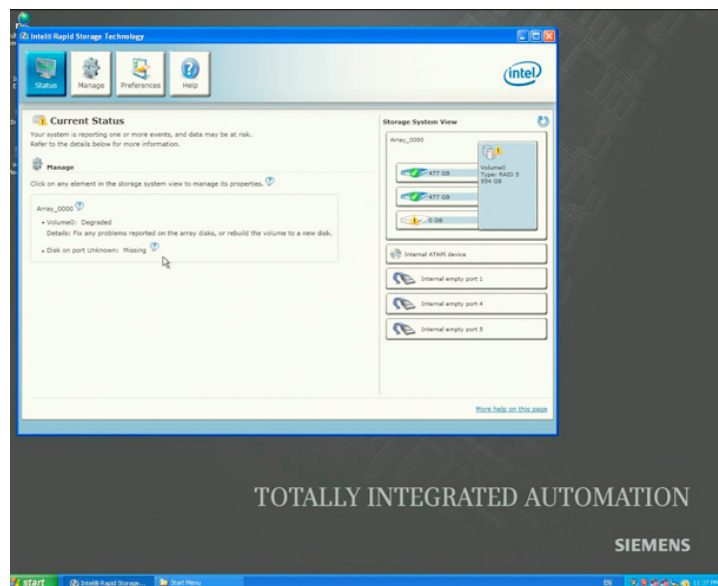


Figure 7-3 Example


The functioning drive can be located using the following pictures and tables.

NOTICE

Deviating figures


The following figures and notes apply only to the delivery state of the device without any changes or expansions.

The following figure shows the drives in the removable rack.

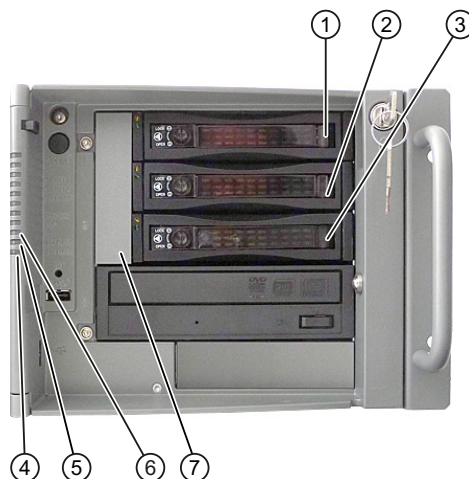

Assigned LED ¹	RAID BIOS	RAID software	SATA connection	Installation location	Enclosure labeling
HDD1 ALARM ⑥	Port 0	Device port 0	SATA0	Removable rack ①	SATA HDD1
HDD2 ALARM ⑤	Port 2	Device port 2	SATA2	Removable rack ②	SATA HDD2
HDD3 ALARM ④	Port 5	Device port 5	SATA5	Removable rack ③	SATA HDD2
The removable racks are installed in the front drive bay ⑦.					


The following figure shows the drives in the internal drive bay ④.

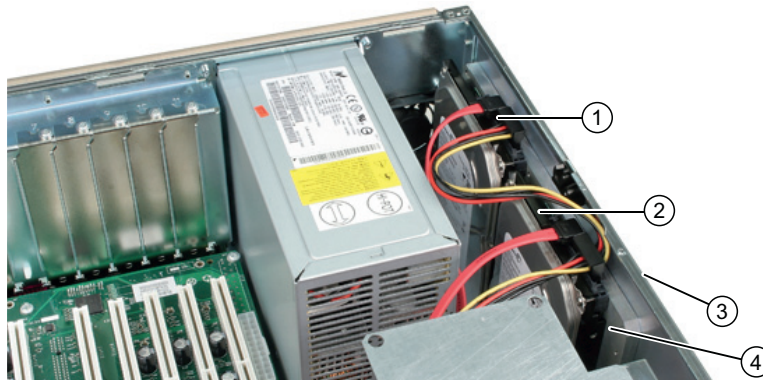

The drive has not been installed with vibration dampening.

Assigned LED ¹	RAID BIOS	RAID software	SATA connection	Installation location	Enclosure labeling
HDD1 ALARM	Port 0	Device port 0	SATA0	Side wall ③ Drive ①	1
HDD2 ALARM	Port 2	Device port 2	SATA2	Side wall ③ Drive ②	2

The following figure shows the drives in the internal and vibration damped drive bay.

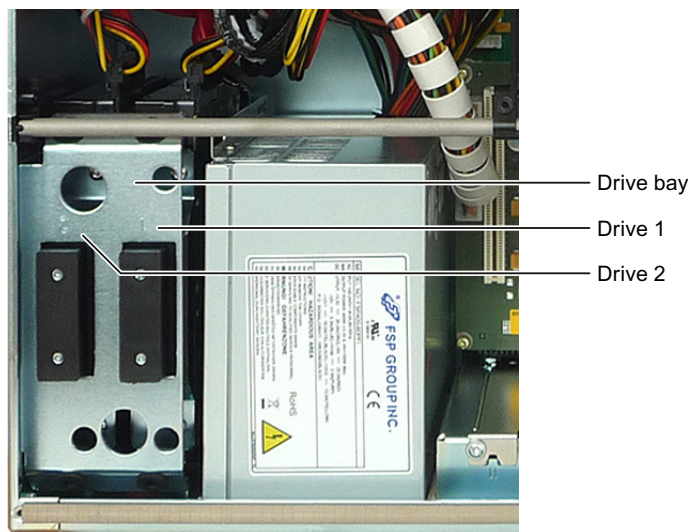

Assigned LED ¹	RAID BIOS	RAID software	SATA connection	Installation location	Enclosure labeling
HDD1 ALARM	Port 0	Device port 0	SATA0	Drive bay drive 1	1
HDD2 ALARM	Port 2	Device port 2	SATA2	Drive bay drive 2	2

¹ If the hard disk is defective and the SIMATIC monitoring software is installed, LEDs ④, ⑤, ⑥ light up individually or simultaneously on the front.

NOTICE

Hot swap: For devices with removable racks, the drive can be replaced without turning off the device.

For devices without removable rack, drives may only be replaced in shutdown state.

The new hard disk can be integrated into the RAID system at operating system level with the RAID software.


Points to note if the hard disk is replaced when the computer is turned off

Only a hard disk that was active and functioning correctly during startup can later be included in the RAID system.


To be able to boot from the RAID system, you must place the RAID system first in the list of bootable sources in the BIOS "Boot" setup menu. Otherwise, the system boots from the hard disk you have just installed and the message "Operating system not found" is displayed.

Integrating a new hard drive


Use the "Run hardware scan now" ① symbol to search for and display the new hard disk. You can also choose to reboot the device. In this case, the RAID software automatically integrates the new hard disk. The "Rebuild to another Disk" command synchronizes the RAID system.

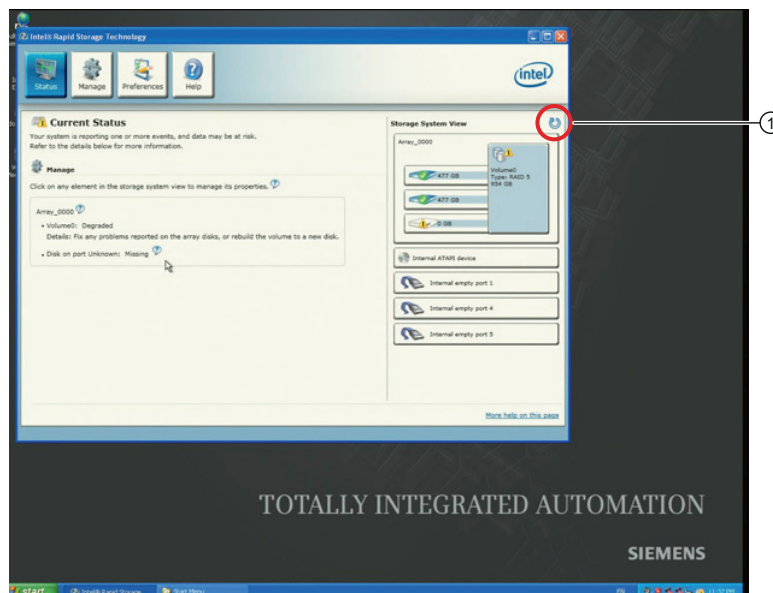

If you shut down and restart the system without installing a functioning new hard disk, "unused" is displayed for the corresponding SATA port. In this case, you will need to shut down the system again and start it up with the functioning hard disk. The new hard disk is then assigned to a SATA port and can be included in the RAID system. The "Rebuild to another Disk" command initiates synchronization of the RAID1 system.

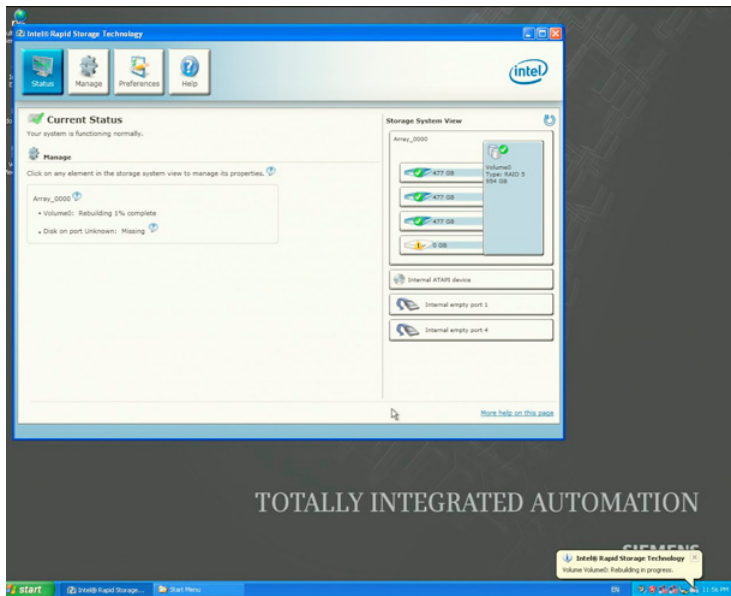

A defective drive ① continues to be displayed during the rebuilding process. This drive disappears from the display when the rebuilding process has been completed.

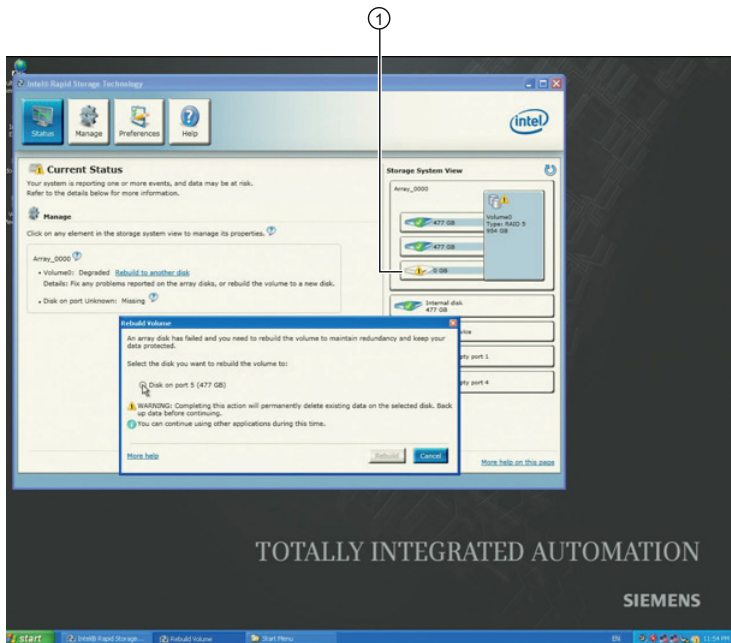


7.4.7 Hardware SAS RAID system

Introduction


The system is configured as RAID1 or RAID5: Data backup on two or three SAS hard disks. This configuration enhances system availability as the system is able to continue operation if a hard drive fails or if there is a cable problem at a channel. The RAID system is set up fully functioning. Operator controls are not necessary for operation.

Different RAID modules are described in the manufacturer documentation. The RAID module "Adaptec RAID 5405Z" is installed in your device:

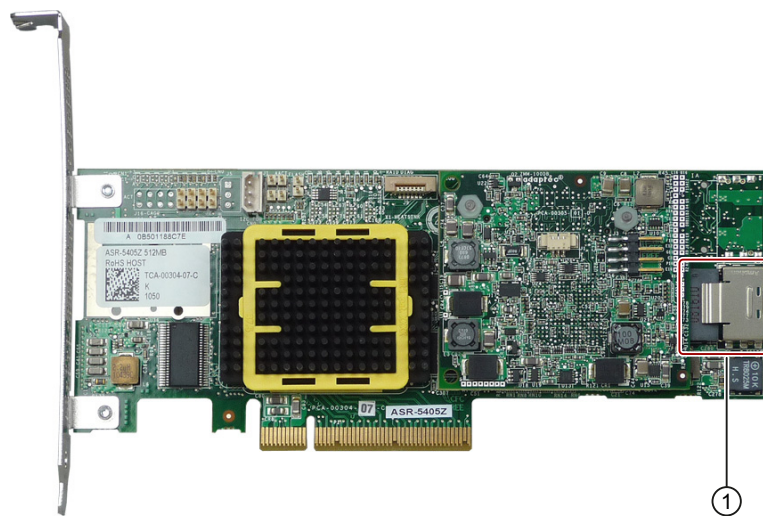

- ① Connection for the adapter cable

The figure below shows the adapter cable.

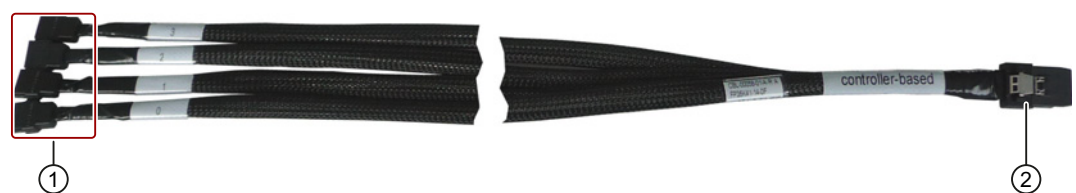

- ① Hard disk connections 0-3 (for the removable rack)
② Connection for the RAID module

The installed RAID controller for the "Adaptec RAID 5405Z" module is displayed as follows in the BIOS:

```
Adaptec RAID BIOS V5.2-0 [Build 18252]
(c) 1998-2010 Adaptec, Inc. All Rights Reserved.

<<< Press <Ctrl><A> for Adaptec RAID Configuration Utility! >>>

Controller #00 found at PCI Slot:00, Bus:01, Dev:00, Func:00
Controller Model: Adaptec 54052
Firmware Version: 5.2-0[9903]

Memory Size      : 512 MB
Serial Number    : 1B1111984BE
SAS HWN         : 50000D110395F380
ZMM Status      : Optimal

Array#0 - RAID-5      1.81 TB      Quick Init
1 Array(s) Found
```


The following documentation is available on the "Documentation and Drivers" DVD that ships with the product in the "Drivers\RAID\Adaptec" directory:

- Adaptec RAID Controller Quick Start Guide
The PDF file describes how you install the RAID controller and create a bootable RAID1 or RAID5 array. It also describes how you install the operating system and the controller driver on the array.
- Adaptec RAID Controller Installation and User Manual
The PDF file includes comprehensive information on installation and configuration of the RAID module and the connected devices.
- Adaptec Storage Manager User Manual
The PDF file includes comprehensive information on installation and use of the Adaptec Storage Manager.
- Command Line Utility User's Guide
The PDF file includes the user manual for the command line utility program and comprehensive information on the use of ARCCONF.
- Adaptec Storage Manager as integrated online help
The online help includes details on the creation and management of arrays with the Adaptec Storage Manager.

RAID system management functions

The installed RAID system software offers enhanced functionality for RAID system operation and management. The software must be started for the detailed status displays to be displayed on the screen or for work to be carried out on the RAID.

You start the software with "Start > Program Files > Adaptec Storage Manager".

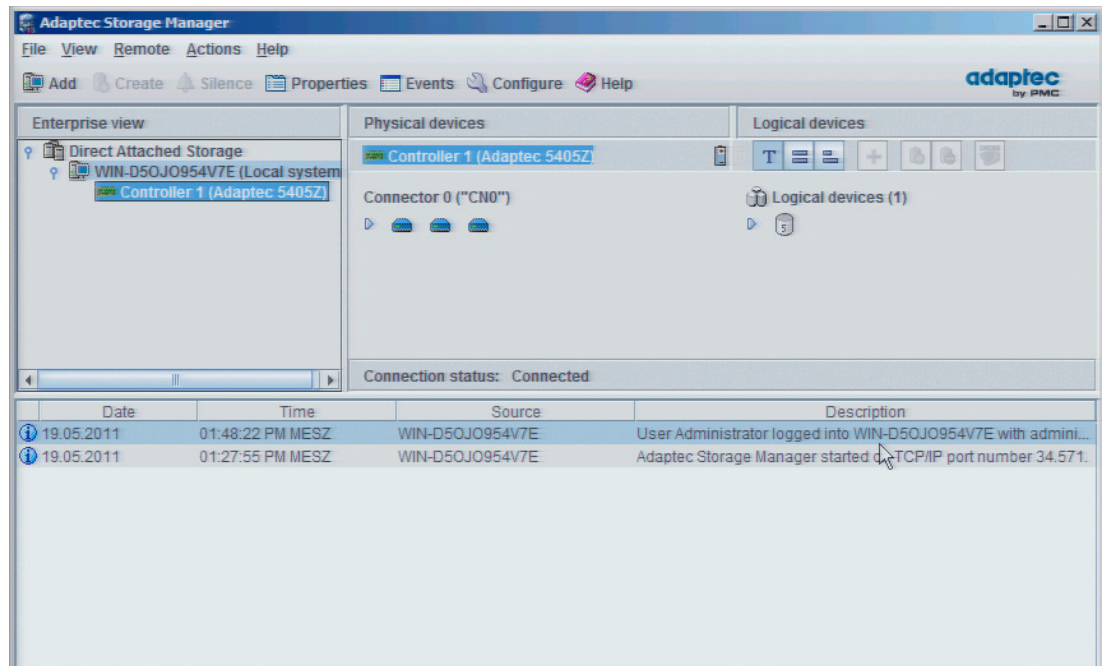

The symbols here have the following meaning:

Icon	Description
	Ready disk drive, not part of any logical drive
	Disk drive with no free space
	Failed disk drive
	Ready Solid State Drive (SSD), not part of any logical drive or MaxIQ pool
	Controller

NOTICE

The RAID system status is displayed in the Windows event view and in a log file of the program.

A hard drive can be synchronized at operating system level if a fault is detected. It may take a very long time to synchronize a new hard disk in the background, depending on the size of the hard disk and on the system load. It may take several hours or even days in the case of a high hard disk load.

The safe system states RAID Level 1 or 5 are only reached once synchronization has been successfully completed.

Comments about faults

NOTICE
Input delay
The data is synchronized in the case of a hard disk failure. The system response may be delayed depending on the processor and hard disk loads. In extreme cases, the execution of keyboard, mouse or touch screen commands may be briefly delayed.
The result may be faulty operations of the machine or plant.
Do not operate any safety-critical functions during a hard disk failure.

Before you replace the defective hard disk, create a backup copy of the system. Always replace the defective drive with a new one of the same type and capacity.


Replacing a faulty RAID system drive

Replace the faulty drive with a new drive of the same type and capacity to return to the secure RAID1 or RAID5 status after a fault.

The RAID software displays the following:


- A defective drive
- Details of the functioning hard drive

The defective hard drive is displayed by the BIOS with port number and by the RAID software with the warning symbol at the drive symbol. For details on the respective drive, double-click the drive symbol. The "Properties" dialog opens.

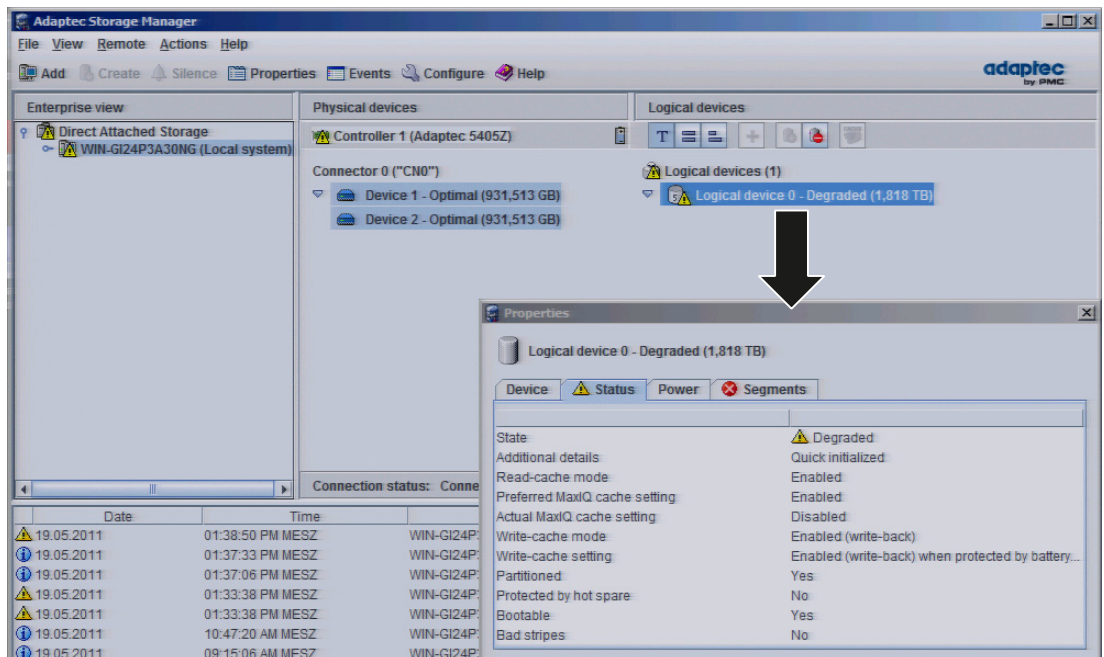

NOTICE
Deviating figures
The following figures and notes apply only to the delivery state of the device without any changes or expansions.

The following figure shows the drives in the removable rack.

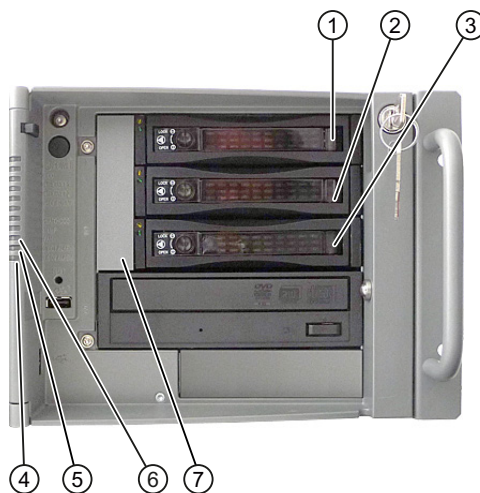

Assigned LED ¹	RAID BIOS	RAID software	Cable connection	Installation location	Enclosure labeling
HDD1 ALARM ⑥	Dev00	Device 0	0	Removable rack ①	SAS HDD1
HDD2 ALARM ⑤	Dev01	Device 1	1	Removable rack ②	SAS HDD2
HDD3 ALARM ④	Dev02	Device 2	2	Removable rack ③	SAS HDD2
The removable racks are installed in the front drive bay ⑦.					


¹ If the hard disk is defective and the SIMATIC monitoring software is installed, LEDs ④, ⑤, ⑥ light up individually or simultaneously on the front.

Integrating a new hard drive

A hard drive is integrated automatically into the RAID if it fulfills one of the following requirements:

- It is brand-new
- It is set up as a global spare drive
- It is set up as a dedicated spare drive.

Information about creating the spare drives is available in the controller documentation.

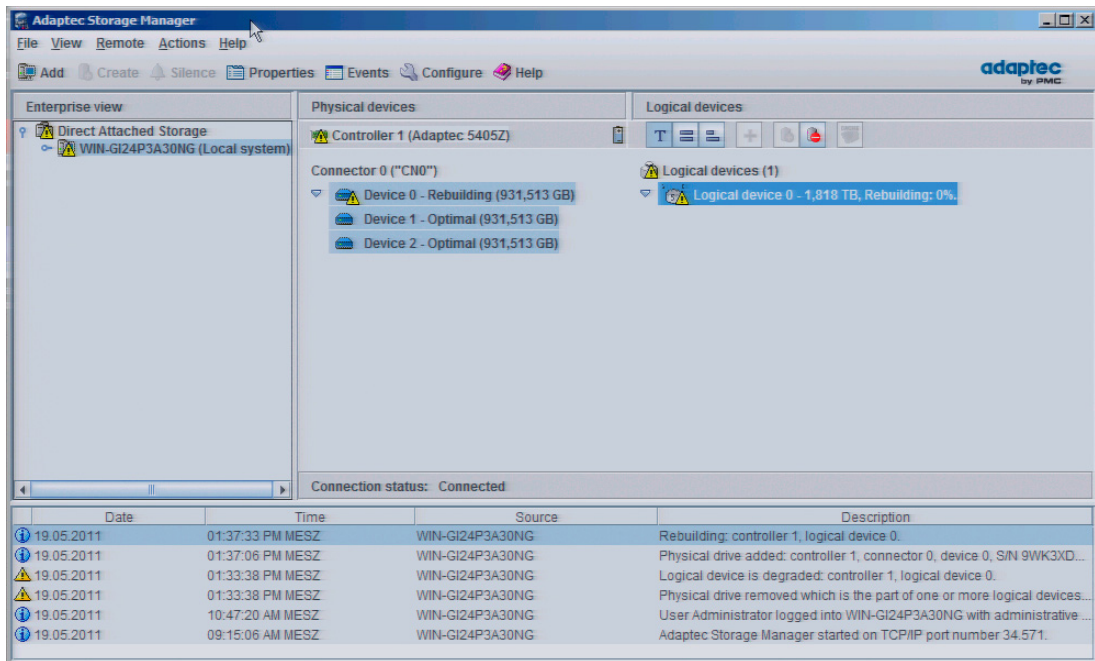

Integration into an automation system

8.1 Integration

Options of integration in existing or planned system environments/networks:

Ethernet

Wake on LAN and Remote Boot are supported.

The integrated Ethernet interfaces (10/100/1000 Mbps) can also be used for communication and data exchange with programmable controllers such as SIMATIC S7.

This functionality requires the "SOFTNET S7" software package.

PROFIBUS/MPI

The optional electrically isolated PROFIBUS interface (12 Mbps) can be used to interconnect distributed field devices or for coupling to SIMATIC S7.

The "SOFTNET for PROFIBUS" software package is required for coupling to S7 automation systems.

PROFINET

CP 1616 onboard allows you to connect industrial PCs to Industrial Ethernet. Only one CP 1616 can be installed in a PG/PC. For more information, refer to section PROFINET (Page 60) and to chapter CP 1616 onboard communications processor (Page 199).

Device driver CP 16xx.sys

The device driver allows you to use the Windows network protocol for the optionally available "CP 1616 onboard" Ethernet PROFINET controller on SIMATIC PCs. The PROFINET interface will act like a 100 MBit Ethernet interface with a MAC address when you use this driver. The three RJ45 sockets are connected to each other via switch.

The drivers and documentation can be found in the user manual on the supplied Documentation and Drivers CD.

PROFINET IO application

You can use the "Development Kit DK-16xx PN IO" to create, operate and configure PROFINET IO applications. It must be installed in addition to the CP 16xx.sys device driver. You can obtain information about this from your Siemens sales partner.

SIMATIC NET

You can create, operate and configure SIMATIC installations using this software package. You will find this information on the SIMATIC NET Manual Collection CD. The software package and the documentation are not parts of the development package.

Additional information

Additional information is available in the catalog and the online ordering system Industry Automation and Drive Technologies - Homepage (<http://www.siemens.com/automation/service&support>).

8.2 PROFINET

CP 1616 onboard

The basic characteristics of the PCS 1616 onboard are:

- Optimized for PROFINET IO
- With Ethernet realtime ASIC ERTEC 400
- Three RJ45 sockets for connecting terminal devices or addition network components
- Integrated 3-port real-time switch
- Automatic hardware detection

CAUTION
Only one CP 1616 can be installed in a PG/PC. If you want to use an additional CP 1616 module, the "CP 1616 onboard" option must be disabled in the BIOS Setup.

Additional documentation on PROFINET

Get an overview of the information available for PROFINET
(<http://support.automation.siemens.com/WW/view/en/18880715/133300>).

Document designation	What is contained in this document?
This documentation is not included in the product package:	
Getting Started PROFINET IO Getting Started: Manual Collection	The documents use concrete examples to provide step-by-step instructions on how to commission a fully functional application.
Manual PROFINET System Description	This gives you the basic knowledge about the PROFINET IO topics: Network components, data exchange and communication, PROFINET IO, component-based automation, application example of PROFINET IO and component-based automation.
Manual From PROFIBUS DP to PROFINET IO	Read this document if you want to convert an installed PROFIBUS system to a PROFINET system.
Readme file for CP 1616/CP 1604 and DK-16xx PN IO	This provides the latest information about the SIMATIC NET products CP 1616/CP 1604, CP 1616 onboard, the developer kit.
Configuration Manual Commissioning PC Stations	This provides you will all the information necessary for commissioning and configuring a PC as a PROFINET IO controller or IO device.
Manual SIMATIC NET Industrial Communication with PG/PC: Volume 1 - Basics SIMATIC NET Industrial Communication with PG/PC: Volume 2 - Interfaces	This manual introduces you to industrial communication and explains the available communication protocols. It also describes the OPC interface as an alternative to the IO-based user programming interface.
S7 CPs for Industrial Ethernet Configuring and Commissioning	This provides the following support: - For commissioning S7 stations - For establishing effective communication
Manual SIMATIC NET - Twisted Pair and Fiber-Optic Networks	Configure and build your Industrial Ethernet networks based on this document.
This documentation is part of the supplied Documentation and Drivers CD:	
Operating instructions CP 1616/CP 1604/CP 1616 onboard	This provides you with all information required for operation.
Installation guide Device Driver CP16xx.sys	Read this guide if you want to install the NDIS device driver, CP16xx.sys.

Further information

You can find the information on specific products in the Internet at the address: Product-related Information SIMATIC NET (<http://www.siemens.com/simatic-net>)

Functions

9.1 Overview of the monitoring functions

Even in its basic version, the device comes with optional monitoring functions. When used in combination with the appropriate software, the following functions for displaying, monitoring and controlling are available:

- Temperature monitoring (overtemperature / undertemperature at the temperature sensor)
- Fan monitoring (fan speed too low, fan failure, or a break in a tachometer line)
- Monitoring of hard disks with S.M.A.R.T functionality even in a RAID system
- Watchdog (hardware or software reset of the computer)
- Operating hours meter (information on the cumulative run time)
- RAID alarm display
- Battery monitoring (charge status of the CMOS battery is displayed)
- Status of the redundant power supply (module errors are displayed)

You can mute the acoustic alarm.

- AMT (Active Management Technology)

SIMATIC IPC DiagBase software

With the SIMATIC IPC DiagBase software (ships with the product), you can use these functions for local monitoring. You can use the DiagBase Management Explorer application for general monitoring or DiagBase Alarm Manager for notification of individual alarms.

The DMAPI programming interface and sample programs for the DiagBase software are located on the DVD "Documentation & Drivers" in the directory "\\Drivers\DiagBase\program files\Siemens\DiagnosticManagement".

Additional information on the functionality of the SIMATIC IPC DiagBase software is available in the online help.

SIMATIC IPC DiagMonitor software

The SIMATIC IPC DiagMonitor software can be ordered on CD (does not ship with the product). It contains the networkable monitoring software, the software for the stations to be monitored and a library for creating custom applications.

AMT (Active Management Technology)

AMT is a technology from Intel for remote maintenance of computers. You turn an AMT PC on and off remotely and start the BIOS setup remotely. Different operating systems can be booted with ISO files.

9.2 Temperature monitoring and temperature display

The temperature is recorded using temperature sensors that are installed at critical locations of the device. A sensor monitors the process temperature, further sensors monitor critical points below the bus module.

The flashing Temp LED indicates that the device is being operated at its limits. The following fault reactions are triggered if one of the temperature values exceeds the set temperature threshold:

Reaction	Option
The Temp LED changes to red	None
Device cooling fan switches to maximum speed (the power unit controls its own fan)	None
SIMATIC monitoring software alarmed	Start user-defined programs, can be set

Temperature errors do not occur if the device is used as intended. If a temperature error does occur, check for the following possible causes:

- Are the fan apertures covered?
- Is the filter dirty?
- Is the fan functioning correctly?
- Is the ambient temperature within the specified range?
- Is the total output of the power supply within the specified limit?

The temperature error is retained in memory until temperatures have fallen below the thresholds and are reset by one of the following measures:

- Acknowledgment of the error message by the monitoring software
- Restart of the device

9.3 Watchdog (WD)

Function

The watchdog (WD) monitors the activities of the device and reports an overload or blockade of the device to the user by means of various reactions.

After POWER ON of the device or after a HW RESET (cold restart), the watchdog is in idle state, i.e. a reaction of the WD will not be triggered and the Watchdog LED is switched off. The Watchdog LED is lit green when the watchdog is enabled (by means of the monitoring software, e.g. DiagBase or DiagMonitor software).

WD reactions

If the watchdog is not triggered again within the set time (through monitoring software), the following reactions are triggered:

Reaction	Option
Watchdog LED changeover from green to red	None
Trigger a PC reset	can be set
SIMATIC monitoring software is activated	None

WD monitoring times (TWD)

The monitoring times can be set in increments of one second within a range from 4 to 255 seconds.

Note

The watchdog is retriggered if the monitoring time is changed at the active watchdog (that is while the watchdog is running)!

9.4 Fan monitoring

Operation of the front / processor / power unit fans is monitored. The following reactions are triggered when a fan fails:

Reaction	Option
The fan LED switches to red	None
SIMATIC monitoring software alarmed	Startup of user-defined programs can be set

The fan fault is retained in memory until the cause of the fan failure has been rectified and the error is reset by taking one of the following measures:

- Acknowledgment of the error message through SIMATIC monitoring software, for example, Management Explorer of the SIMATIC IPC DiagBase software or the SIMATIC IPC DiagMonitor software.
- Restart of the device.

9.5 RAID monitoring

In conjunction with the SIMATIC monitoring software and in addition to the RAID software, the status of the RAID system is shown on the HDD1 Alarm, HDD2 Alarm and HDD3 Alarm front LEDs. For detailed information on the RAID system and on the operation of the RAID software, refer to the RAID section.

Reaction		Meaning	Option
HDD1 alarm	Off	RAID system is ready for operation. SIMATIC software is not active.	None
HDD2 alarm			
HDD3 Alarm	One is red	Drive 1, Drive 2 or Drive 3 has failed.	
	All are red	RAID system is not ready for operation. Affected drive must be determined with the help of the RAID software.	
	All flashing	RAID system is currently being synchronized.	

9.6 Battery monitoring

The installed backup battery has a service life of 5 years. The status can be checked with two-tier battery monitoring. The information can be read from an I/O register and evaluated.

When the first warning level is reached, the remaining service life of the battery for buffering CMOS data amounts to at least 1 month.

9.7 Status of the redundant power supply

The status of the modules is monitored. Any module is reported if its input voltage or fan fails. You can mute the acoustic alarm of the power supply using software:

Reaction	Option
SIMATIC monitoring software alarmed	Muting alarm Start user-defined programs, can be set

9.8 Active Management Technology (AMT)

AMT (Active Management Technology) is technology for the remote maintenance of computers (simply called AMT-PC in the remainder of the document) and it includes the following functions:

- Keyboard–Video–Mouse (KVM) redirection: Using KVM that is integrated in the AMT hardware you access the AMT PC remotely. With KVM, you can also control AMT PCs that have no or a defective operating system. A KVM remote session is always possible with the KVM server integrated in the firmware. This means you can restart the PC and change the BIOS setup remotely.
- Remote power management: AMT PCs can be turned on and off and restarted from another PC.
- SOL (Serial over LAN): Redirection of the data of a serial interface to the network. The main use of the function is text-based remote control of an AMT PC using a console.
- IDE redirection: An ISO file on the help desk PC can be mounted on the AMT PC and used as a DVD drive.

An ISO file contains a memory image of the content of a CD or DVD structured in the ISO 9660 format.

- Remote reboot: An AMT PC can be booted from a bootable ISO file made available by another PC.

SIMATIC IPC Remote Manager

The "SIMATIC IPC Remote Manager" software is available for utilization of the AMT functions with SIMATIC IPCs. The software can be ordered from the Siemens online ordering system. For detailed information about "SIMATIC IPC Remote Manager", refer to the corresponding product documentation.

Typical areas of application and functions of the SIMATIC IPC Remote Manager:

- Remote maintenance of SIMATIC IPC with AMT, for example for service purposes in the case of a defective operating system or for adapting BIOS settings.
- Diagnostics without on-site use
- Convenient service: Access to AMT clients, such as headless systems, without additional hardware
- Resource management

Requirement

- A device with a Core i5 or Core i7 processor
- A functioning and configured management engine
- A functioning and configured Ethernet connection
- A help desk PC with a functioning and configured Ethernet connection for the full AMT functionality

Configuration of the AMT PC

You configure AMT using the BIOS setup and the MEBx (Management Engine BIOS Extension). MEBx is a BIOS extension for configuring AMT.

When the BIOS appears briefly during startup, press the <Ctrl+P> keyboard shortcut. The "MEBx" dialog opens.

Expansions and parameter assignment

10.1 Open the device.

CAUTION

Only qualified personnel are permitted to carry out any work on the open device. You may only install memory modules and expansion cards to expand the hardware within the warranty period.

 **CAUTION****Electrostatic-sensitive devices**

The device contains electronic components which may be destroyed by electrostatic charge. This causes malfunctions and damage to the machine or plant.

Take precautionary measures even when you open the device, e.g. device doors, device flaps or the housing cover. Additional information is available in the (ESD) guidelines for handling electrostatic-sensitive devices.

You can mount all components on the device using TORX T10 and T20 screwdrivers and a 4.5-mm hexagonal wrench (for the interface interlock on the rear panel).

Requirement

- Device is disconnected from power supply.
- Screwdriver T10

Note

Unauthorized opening of device without previously disconnecting power may result in substantial damage to equipment and/or danger to the user.

Disclaimer of liability

All technical data and approvals apply only to expansion units which are released by SIEMENS.

Siemens does not accept any liability for impairment of functions caused by the use of third-party devices or components.

Observe the installation instructions for the components. UL approval of the device only applies when the UL-approved components are used according to their "Conditions of Acceptability".

Open the device

How to open the device	
1	Open the front panel.
2	Loosen the indicated screw. The screw stays captive in the housing.
3	Push the cover back and remove it.



10.2 Memory expansion

10.2.1 Installing memory modules

Memory expansion options

The motherboard is equipped with 2 slots for memory modules. DIMM DDR3 memory modules, storage frequency 1066 MT/sec, type PC3-8500, unbuffered, no ECC, or with ECC can be utilized. This allows you to expand Rack PC memory up to 8 GB, of which you can use approx. 3.2 GB for the operating system and applications in case of 32-bit operating systems. You can install one or two modules.

Combination	Slot X19 (outside)	Slot X20 (inside)	Maximum expansion
1	1 GB / 2 GB / 4 GB		4 GB
2	1 GB / 2 GB / 4 GB	1 GB / 2 GB / 4 GB	8 GB

Note

- The modules can be inserted into any slot. Memory is operated in dual-channel mode if two modules are installed.
- If expansion modules with their own memory (for example, graphics cards with 256 MB or more) are used on the module, the memory available for the 32-bit operating system or application can also be less than 3.2 GB.

In order to avoid operating faults you may have to extend a module so that the real memory expansion on the motherboard and the reserved memory of the expansion module do not overlap.



Preparation

Disconnect the device from mains and unplug all cables.


CAUTION

The electronic components on the PCBs are highly sensitive to electrostatic discharge. Always take appropriate precautionary measures when handling these components. Refer to the ESD directives on handling of electrostatically sensitive components: ESD directive (Page 211) .

Installing a memory module

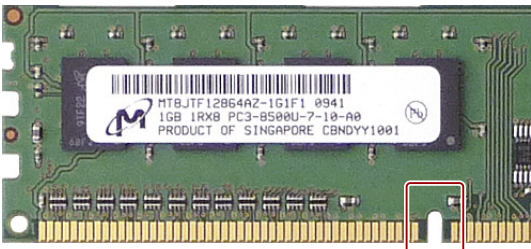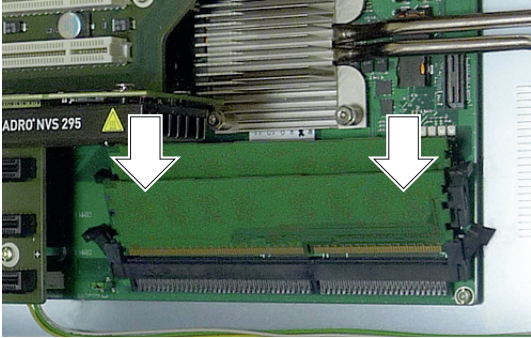How to install a memory module	
1	Open the device. See: Open the device. (Page 69)
2	If you have more than one free slot, use the slot with the lowest number.
3	Remove the memory module from its packaging. Hold it by the upper edges only. Note the indicated notch during insertion.
4	Hold the memory module at a flat angle to the motherboard and push it into the slot. 
5	Press both sides of the memory module evenly to avoid jamming. The memory module latches in audibly. The memory module is inserted correctly if less than 1 mm of the gold contacts is visible evenly across the entire length of the module. 
6	Close the device.

Removing a memory module

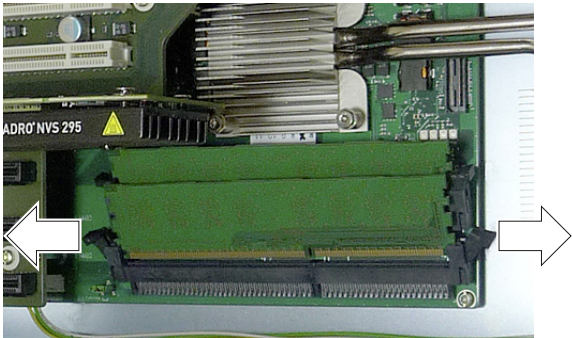How to remove a memory module	
1	Open the device. See: Open the device. (Page 69)
2	Open the two latches at the sides of the memory module evenly. Remove the memory module from the slot. 
3	Close the device.

Display of the current memory configuration

The new memory configuration is detected automatically. The allocation of the "base memory and extended memory" is automatically displayed when you switch on the device.

10.3 Installing expansion cards

10.3.1 Notes on the modules

Notes on module specifications

The device is designed for use with modules to PCI specification 2.3 or PCIe specification 1.0a or 2.0. The module supports operation of 5 V and 3.3 V PCI modules. Compliance with the defined mechanical defaults is imperative. Failure to comply with these defaults can result in contact problems, malfunctions and assembly difficulties. The permissible module contour dimensions are specified in the dimension drawings section.

Note about long PCI, PCIe modules

Long PCI/PCIe modules must be fitted with an extender for insertion into the guide rails (the extender should be supplied with the long PCI/PCIe board).

Note on PROFINET expansion modules

The "CP 1616 onboard" option must be disabled in the BIOS for devices with CP 1616 onboard, before a PROFINET module (such as a CP 1616) can be installed in the system.

10.3.2 Installing an expansion module

Preparation

Disconnect the device from mains

Installing expansion modules

How to install an expansion module (PCI / PCIe format):		
1	Open the device (Page 69).	
2	Remove the module retainer ③	
3	Unscrew the slot cover ① of the planned slot	
4	Insert the expansion module ② into the relevant slot.	
5	Screw down the slot cover ① for the expansion module	
6	Insert the module retainer ③ again	
7	Loosen the free retainer ④, place it onto the expansion module and screw it tight. With short expansion modules, you can remove the locking screw from the retainer and screw it into the hole on the opposite side.	
8	Close the device	

Notes on the allocation of resources

Only two exclusive interrupts are available for PCI /PCIe modules due to the large functional scope of the motherboard. If the new expansion modules require additional exclusive resources, you must disable certain motherboard functions. For information on allocated resources, refer to the section System resources (Page 164). Information on disabling motherboard functions is available in the BIOS Setup (Page 169)BIOS Setup menu. Information on the assignment of the PCI IRQ Line to the PCI slots is found in the "Advanced menu" or Bus board (Page 155) section.


The device supports graphics modules with expansion ROM of up to 48 K.

10.3.3 Installing the RAID card

A RAID system is used to organize several physical hard disks of a computer into one logical drive, which permits higher data availability in the event of a single hard disk failure and/or a larger data throughput than with just one physical drive.

Requirement


- A RAID module with connections for the capacitor block ① and hard disk drive ②

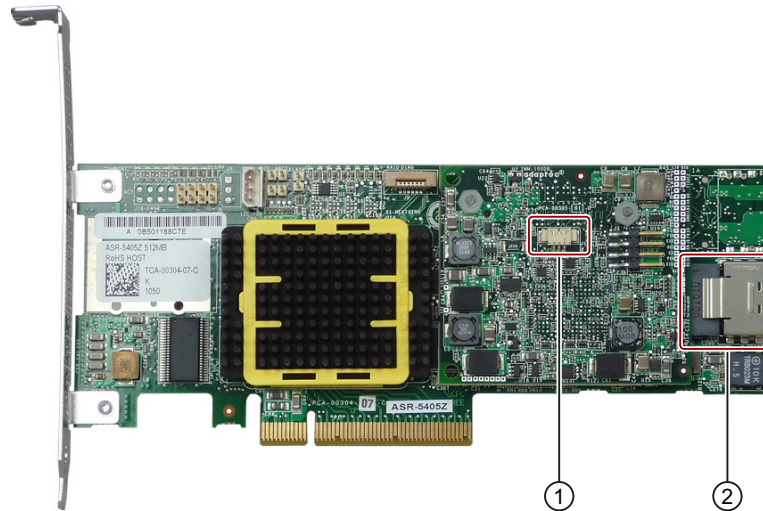

- A capacitor block of a maintenance-free cache module (ZMM)



- An adapter cable for connection of the hard disk drive ② to the RAID module

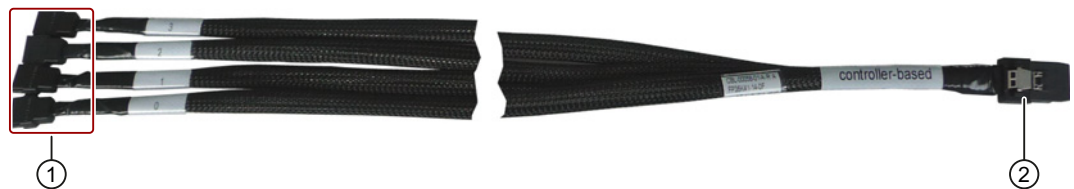

Note the numbering of the connections ①.

- SAS-LED cable (connection to SCSI-LED connection on motherboard)



Procedure

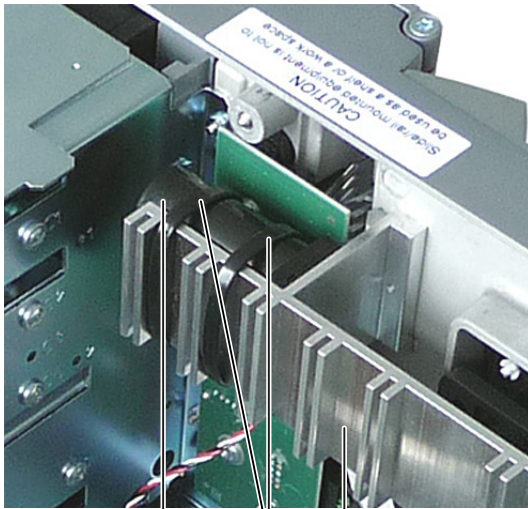
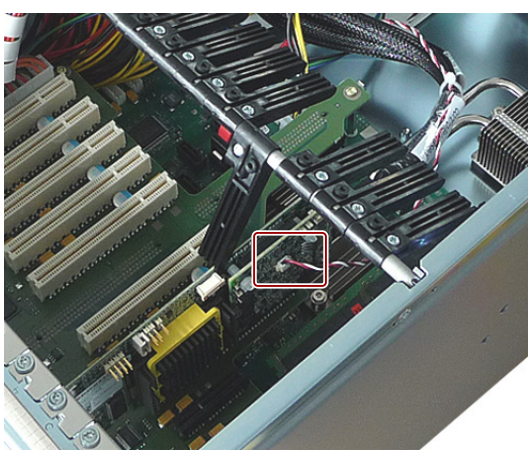
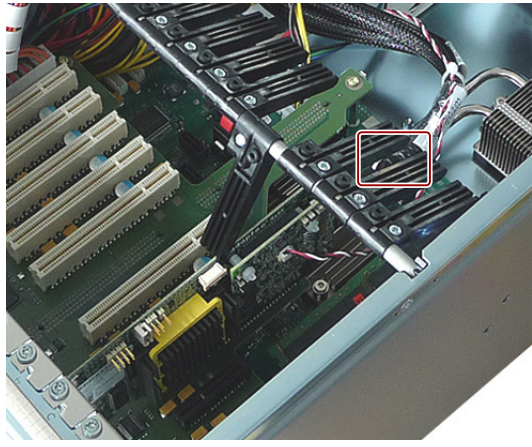
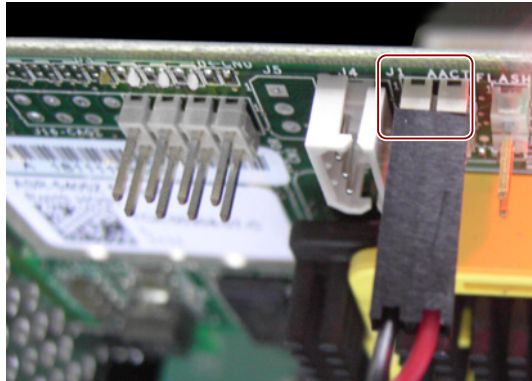
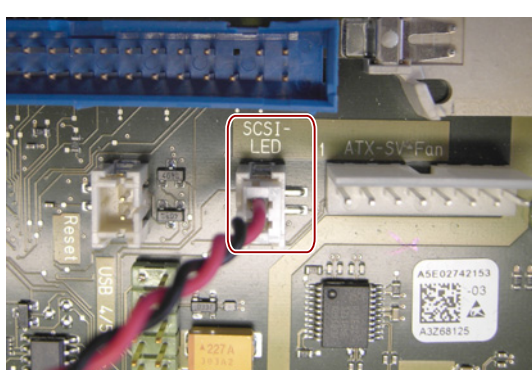
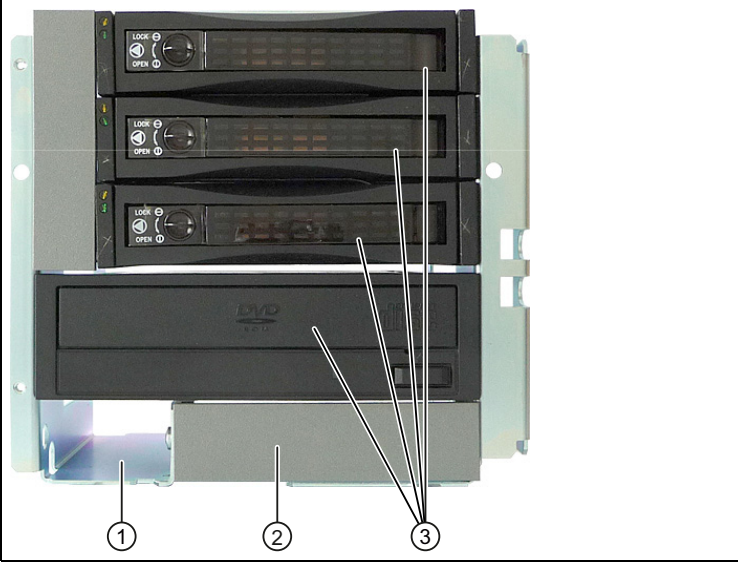
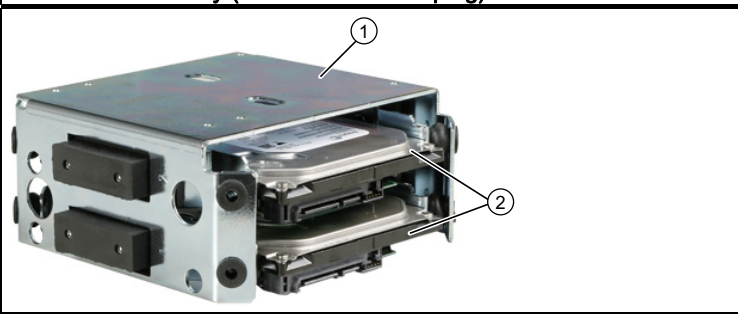
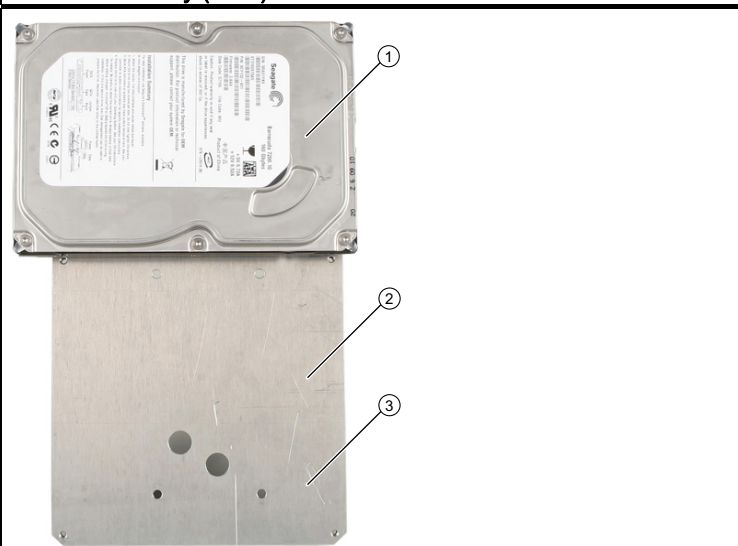
Diagram	Working step
 <p>① ② ③</p>	<p>Secure the capacitor block ① with two cable ties ② on the module bracket ③</p>
<p>–</p>	<p>Install the RAID card in slot 4.</p>
<p>–</p>	<p>Secure the RAID card with the holder.</p>
	<p>Insert the capacitor block connector at the marked position.</p>

Diagram	Working step
	<p>Insert the adapter cable at the marked position. Make sure that the connector latch engages.</p>
	<p>Install the black connector of the SAS-LED cable into the 2-pin header J1 (AACT) at the RAID module. You determine the polarity based on the cable colors: black left, red right.</p>
	<p>Install the white connector onto the motherboard at the install position "SCSI-LED". The SAS-LED cable is coded and latched. For a function check monitor the HDD LED of the operation display. It flashes when the hard disk is accessed.</p>
<p>–</p>	<p>Connect the adapter cable to the required drives.</p>

10.4 Installing drives

10.4.1 Options of installing disk drives

In the front drive bay	Item	Description
	①	Front drive bay
	②	Bay for 3.5" drives
	③	5.25" drive bay for DVD drives or removable racks.
In the rear drive bay (with vibration damping)	Item	Description
	①	Rear drive bay
	②	Two bays for hard disk drives (with shock and vibration damping)
Internal drive bay (fixed)	Item	Description
	①	Hard disk drive
	②	Second drive bay for 3.5" hard disk drives
	③	Internal drive bay (fixed) You do not need to remove the drive bay to install / remove the hard disks.


10.4.2 Installing and removing disk drives in the front drive bay

Preparations

1. Disconnect the device from the power supply and remove all connecting cables from the device
2. Open the device. See: Open the device. (Page 69)


Remove the front drive bay



How to remove the front drive bay	
1	Remove the retaining screws ① and ②.
2	Then disconnect the power supply cable and the data cable from the installed drives.
3	Lift the drive bay ③ slightly and slide it approximately 1 cm toward the power supply.
4	Take the drive bay completely out of the housing.



Installing a drive

How to install a drive	
1	Push the drive ① into the drive bay from the front.

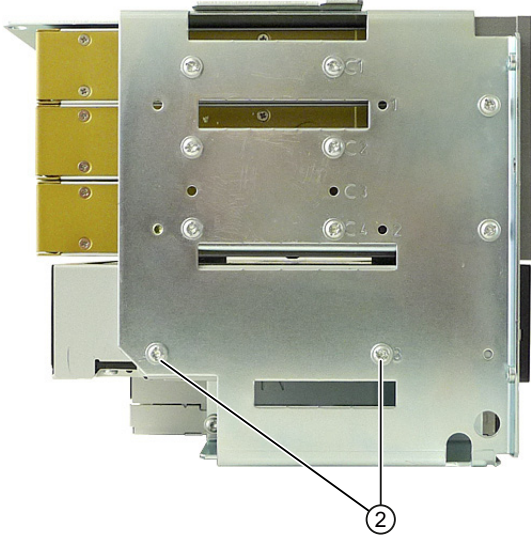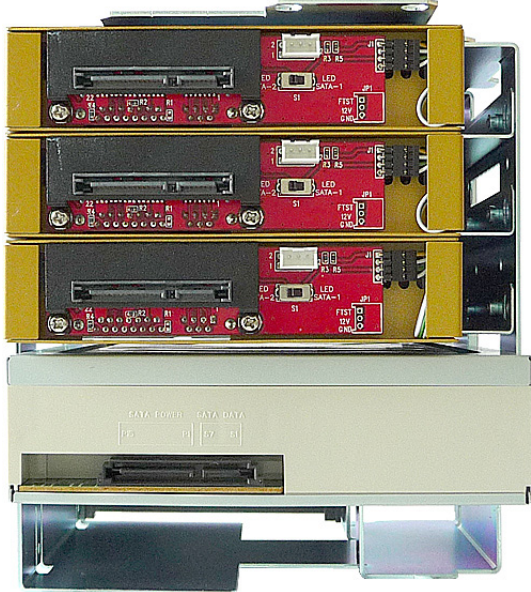

How to install a drive		
2	<p>Secure the drive with four screws ② on both sides of the drive bay.</p>	
3	<p>Connect the power supply cable and the data cables to the drive.</p>	
4	<p>Install the drive bay again.</p>	

Installing the removable rack

How to install a removable rack		
1	Fasten the 5.25" adapter ① to the removable rack.	
2	Push the removable rack with adapter into the drive bay from the rear.	
3	Fasten the removable rack with adapter on both sides to the drive bay with four screws ②.	
4	Connect the power and data cables to the drive.	
5	Install the drive bay again.	


10.4.3 Installing and removing drives in the front drive bay

Preparations

1. Disconnect the device from the power supply and remove all connecting cables from the device
2. Open the device (Page 69).


Removing internal drive bays

How to remove the internal drive bay (with vibration damping)	
1	Remove the module retainer
2	Remove the four screws ①
3	Then disconnect the power supply cable and the data cable from the installed drives.
4	Take the drive bay out of the housing.



Installing a drive

How to install a drive	
1	Push the drive into the bay from the front
2	Secure the drive with four screws to the drive bay
3	Connect the power supply cable and the data cables to the drive
4	Install the drive bay again





10.4.4 Installing / removing hard disk drives in the fixed hard disk rack

Preparations

1. Disconnect the device from the power supply and remove all connecting cables from the device
2. Open the device (Page 69).

Installing a drive

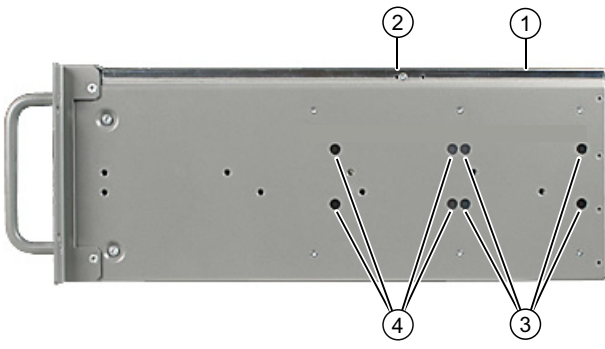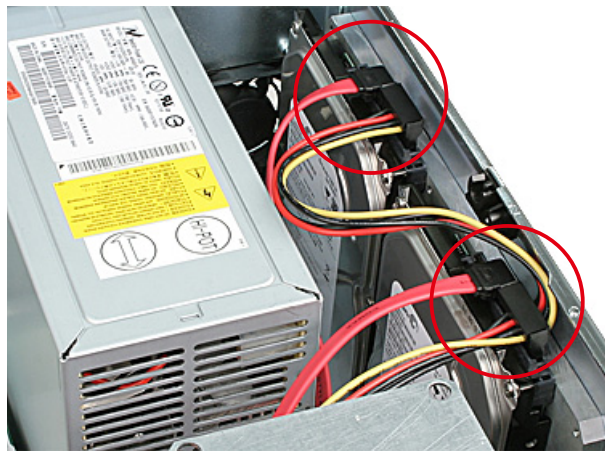How to install a drive	
1	<p>Hold the drive ① or ② onto the drive carrier plate and fasten it with four screws ③ or ④</p>
	
2	<p>Connect the power supply cable and the data cables to the drive</p>
	

Removing drives

How to remove a drive	
1	Disconnect the power cable and the data cables from the drive
2	Loosen the four screws ③ or ④ and remove the drive from the bay

Service and maintenance

11.1 Removing and installing hardware components

11.1.1 Repairs

Repairing components

Only qualified personnel are permitted to repair the device.

 WARNING
--

Unauthorized opening and improper repairs may lead to material damage and hazards to users.

- Always disconnect the power connector before you open the device.
- Install only system expansions which are designed for this computer. Installation of other expansions may damage the system or violate safety requirements and RF interference suppression regulations. Contact Technical Support or your local sales department to find out which system expansions are suitable for installation.

If you install or exchange system expansions and damage your device, the warranty becomes void.

NOTICE

Observe the ESD instructions (Page 211).
--

Disclaimer of liability

All technical data and approvals apply only to expansion units which are released by SIEMENS.

Siemens does not accept any liability for impairment of functions caused by the use of third-party devices or components.

Tools

You can perform all installation tasks on the device using TORX T10 and T20 drivers, a 4.5-mm hexagonal wrench (for the interface interlock on the rear panel) and a side cutter.

11.1.2 Preventive maintenance

To maintain high system availability, we recommend the preventative exchange of those PC components that are subject to wear. The table below indicates the intervals for this exchange.

Hard disk drive	Fan	CMOS backup battery	Air filter mat
3 years	3 years	5 years	Depending on the degree of soiling

11.1.3 Replacing filters



Preparing for filter replacement

Note

You may only use filters of the same type. Information about the original spare parts for SIMATIC PCs is available in the Internet at After sales information system from SIMATIC IPC (<http://www.siemens.com/asis>).

Filter meshes are available under the following order number: A5E01064980.

Replacing filters

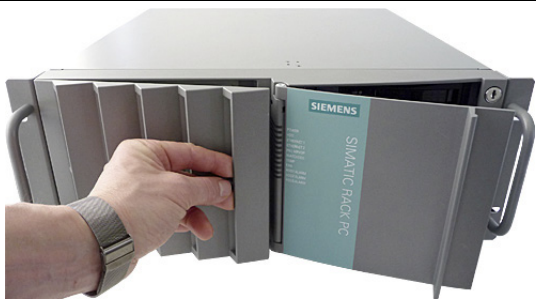How to replace the filter	
<ol style="list-style-type: none"> 1. Open the front door to about 45° to release the lock of the front panel. 2. Remove the front panel 	
<ol style="list-style-type: none"> 3. Change the filter when necessary. This is inserted loosely in the fan cover. When you insert the filter, make sure it lies uniformly in the fan cover. 	




NOTICE
<p>Used filters</p> <p>We advise that you do not insert filters again that have already been used. If you do want to refit a filter you have removed, take account of the direction in which the fan draws air into the device. Make absolutely certain that you do not fit the outer side of the filter on the inside. Generally, the outer side is clearly dirty after it has been in use for some time.</p>



11.1.4 Removing the device / drive cooling fan

Preparing for removal of the device fan

Disconnect the device from the mains.


Removing the front fan

How to remove the front fan		
1.	Open the front door to about 45° to release the lock of the front panel.	
2.	Remove the front panel and, if necessary, replace the filter. See section Replacing filters (Page 86)	
3.	Release the knurled screws of the fan holder	
4.	Take the fan holder out of the housing	


How to remove the front fan		
5.	Pull out the fan connector	
6.	Loosen all the expanding rivets and remove the fan from the fan holder	


Installing the fan

NOTICE
Always install a fan of the same type. Information about the original spare parts for SIMATIC PCs is available in the Internet at After-sales information system for SIMATIC PC/PG (http://www.siemens.com/asis).
Ensure that the arrow on the fan points away from the fan bracket. The fan blows cooling air into the enclosure.

Fan mounting position	
<p>Install the fan in reverse order. Observe the direction of the arrow on the fan; the arrow points away from the fan rack. The front fan blows cooling air into the enclosure. The picture shows the proper fan mounting position.</p>	

Replacing drive fans

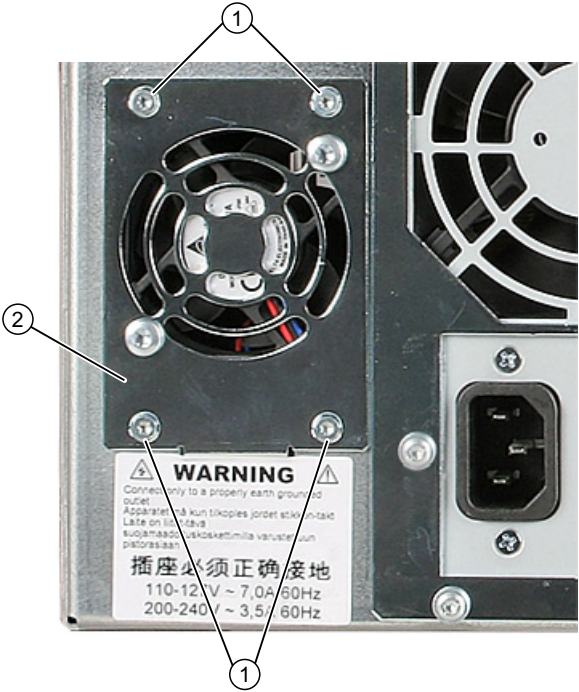How to remove the drive fan		
<p>1.</p>	<p>Screw out the four screws ① and fold the fan rack ② out of the housing</p>	
<p>2.</p>	<p>Remove the fan cable.</p>	

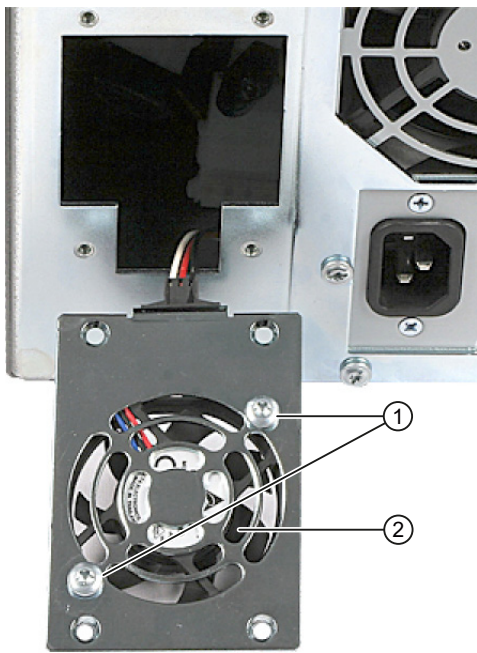How to remove the drive fan	
3.	Unscrew the two screws ① of the fan ②
	
Install the fan in reverse order. Observe the direction of the arrow on the fan; the arrow points towards the fan rack. The drive fan extracts hot air from the enclosure.	

11.1.5 Replacing the backup battery

The battery is used to back up the CMOS data for BIOS setup and the real-time clock.

Items to observe for replacement

Note

Batteries are wearing parts. Backup batteries should be replaced at intervals of 5 years in order to maintain PC functionality.

CAUTION

Risk of damage

The lithium battery may only be replaced with an identical battery or with a type recommended by the manufacturer (Order No.: A5E00047601). Information about the original spare parts for SIMATIC PCs is available in the Internet at After sales information system from SIMATIC IPC (<http://www.siemens.com/asis>).

Disposal

CAUTION

Used batteries must be disposed of in accordance with local regulations.

Preparation

Note

The configuration data of the device may be deleted when you replace the backup battery, depending on BIOS settings.



The configuration data are retained in the BIOS "Profile: User" setting; only the date and time must be set again.

A table in which you can enter your settings is available in the section BIOS Setup default settings (Page 191).

Isolate the device from mains and disconnect all connecting cables.

Replacing the battery

Proceed as follows:

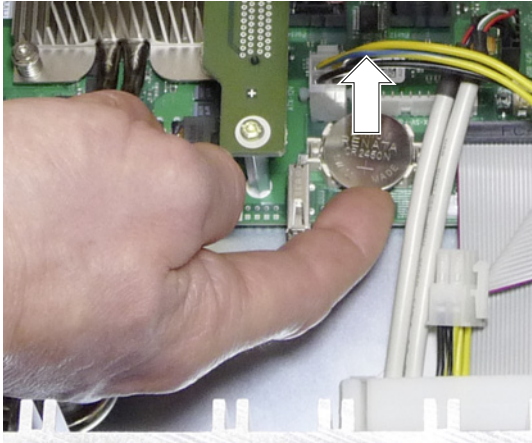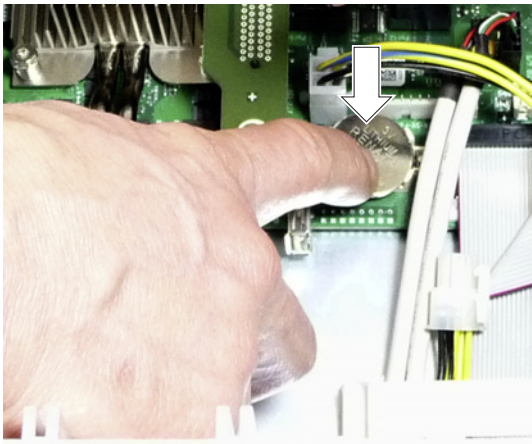How to replace the battery	
1.	Open the device (Page 69) and, if necessary, remove the expansion module. See also Installing an expansion module (Page 73).
3.	Remove the battery from socket. 
4.	Press the new battery into the socket applying slight pressure. 
5.	Close the device.

New BIOS Setup

Device configuration data may be deleted when you replace the backup battery, depending on the settings in BIOS Setup, and must be configured again in BIOS Setup.

11.1.6 Removing the AC power supply


⚠ WARNING
Only qualified personnel are permitted to replace the power supply.

Requirement

- Disconnect the device from the mains.
- Remove all connecting cables from the device.
- Open the device.
See: Open the device. (Page 69).
- Screwdriver T10

Removing the power supply

How to remove the power supply	
1.	Disconnect the cables of the drives and of the motherboard.
2.	Remove the cable ties securing the cables in the housing.
3.	Remove the retaining screws ① of the mounting plate.
4.	Pull the power supply towards the rear out of the enclosure until you can access the power cable of the bus board.
5.	Pull out the power supply cable of the bus PCB.
6.	Loosen the retaining screws ② of the power supply unit on the mounting plate.

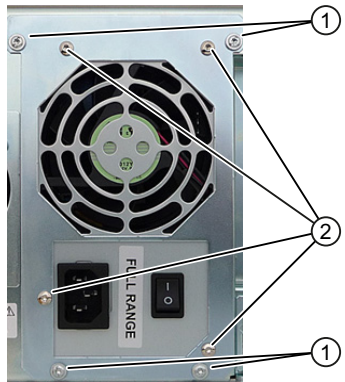

The diagram shows the rear panel of the enclosure with the power supply unit. Callout 1 points to the four screws that hold the mounting plate in place. Callout 2 points to the two screws that hold the power supply unit to the mounting plate. The power supply unit has a fan and a 'FULL RANGE' label.


11.1.7 Removing the redundant AC power supply

⚠ WARNING
Only qualified personnel are permitted to replace the power supply.

Replacing the AC module

If a module of the redundant power supply is defective, you can continue to operate the system until it can be shut down in a controlled manner.

Steps for replacing the module	
1.	Use the LEDs ① to determine which module is defective (LED at the module is off)
2.	Shut down the device so that the power supply is switched off
3.	Remove the power cable of the defective module
4.	Unscrew the cross-tip screw ② of the defective module
5.	Pull out the defective module at the handle
6.	Insert the new module and secure it with the screw
7.	Reconnect the power cable and reboot the device.



11.1.8 Replacing the redundant power supply completely

In rare cases replacing the module may not solve the problem. In this case, the redundant power supply has to be replaced.



WARNING

Only qualified personnel are allowed to replace the power supply.

Preparation

1. Isolate the device from mains and disconnect all connecting cables.
2. Open the device. See: Open the device. (Page 69)

Replacing the redundant power supply completely

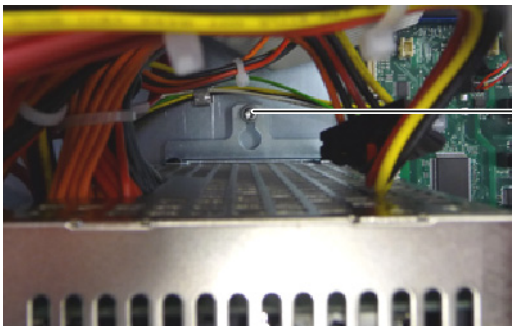How to replace the redundant power supply		
1.	Remove all the modules as described above from the power supply.	
2.	Disconnect the power cable of the drives and of the motherboard.	
3.	Remove the cable ties securing the power cables in the housing.	
4.	Loosen the Torx screw T10 ① on the inside of the device.	
5.	Remove the six Torx screws T10 ② from the rear panel.	
6.	Slide the power supply toward the front drive bay until the screw head is positioned freely in the keyhole.	
7.	Lift the power supply out of the housing.	
8.	To install the new power supply, carry out the same steps in the reverse order.	


11.1.9 Removing the bus board

Preparation

1. Isolate the device from mains and disconnect all connecting cables.
2. Open the device. See: Open the device. (Page 69).

Removing the bus board

How to remove the bus board	
1.	Remove all modules from the slots
2.	Remove the seven screws ① on the bus PCB.
3.	Withdraw all the connectors from the bus board.
4.	Pull the bus board from the motherboard

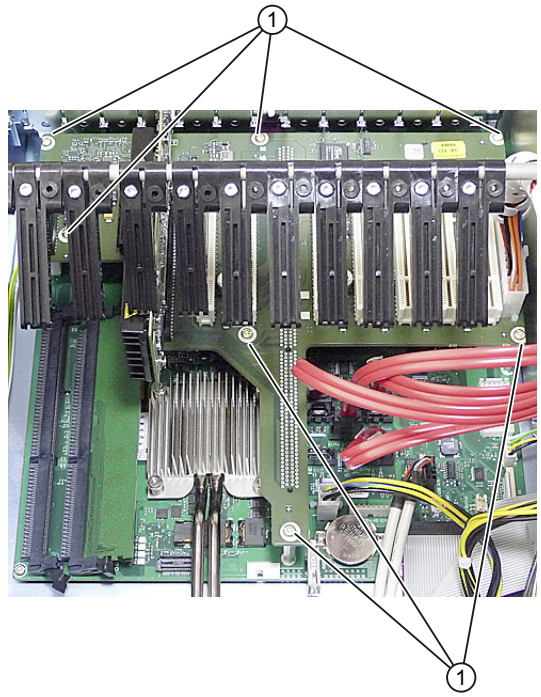


11.1.10 Removing the OP

Preparation

1. Isolate the device from mains and disconnect all connecting cables.
2. Open the device. See: Open the device. (Page 69).

Removing the operator panel

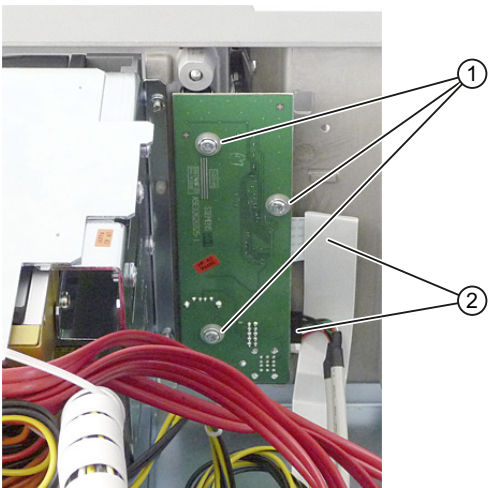How to remove the operator panel	
1.	Remove the fixing screws ① on the inside of the front panel of the device (3 x TORX)
	
2.	Disconnect the cables ② at the display module

11.1.11 Removing the motherboard

CAUTION
Only qualified personnel are permitted to replace a motherboard.


Preparation

1. Isolate the device from mains and disconnect all connecting cables.
2. Open the device. For further details, see: Open the device. (Page 69).


Removing the motherboard

How to remove the motherboard	
1.	Remove the modules from the slots
2.	Remove the bus board
3.	Disconnect all the cables from the motherboard, noting down their positions while doing so
4.	Remove the six screws on the CPU heat sink
5.	Remove the two screws and seven hexagon bolts on the motherboard

How to remove the motherboard

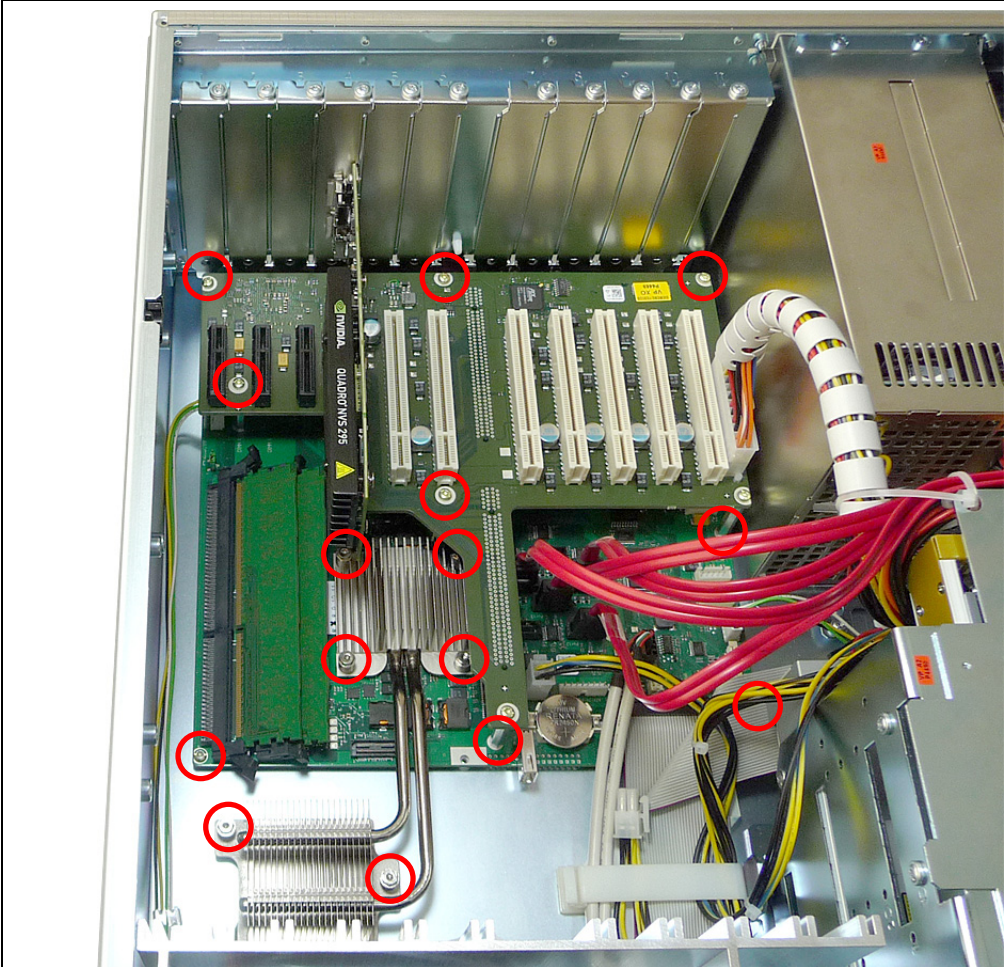

- | | |
|----|---|
| 6. | Unscrew the hexagon bolts from the interfaces |
| 7. | To install the new basic module, carry out the same steps in the reverse order. The hexagon bolt of the center hole ① has to be fastened first. |

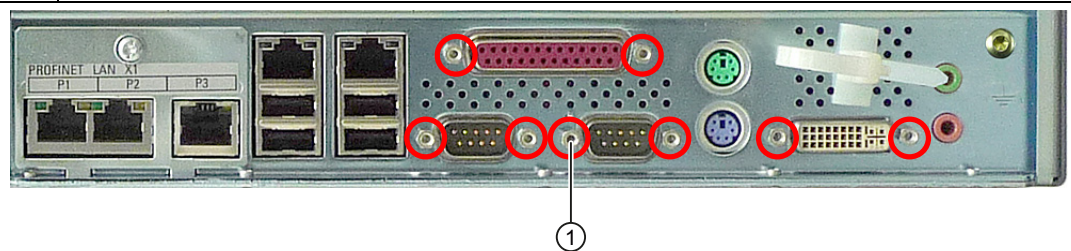

The motherboard is supplied as spare part without processor heat sink, memory modules and bus board.

11.1.12 Processor replacement

Removing the processor

Since the processor is soldered to the motherboard, it has to be replaced completely. Observe the information in the Chapter Removing the motherboard (Page 96).

11.2 Reinstalling the software

11.2.1 General installation procedure

If your software no longer functions correctly, you can reinstall it from either the Recovery DVD, the "Documentation and Drivers" DVD or the Restore DVD.

Recovery DVD:

The recovery DVD contains the installation program with tools for configuring the hard drives and installing the operating system and the languages supported by the operating system (MUI package).

The basic language of the installed operating system is English. To add other languages, install these languages from the Recovery DVD at a later time.

"Documentation and Drivers" DVD:

The "Documentation and Drivers" DVD contains the documentation and the hardware drivers.

Restore DVD:

The Restore DVD is included in the product package when you have ordered a device with operating system. The DVD contains a hard disk image file with the original software package: Operating system with installed hardware drivers and monitoring software, e.g. DiagBase.

Note

Place the data medium from which the operating system is to be booted later at the first position in the boot folder. Make this setting in the "Boot" menu of BIOS Setup.

11.2.2 Restoring the delivery state

You can restore the original factory software using the Restore DVD. The DVD contains the necessary images and tools for transferring the factory software to the drive of your device. Restoration of the entire C drives: (system) and D: or only drive C: is possible. This allows you to retain any user data on drive D:.

Retrieving authorization or license

- Check whether you can retrieve your authorization or license key from the disk and perform this procedure if possible.
- If backup is not possible, please contact Customer Support. There you can obtain information necessary for software authorization.

CAUTION

If "Restore system partition only" is set all data on drive C: (system partition) will be deleted. All data, user settings and all authorizations or license keys on drive C: are lost! All data on drive C: will be completely deleted, reformatted and overwritten with the original factory software.

If "Restore entire hard disk" is set ALL data, user settings, authorizations or license keys will be lost on the entire drive.

Procedure

1. Insert the Restore DVD into the DVD drive.
2. Restart the device with the on/off button.
3. Press the <F12> key when the following BIOS message appears.

Press <F2> to go to Setup Utility

Press <F12> to go to Boot Manager

The "Boot Menu" is displayed when initialization is completed.

4. Select the optical drive with your cursor keys which is identified with a "P" in front of the SATA port number.

Example:

P3 - OPTIARC DVD-ROM DDU1681S.

5. Follow the on-screen instructions.

CAUTION

All existing data, programs, user settings, authorizations and license keys on the drives will be deleted and are thereby lost.

11.2.3 Installing Windows

11.2.3.1 Installing Windows XP

Note

Specific information on the use of the Windows XP Professional operating system is available in the following manual (not included in the product package):

Microsoft Windows XP Professional, Technical Reference (MSPress No. 934)

Requirement

You need the recovery DVD for the Windows XP operating system. It is included in the product package.

If you use a data carrier controller that is unknown to the operating system, for example, RAID, AHCI or SAS controller, copy the corresponding controller driver to a 3.5 inch floppy disk and keep this driver disk at hand. If your device does not have 3.5 inch floppy disk drive, connect a USB floppy disk drive. The controller driver is required during installation.

You can create a driver disk for the onboard RAID, the AHCI or the SAS RAID controller with the "Documentation and Drivers" DVD. Additional information is available in the section Installing drivers and software (Page 104).

Procedure

1. Insert the Recovery DVD into the DVD drive.
2. Restart the device with the on/off button.
3. Press the <F12> key when the following BIOS message appears.

Press F2 to go to Setup Utility

Press F12 to go to Boot Manager

After initialization, a boot menu is displayed.

4. In the boot menu, select the optical drive using the cursor keys. It is identified by a "P" in front of the SATA port number.

Example:

P3 - OPTIARC DVD-ROM DDU1681S

5. Confirm the selection by pressing ENTER.

6. **Immediately** press any key when you see the following prompt to install the operating system from the Recovery DVD.

Press any key to boot from CD ..

The Windows XP installation program (blue screen) appears after a few seconds.

7. Follow the instructions of the Windows XP installation program. You can find additional information on this in the section: Windows XP installation program

Windows XP installation program

The language of the installation program and the Windows XP Professional operating system is preset to English. You can change the language of Windows XP Professional once you have installed it. You can find information on this in section: Setting up the language selection by means of the Multilanguage User Interface (MUI) (Page 102).

Setting up partitions and integrating data carrier controllers unknown to the operating system

During the installation, you can create partitions and integrate data carrier controllers needed for the installation which are unknown to the operating system. Follow the instructions of the Windows XP installation program for this purpose. More information on integrating data carrier controllers is available in the section: Information for systems with RAID, AHCI or SAS controllers (optional).

The recommended minimum size of the partition on which you want to install Windows XP varies depending on how much work memory and which additional software you want to use. Information on partitioning of the data carrier in the delivery state is provided in the following table.

Partitions in the delivery state for Windows XP

Partition	Name	Size	File system
First	SYSTEM	25 GB	NTFS not compressed
Second	DATA	Remainder	NTFS not compressed

Procedure for systems with RAID, AHCI or SAS controllers (optional)

Data carrier controllers that are unknown to the operating system must be made known to the operating system during installation. Proceed as follows:

1. Insert the 3.5 inch floppy disk with the controller driver into the 3.5 inch floppy disk drive of the device.

If the device does not have a 3.5 inch floppy disk drive, connect a USB floppy drive and insert the disk into this drive.

2. Start the Windows installation process as described above.

3. To start installation of the data carrier controller, press the <F6> key at the start of the Windows setup program (blue screen).
After a few seconds, a dialog for installation of the data carrier controllers appears.
4. Select the corresponding driver on the driver disk.

Note

Select the following drivers for the onboard RAID or AHCI controller:

- For AHCI controller: "Intel(R) 5 Series 6 Port SATA AHCI Controller"
 - For RAID controller: "Intel(R) ICH8M-E/ICH9M-E/5 Series SATA RAID Controller"
-

Note

Select the following drivers for the SAS controller:

- For AHCI controller: "Intel(R) 5 Series 6 Port SATA AHCI Controller"
This driver is required for the Recovery DVD access.
 - For SAS RAID controller: "Adaptec SAS/SATA-II RAID Controller"
-

11.2.3.2 Installation of Windows 7, Windows Server 2008 or Windows Server 2008 R2

See also

Setting up the language selection by means of the Multilanguage User Interface (MUI)
(Page 102)

11.2.4 Setting up the language selection by means of the Multilanguage User Interface (MUI)

You can set the display of menus, dialogs or other information, such as date and time, to a different language. For this purpose, you can either select one of the preinstalled languages or install a new language package.

The following command sequences are described in English. Depending on the default setting, they can be displayed in another language.

Setting up the language selection for Windows XP Professional

Note

Specific information for setting up the language for Windows XP Professional is available in the following manual (not included in the product package):

- "Microsoft Windows XP Professional, Technical Reference" (MSPress No 934)
-

Changing the settings for language, region and formats of a registered user account

1. Choose:
"Start > Control Panel > Regional and Language"
2. You can make the desired changes in the "Regional Settings", "Languages" and "Advanced" tabs.

Installing new language packages

1. Start the "MUISETUP.EXE" program in the "MUI" folder from the Recovery DVD.
All languages that can be installed are displayed.

Setting up the language selection for Windows 7, Windows Server 2008 and Windows Server 2008 R2

Note

Specific information for setting up the language selection for Windows operating systems is available in the following manuals (not included in the product package):

- Windows 7 Technical Reference (MS Press No. 5913)
 - Windows Server 2008 Technical Reference (MS Press No. 5919)
-

Changing the settings for language, region and formats of a registered user account

1. Choose:
"Start > Control Panel > Clock, Language, and Region > Regional and Language Options"
2. You can make the desired changes in the "Formats" and "Location und Keyboards and Languages" tabs.

Changing the settings for language, region and formats of the system account and the standard user account

You can change the settings for language, region and formats of the system account (for example, the language in the user login dialog) and the settings of the standard user account (standard setting for new users). The settings of the registered user are copied to the system account and the standard user account for this purpose.

1. Choose:
"Start > Control Panel > Clock, Language, and Region > Regional and Language Options"
2. You can make the required changes in the "Administrative" tab. You copy the settings by clicking the respective button.

Installing new language packages

Some language packages are available on the Recovery DVD in the "Languagepacks" folder.

1. Choose:
"Start > Control Panel > Clock, Language, and Region > Regional and Language Options"
2. Select the "Keyboards and Languages" tab.
3. Click the "Install/uninstall languages" button and make the required changes.

11.2.5 Installing drivers and software

NOTICE

In the case of multilingual operating systems (MUI versions), you have to set the regional settings for menus and dialogs and the default language to English (US) before you install new drivers or operating system updates.

Install the drivers and software from the included "Documentation and Drivers" DVD.
Procedure:

1. Insert the DVD.
2. Run *START*.
3. Select *Drivers & Updates* from the index.
4. Select the device and operating system.
5. Select the desired driver.
6. Open the folder with the driver data by clicking on the link next to "Driverpath".
7. Start the setup program in this folder.

NOTICE

During the installation of a new Windows operating system, the chipset driver, if required, must be installed before all other drivers.

11.2.6 Installing the Intel RAID controller software

The software installation of the onboard RAID controller takes place with its driver installation. Additional information on this is available in the section "Installation of drivers and software".

11.2.7 Installing the optional burner or DVD software

Information about installation of the burner / DVD software is available on the supplied CD.

11.2.8 Update installation

11.2.8.1 Updating the operating system

Windows

The latest updates for the Windows operating system are available in the Internet at Microsoft (<http://www.microsoft.com>).

NOTICE

Before you install new drivers or operating system updates for Windows MUI versions, set the default language to US English in the regional settings for menus and dialogs.

Other operating systems

Contact the corresponding manufacturer.

11.2.8.2 Installing or updating application programs and drivers

Install and connect an appropriate drive in order to install software from a CD and / or floppy disk in Windows.

The USB floppy disk and CD-ROM drivers are included in Windows and do not have to be installed from other sources.

For information about installation of SIMATIC software packages, refer to the corresponding manufacturer documentation.

Contact the manufacturer to obtain updates of drivers and application programs you purchased from third-party vendors.

NOTICE

Before you install new drivers or operating system updates for Windows versions, set the default language to US English in the regional settings for menus and dialogs.

11.2.9 Data backup / subsequent modification of partitions

11.2.9.1 Hardware supported

Note

Older versions of the SIMATIC IPC Image Creators do not support the hardware of the device.

Support is available as of SIMATIC IPC Image & Partition Creator Version 3.2.

In the case of device equipment with hardware RAID, the device driver has to be reloaded. A new function is available in the SIMATIC IPC Image & Partition Creator to this purpose.

For information on SIMATIC IPC Image & Partition Creator, refer to the corresponding product documentation.

11.2.9.2 Creating an image

To backup your data under Windows, we recommend that you use the "SIMATIC IPC Image & Partition Creator" software tool. This tool allow easy backup and fast restoration of the full contents of Compact Flash cards, hard disks and individual partitions (images).

"SIMATIC IPC Image & Partition Creator" supports burning to DVD media.

The software can be ordered from the SIEMENS online ordering system. For detailed information about "SIMATIC IPC Image & Partition Creator", please refer to the corresponding product documentation.

11.2.9.3 Modifying the partitions

In order to modify partitions, we recommend using the software tool "SIMATIC IPC Image & Partition Creator". The software can be ordered from the SIEMENS online ordering system.

Detailed information about using this tool is available in the manufacturer documentation of the "SIMATIC IPC Image & Partition Creator".

11.2.10 CP 1616 onboard

NDIS device driver

Read the information in description provided by Device_Driver_CP16xx.pdf on the supplied "Documentation and Drivers" CD.

PROFINET IO

Read the information regarding the SIMATIC devices and SIMATIC NET documentation listed in the "Integration" section.

11.3 BIOS update

Writing down the BIOS Setup settings

Before you update your BIOS Setup settings, you should write down the values so that you can restore them after the BIOS update, if necessary.

Updating the BIOS default values

It is imperative that you update the BIOS default values after a BIOS update:

1. Keep the F2 key pressed during the device start until the setup menu is displayed on the screen.
2. Load the defaults using F9.
3. Adapt the BIOS Setup settings again, if necessary.

Reboots

Several reboots can be carried out after a BIOS update. These reboots are initiated by the Management Engine (ME). The reboots are required by the ME to adapt itself to the changes in the BIOS update.


11.4 BIOS Recovery

The "BIOS-Recovery" function is used to reinstall the device when a BIOS is unusable.

The recovery resets all the BIOS setup settings to the default values. After successful recovery, you will need to make these settings again if you require any customer-specific values.

Procedure

1. Switch off the device.
2. Remove the device cover.
3. Install a jumper at the marked location on the "Recovery" interface.

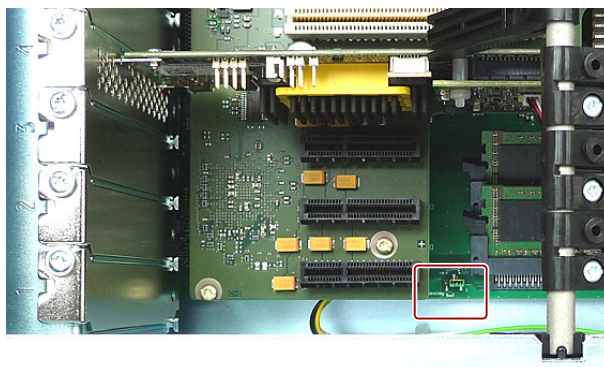

4. Close the device cover.
5. Place the Siemens BIOS Update USB stick into an USB slot of the device front.
6. Connect the power supply and switch on the device.

Recovery is executed automatically and cannot be interrupted or operated. The recovery progress will be displayed on the screen.

7. Complete the recovery:
 - Switch off the device.
 - Remove the device cover, plug the jumper ① to "Park position" and close the device cover.
 - Remove the USB stick.
 - Switch on the device.
 - Call up the BIOS Setup by pressing the F2 key. If necessary, reset the Setup values.

Alarm, error, and system messages

12.1 Boot error messages

BIOS first performs a **Power On Self Test (POST)** within the boot routine to verify proper operation of certain functional units of the PC. The boot sequence is interrupted immediately if a fatal error is detected.

BIOS initializes and tests further functional units if the POST does not return any errors. In this startup phase, the graphics controller is initialized and any error messages are output to the screen.

The error messages output by system BIOS are listed below. For information on error messages output by the operating system or application programs, refer to the corresponding manuals.

On-screen error messages

On-screen error message	Meaning / tip
Address conflict	Plug-and-play problem. Contact your Technical Support.
Combination not supported	Plug-and-play problem. Contact your Technical Support.
IO device IRQ conflict	Plug-and-play problem. Contact your Technical Support.
Invalid System Configuration Data	Plug-and-play problem <ul style="list-style-type: none"> Set the RESET CONFIGURATION DATA option in the "Advanced" menu of Setup. Contact your Technical Support.
Allocation Error for ...	Plug and Play problem <ul style="list-style-type: none"> Undo the last hardware change. Contact your Technical Support.
System battery is dead. Replace and run SETUP	The battery on the CPU module is defective or dead. Contact your technical support team.
System CMOS checksum bad Run SETUP	Call SETUP, adjust and then save the settings. Contact Technical Support if this message persists in further retries to startup the system.
Failure Fixed Disk	HDD access error. Check the configuration in SETUP. Contact Technical Support.
Keyboard error	Check whether the keyboard is properly connected.
Key seizure	Check whether a key on the keyboard has seized.
System RAM Failed at offset:	Memory error. Contact Technical Support.

12.2 BIOS beep codes

On-screen error message	Meaning / tip
Error - CMOS battery failed	The battery on the CPU module is defective or dead. Contact your technical support team.
Error - SMART failure detected on HDD	Hard disk fault: A fault threshold specified by the manufacturer has been exceeded. Operation of the hard disk is unreliable. The hard disk has to be replaced. Contact your Technical Support.
Error - Keyboard error	Check whether the keyboard is properly connected.
No bootable device -- Please restart system	Possible causes: <ul style="list-style-type: none"> • No operating system installed • Wrong drive addressed (disk in drive A/B) • Incorrect active boot partition • Incorrect drive entries in SETUP • HDD not connected / defective
Error - Realtime clock has lost power	Clock chip error. Contact Technical Support.
Error - Keyboard controller error	Keyboard error. Contact Technical Support.
Screen remains dark - cursor flashes at top left	A data carrier is inserted in the ODD drive. In this case it can take several minutes until the BIOS power up is continued.

12.2 BIOS beep codes

The following section lists the POST codes relevant to users in the sequence in which they occur. Contact Customer Support (http://www.siemens.de/automation/csi_en_WW) for information on all other POST codes.

Display (hex)	Meaning	Description		Remedy
4DH	DXE_MTC_INIT	MTC Initial	MonoTonicCounter initialization	Service case
4EH	DXE_CPU_INIT	CPU Middle Initial	CPU initialization	Replacing a basic module
4FH	DXE_MP_CPU_INIT	Multi-processor Middle Initial	Multiprocessor initialization	Replacing a basic module
50H	DXE_SMBUS_INIT	SMBUS Driver Initial	SMBUS driver initialization	Service case
51H	DXE_SMART_TIMER_INIT	8259 Initial	SMART Timer initialization	Service case
52H	DXE_PCRTC_INIT	RTC Initial	RTC initialization	Service case
53H	DXE_SATA_INIT	SATA Controller early initial	Advance initialization of the SATA Controller	Service case
54H	DXE_SMM_CONTROLLER_INIT	Setup SMM Control service, DXE_SMMController_INIT	SSM Control service	Service case

Display (hex)	Meaning	Description		Remedy
55H	DXE_LEGACY_INTERRUPT	Setup Legacy Interrupt service, DXE_LegacyInterrupt	Setup Legacy Interrupt service	Service case
01H	SEC_SYSTEM_POWER_ON	CPU power on and switch to Protected mode	Switch to Protected Mode	Service case
02H	SEC_BEFORE_MICROCODE_PATCH	Patching CPU microcode	Load CPU Microcode	Service case
03H	SEC_AFTER_MICROCODE_PATCH	Setup Cache as RAM	Set up cache as RAM	Service case
04H	SEC_ACCESS_CSR	PCIE MMIO Base Address initial	Initialize PCIE	Service case
05H	SEC_GENERIC_MSRRINIT	CPU Generic MSR initial	Initialize CPU MS (Machine Status) Register	Service case
06H	SEC_CPU_SPEEDCFG	Setup CPU speed	Specify CPU speed	Service case
07H	SEC_SETUP_CAR_OK	Cache as RAM test	Carry out RAM Test on cache	Replacing a basic module
08H	SEC_FORCE_MAX_RATIO	Tune CPU frequency ratio to maximum level	Setting CPU frequency	Service case
09H	SEC_GO_TO_SECSTARTUP	Setup BIOS ROM cache	Set up BIOS ROM cache	Service case
0AH	SEC_GO_TO_PEICORE	Enter Boot Firmware Volume	Calling up the boot firmware memory area	Service case
70H	PEI_SIO_INIT	Super I/O initial	Initialization of the Super I/O	Service case
71H	PEI_CPU_REG_INIT	CPU Early Initial	Initialize CPU Register	Service case
72H	PEI_CPU_AP_INIT	Multi-processor Early initial	Multi processor initialization	Service case
73H	PEI_CPU_HT_RESET	HyperTransport initial	Initialize Hyper Transport functionality	Service case
74H	PEI_PCIE_MMIO_INIT	PCIE MMIO BAR Initial	Initialize PCIE Register	Service case
75H	PEI_NB_REG_INIT	North Bridge Early Initial	Initialization of the North bridge	Service case
76H	PEI_SB_REG_INIT	South Bridge Early Initial	Initialization of the South bridge	Service case
77H	PEI_PCIE_TRAINING	PCIE Training	Training phase of the PCIE device	Service case
79H	PEI_SMBUS_INIT	SMBUS Early Initial	Initialization of the SM Bus	Service case

12.2 BIOS beep codes

Display (hex)	Meaning	Description		Remedy
41H	DXE_SB_SPI_INIT	South bridge SPI initial	Initialization of the Serial Peripheral Interface in the South Bridge	Service case
42H	DXE_CF9_RESET	Setup Reset service, DXE_CF9Reset	Setup Reset service	Service case
43H	DXE_SB_SERIAL_GPIO_INIT	South bridge Serial GPIO initial, DXE_SB_Serial GPIO_INIT	Initializations of the serial GPIO	Service case
44H	DXE_SMMACCESS	Setup SMM ACCESS service	Setup SMM access service	Service case
45H	DXE_NB_INIT	North bridge Middle initial	Initialization of the North Bridge	Service case
46H	DXE_SIO_INIT	Super I/O DXE initial	Initialization of the Super IO	Service case
47H	DXE_LEGACY_REGION	Setup Legacy Region service, DXE_LegacyRegion	Setup service Legacy region	Service case
48H	DXE_SB_INIT	South Bridge Middle Initial	Initialization of the South Bridge	Service case
49H	DXE_IDENTIFY_FLASH_DEVICE	Identify Flash device	Identify FLASH type	Service case
4AH	DXE_FTW_INIT	Fault Tolerant Write verification	Checking of the write fault tolerance	Service case
4BH	DXE_VARIABLE_INIT	Variable Service Initial	Initialization of the variable service	Service case
4CH	DXE_VARIABLE_INIT_FAIL	Fail to initial Variable Service	Failure to initialize the variable service	Service case
26H	BDS_CONNECT_LEGACY_ROM	Dispatch option ROMs	Callup of the Legacy Option ROMs	Service case
27H	BDS_ENUMERATE_ALL_BOOT_OPTION	Get boot device information	Determine the Boot Device information	Service case
28H	BDS_END_OF_BOOT_SELECTION	End of boot selection	Boot selection terminated	Service case
29H	BDS_ENTER_SETUP	Enter Setup Menu	Callup into SETUP	Service case
2AH	BDS_ENTER_BOOT_MANAGER	Enter Boot manager	Callup Boot Manager	Service case
2BH	BDS_BOOT_DEVICE_SELECT	Try to boot system to OS	Booting of the OS	Service case
2CH	BDS_EFI64_SHADOW_ALL_LEGACY_ROM	Shadow Misc Option ROM	Copying the Legacy Option ROMs into RAM	Service case

Display (hex)	Meaning	Description		Remedy
2DH	BDS_ACPI_S3SAVE	Save S3 resume required data in RAM	Make available for operating state S3 RAM	Service case
2EH	BDS_READY_TO_BOOT_EVENT	Last Chipset initial before boot to OS	Initialization of the last chipset before the OS Boot	Service case
2FH	BDS_GO_LEGACY_BOOT	Start to boot Legacy OS	Boot Legacy OS	Service case
30H	BDS_GO_UEFI_BOOT	Start to boot UEFI OS	Boot UEFI OS	Service case
31H	BDS_LEGACY16_PREPARE_TO_BOOT	Prepare to Boot to Legacy OS	Preparation for booting of Legacy OS	Service case
32H	BDS_EXIT_BOOT_SERVICES	Send END of POST Message to ME via HECI	Terminate Boot Service	Service case
33H	BDS_LEGACY_BOOT_EVENT	Last Chipset initial before boot to Legacy OS.	Initialization of the last chipset before the Legacy OS Boot	Service case
34H	BDS_ENTER_LEGACY_16_BOOT	Ready to Boot Legacy OS.	Callup to boot the Legacy OS	Service case
35H	BDS_RECOVERY_START_FLASH	Fast recovery start flash	Start the BIOS Recovery function	Service case
F9H	POST_BDS_NO_BOOT_DEVICE	No Boot Device, PostBDS_NO_BOOT_DEVICE	No BOOT device found	Service case
FBH	POST_BDS_START_IMAGE	UEFI Boot Start Image, PostBDS_START_IMAGE	Booting of an UEFI image	Service case
FDH	POST_BDS_ENTER_INT19	Legacy 16 boot entry	Start Legacy 16 boot	Service case
FEH	POST_BDS_JUMP_BOOT_SECTOR	Try to Boot with INT 19	Boot with INT 19	Service case
E5H	ASL_WAKEUP_S5	System wakeup from S5	Reboot from operating state S5	Service case
10H	BDS_ENTER_BDS	Enter BDS entry	Phase Boot Device Selection	Service case
11H	BDS_INSTALL_HOTKEY	Install Hotkey service	Installation of the Hotkey service	Service case
12H	BDS_ASF_INIT	ASF Initial	Initialize Alert Standard Format	Service case
13H	BDS_PCI_ENUMERATION_START	PCI enumeration	Enumerate PCI bus	Service case

12.2 BIOS beep codes

Display (hex)	Meaning	Description		Remedy
14H	BDS_BEFORE_PCIIIO_INSTALL	PCI resource assign complete	Assign PCI resources	Run a test by disabling the hardware components in SETUP or by removing the expansion modules installed on the bus module.
15H	BDS_PCI_ENUMERATION_END	PCI enumeration complete	PCI enumeration completed	Service case
16H	BDS_CONNECT_CONSOLE_IN	Keyboard Controller, Keyboard and Mouse initial	Initialization of keyboard and mouse	Run a test by replacing the keyboard/mouse
17H	BDS_CONNECT_CONSOLE_OUT	Video device initial	Initialize graphic connection	Service case
18H	BDS_CONNECT_STD_ERR	Error report device initial	Initialize default error output	Service case
19H	BDS_CONNECT_USB_HC	USB host controller initial	Initialize USB host controller	Service case
1AH	BDS_CONNECT_USB_BUS	USB BUS driver initial	Initialize USB bus driver	Service case
1BH	BDS_CONNECT_USB_DEVICE	USB device driver initial	Initialize USB device driver	Service case
1CH	BDS_NO_CONSOLE_ACTION	Console device initial fail	Initialization of the console faulty	Service case
1DH	BDS_DISPLAY_LOGO_SYSTEM_INFO	Display logo or system information	Display logo or system information	Service case
1EH	BDS_START_IDE_CONTROLLER	IDE controller initial	Initialization of the IDE controller	Service case
1FH	BDS_START_SATA_CONTROLLER	SATA controller initial	Initialization of the SATA controller	Service case
20H	BDS_START_ISA_ACPI_CONTROLLER	SIO controller initial	Initialization of the Super IO	Service case
21H	BDS_START_ISA_BUS	ISA BUS driver initial	Initialization of the ISA bus driver	Service case
22H	BDS_START_ISA_FDD	Floppy device initial	Initialization of the floppy connection	Service case
23H	BDS_START_ISA_SERIAL	Serial device initial	Initialization of the serial connection	Service case
24H	BDS_START_IDE_BUS	IDE device initial	Initialization of the IDE connection	Service case
25H	BDS_START_AHCI_BUS	AHCI device initial	Initialization of the AHCI connection	Service case

Display (hex)	Meaning	Description		Remedy
56H	DXE_RELOCATE_SMBASE	Relocate SMM BASE	Reassign SMM base	Service case
57H	DXE_FIRST_SMI	SMI test	SMI test	Service case
58H	DXE_VTD_INIT	VTD Initial	Initialize I/O virtualization (VTD)	Service case
59H	DXE_BEFORE_CSM16_INIT	Legacy BIOS initial	Legacy BIOS initialization	Service case
5AH	DXE_AFTER_CSM16_INIT	Legacy interrupt function initial	Legacy interrupts initialization	Service case
5BH	DXE_LOAD_ACPI_TABLE	ACPI Table Initial	ACPI table initialization	Service case
5CH	DXE_SB_DISPATCH	Setup SB SMM Dispatcher service, DXE_SB_Dispatch	SMM dispatcher service	Service case
5DH	DXE_SB_IOTRAP_INIT	Setup SB IOTRAP Service	SouthBridge IOTRAP service	Service case
5EH	DXE_SUBCLASS_DRIVER	Build AMT Table	Initialization of the AMT (Active Management Technology) table	Service case
5FH	DXE_PPM_INIT	PPM Initial	Initialization of the Processor Power Management	Service case
60H	DXE_HECIDRV_INIT	HECIDRV Initial	Initialization of the Host Embedded Controller Interface	Service case
61H	DXE_VARIABLE_RECLAIM	Variable store garbage collection and reclaim operation	Loading of the variable memory	Service case
7AH	PEI_PROGRAM_CLOCK_GEN	Clock Generator Initial	Initializations of the clock generator	Service case
7BH	PEI_IGD_EARLY_INITIAL	Internal Graphic device early initial, PEI_IGDOPRegion	First initialization of the graphic connection	Service case
7CH	PEI_HECI_INIT	HECI Initial	Initialization of the Host Embedded Controller Interface	Service case
7DH	PEI_WATCHDOG_INIT	Watchdog timer initial	Initialization of the watchdog timer	Service case
7EH	PEI_MEMORY_INIT	Memory Initial for Normal boot	Memory initialization during the PEI phase	Replace the memory modules

12.2 BIOS beep codes

Display (hex)	Meaning	Description		Remedy
7FH	PEI_MEMORY_INIT_FOR_CRISIS	Memory Initial for Crisis Recovery	Memory initialization for BIOS recovery	Replace the memory modules
80H	PEI_MEMORY_INSTALL	Simple Memory test	Memory test	Replace the memory modules
81H	PEI_TXTPEI	TXT function early initial	Initialization of the Trusted Execution Technology	Service case
82H	PEI_SWITCH_STACK	Start to use Memory	Start the memory use	Service case
83H	PEI_MEMORY_CALLBACK	Set cache for physical memory	Use cache as a physical memory	Service case
84H	PEI_ENTER_RECOVERY_MODE	Recovery device initial	Initialize the device for BIOS recovery	Service case
85H	PEI_RECOVERY_MEDIA_FOUND	Found Recovery image	BIOS Recovery image found	Service case
86H	PEI_RECOVERY_MEDIA_NOT_FOUND	Recovery image not found	BIOS Recovery image not found	Check whether the BIOS Recovery image exists on the recovery medium (e.g. USB stick).
87H	PEI_RECOVERY_LOAD_FILE_DONE	Load Recovery Image complete	Loading of BIOS Recovery image completed	Service case
88H	PEI_RECOVERY_START_FLASH	Start Flash BIOS with Recovery image	Starting of flashing of BIOS Recovery image	Service case
89H	PEI_ENTER_DXEIPL	Loading BIOS image to RAM	Copy BIOS image to the RAM	Service case
8AH	PEI_FINDING_DXE_CORE	Loading DXE core	Loading DXE (Driver Execution Environment) program	Service case
8BH	PEI_GO_TO_DXE_CORE	Enter DXE core	Start DXE program	Service case

Special codes

The BIOS does not generate any beep codes.

Troubleshooting/FAQs

13.1 General troubleshooting

This section provides you with tips on how to locate and/or troubleshoot problems which occur.

Problem	Possible cause	Possible remedy
The device is not operational	No power supply	<ul style="list-style-type: none"> Check the power supply, the network cable and the power plug. Check if the On/Off switch is in the correct position.
	Device is being operated outside the specified ambient conditions	<ul style="list-style-type: none"> Check the ambient conditions. After transport in cold weather, wait approximately 12 hours before switching on the device.
The monitor remains dark	The monitor is switched off.	Switch on the monitor.
	The monitor is in "power save" mode	Press any key on the keyboard.
	The brightness button has been set to dark	Increase brightness using the brightness button. For detailed information, refer to the monitor operating instructions.
	The power cord or the monitor cable is not connected.	<ul style="list-style-type: none"> Check whether the power cord has been properly connected to the monitor and to the system unit or to the grounded shockproof outlet. Check whether the monitor cable has been properly connected to the system unit and to the monitor. <p>If the monitor screen still remains dark after you have performed these checks and measures, contact your technical support team.</p>
The mouse pointer does not appear on the screen	The mouse driver is not loaded	Check whether the mouse driver is properly installed and available when you start the user program. Detailed information about the mouse driver is available in the corresponding documentation.
	Mouse not connected.	<ul style="list-style-type: none"> Check whether the mouse cord is properly connected to the system unit. If you use an adapter or extension for the mouse cable, also check these connectors. <p>If the mouse pointer still does not appear on the screen after you have performed these checks and actions, contact your technical support team.</p>

13.1 General troubleshooting

Problem	Possible cause	Possible remedy
Wrong time and/or date on the PC		<ol style="list-style-type: none"> 1. Press <F2> during the booting process to open the BIOS Setup. 2. Set the time and date in the setup menu.
Although the BIOS setting is OK, the time and data are still wrong.	The backup battery is dead.	Replace the backup battery.
USB device not responding.	The USB ports are disabled in BIOS.	Use a different USB port or enable the port.
	USB 2.0 device connected and USB 2.0 is disabled.	Enable USB 2.0.
	The operating system does not support the USB ports.	<ul style="list-style-type: none"> • Turn on USB Legacy Support for mouse and keyboard. • For other devices, you need the USB device drivers for the required operating system.
DVD/CD drive door, if present, does not open	The device is switched off or the open/close button is disabled by a software application.	<p>Emergency removal of the data medium:</p> <ol style="list-style-type: none"> 1. Switch off the device 2. Insert a pointed object, for example, an opened paper clip, into the emergency extraction opening of the drive. Apply pressure carefully until the door opens. 3. Pull the door out further with your hand.
The screen flickers when the mouse moves or when programs are called	<p>DDC information is not available. Possible causes:</p> <ul style="list-style-type: none"> • Monitor does not supply DDC information • KVM switch does not forward DDC information • Y cable adapter with DVI-I for DVI-D/VGA connector is being used 	<ul style="list-style-type: none"> • Use a monitor that supports DDC • Use a KVM switch that forwards DDC information • Use a simple cable adapter with only one interface
<p>The startup of a Windows operating system on a GPT data carrier is aborted with the following error message:</p> <p>"Status: 0xc0000225 Info: The boot selection failed because a required device is inaccessible"</p>	The boot parameters in the boot loader file "BCD" are incorrect or damaged.	<p>Run "Startup and Repair" from Microsoft Windows:</p> <ol style="list-style-type: none"> 1. Insert the Recovery DVD into the optical drive. 2. Start the boot manager using the <F12> key during booting 3. Select the line with "UEFI" in front of the name of the optical drive 4. Click "Next" in the language selection window 5. In the following "Install Windows" dialog, click on "Repair your computer" or press the <R> key. The "System Recovery Options" dialog appears. The system is checked for errors. 6. Next, click "Repair and restart"

Error displays on the front panel

Front LED	Possible cause	Details about the error display
Red WATCHDOG LED is lit	Watchdog has triggered	See section Watchdog (WD) (Page 64).
Red TEMP LED is lit	Excess temperature in the device	See section Temperature monitoring and temperature display (Page 64).
Red FAN LED is lit	Fan failure	See section Fan monitoring (Page 65).
Red HDD1 ALARM LED is lit	RAID reports that hard disk 1 is defective	See section RAID monitoring (Page 66).
Red HDD2 ALARM LED is lit	RAID reports that hard disk 2 is defective	See section RAID monitoring (Page 66).
HDD3 ALARM lights up red	RAID reports that hard disk 3 is defective	See section RAID monitoring (Page 66).
HDD1 ALARM, HDD2 ALARM and HDD3 ALARM flash red	RAID is in the "rebuild" state	See section RAID monitoring (Page 66).
HDD1 ALARM, HDD2 ALARM and HDD3 ALARM light up red	RAID system is not ready for operation:	Affected drive must be identified with the help of the RAID software. See section RAID monitoring (Page 66).
PN I MPI/DP lights up red	A fault has occurred on the CPU 1616 onboard interface	See section CP 1616 onboard communications processor (Page 199).
All front-panel LEDs are constantly lit	Error in early BIOS-POST	Contact Technical Support.

13.2 Troubleshooting RAID

Problem	Possible cause	Possible remedy
After changing the hard disk, the system does not boot from the RAID system	RAID system does not have highest boot priority	BIOS setup, boot menu: <ul style="list-style-type: none"> Permit RAID system in the boot priority Set the RAID system to be first in the boot priority order.
After changing the hard disk, "unused" is indicated for the relevant SATA port	The system was booted without a functioning hard disk (the removable cartridge was possibly not turned on)	Reboot the system with a functioning hard disk
Computer does not boot or "Boot device not found" is displayed	<ul style="list-style-type: none"> The boot device is not permitted The boot device is not in first place of the boot priority in the BIOS setup The boot data carrier is set up with GPT and UEFI boot is deactivated in the BIOS setup 	<ul style="list-style-type: none"> In the BIOS setup, "Boot" menu, permit the boot device in the boot priority In the BIOS setup, "Boot" menu, change the boot priority of the boot device Activate UEFI boot in the BIOS setup.

13.3 Notes on the use of third-party modules

Problem	Possible cause	To correct or avoid error
The device crashes during startup	<ul style="list-style-type: none"> • Redundant I/O addresses • Redundant hardware interrupts and/or DMA channels • Fluctuation of signal frequencies or levels • Different pin assignment 	Check your computer configuration: <ul style="list-style-type: none"> • If the computer configuration corresponds to the delivery state, contact your technical support team. • In the case of a change in the configuration, restore the delivery state. To do this, remove the third-party modules and restart the device. If the error no longer occurs, the third-party module being used was the cause of the fault. Replace the thrid-party module with a Siemens module or contact the module supplier.
	<ul style="list-style-type: none"> • Insufficient output of an external power supply, e.g. UPS 	If the device still crashes, contact your technical support team. <ul style="list-style-type: none"> • Use a higher capacity power supply
The device does not start up or switches off immediately	<ul style="list-style-type: none"> • A counter voltage is fed into the device by connected or installed third-party components 	Clarify the following with the supplier of the component: <ul style="list-style-type: none"> • The component can be operated without an external power supply. • The component can be reconfigured so that it only uses the external power supply or that of the device. • so that only the PC voltage supply or external voltage supply is used"

Technical data

14.1 General specifications

General specifications	
Order number	6AGA114-1... (for details, refer to the ordering documentation)
Dimensions	430.4 x 177.4 x 444.4 (WxHxD in mm) Detailed dimensional specifications can be found in the section Dimension drawings (Page 131).
Weight	min. 16 kg, max. 23 kg
Supply voltage (V _N)	100 -240 VAC (-15%, +10%), wide range; with short-term power failure backup in accordance with NAMUR:
Input current AC	Continuous current up to 7 A (during startup up to 30 A for the duration of 5 ms)
Line voltage frequency	50 to 60 Hz (min. 47 Hz to max. 63 Hz, sinusoidal)
Transient voltage interruption	Min. 20 ms at 93 V (max. 10 events per hour; recovery time of at least 1 s)
Power consumption	Redundant AC power supply: Max. 300 W at 70 % efficiency AC power supply: Max. 270 W at 80 % efficiency
Power loss / heat emission	300 W = 300 J/s = 0.28 BTU/s 270 W = 270 J/s = 0.26 BTU/s
Current delivery (DC)	+5 V/26 A +3.3 V/24 A, max. accumulated power 190 W +12 V/15 A +12 V/15 A -12 V/0.2 A +5 Vaux/2 A Maximum accumulated power of all voltages = 210 W
Noise emission	< 45 dB(A) at 25°C to DIN EN ISO 7779- ODDs are not in operation
Degree of protection	IP41 at the front and IP20 at the rear to IEC 60529
Dust protection	With closed front door Filter class G2 EN 779, 99% of particles > 0.5 mm are filtered
Safety	
Protection class	Protection class I according to IEC 61140
Safety regulations	<ul style="list-style-type: none"> • IEC 60950-1 • EN 60950-1 • UL 60950-1 • CSA C22.2 No 60950-1-07
Electromagnetic compatibility (EMC)	
Radiated interference (AC)	EN 61000-6-3, FCC Class A EN 61000-3-2 Class D and EN 61000-3-3

14.1 General specifications

General specifications	
Noise immunity: Mains borne disturbance on supply lines	± 2 kV; (to IEC 61000-4-4; Burst) ± 1 kV; (to IEC 61000-4-5; Surge symm.) ± 2 kV; (to IEC 61000-4-5; Surge asymm.)
Noise immunity on signal lines	± 1 kV;(according to IEC 61000-4-4; Burst; Length < 30 m) ± 2 kV; (according to IEC 61000-4-4; Burst; Length > 30 m) ± 2 kV; (according to IEC 61000-4-5; Surge; Length > 30 m)
Immunity to discharge of static electricity	± 6 kV contact discharge; (to IEC 61000-4-2) ± 8 kV air discharge; (to IEC 61000-4-2)
Immunity to RF interference	10 V/m, 80 to 1000 MHz and 1.4 to 2 GHz, 80% AM (to IEC 61000-4-3) 1 V/m 2 - 2.7 GHz, 80% AM (to IEC 61000-4-3) 10 V, 10 KHz to 80 MHz; 80% AM; (to IEC 61000-4-6)
Magnetic field	100 A/m, 50 Hz / 60 Hz; (to IEC 61000-4-8)
Climatic conditions	
Temperature	Tested to: IEC 60068-2-2, IEC 60068-2-1, IEC 60068-2-14
- Operation	<ul style="list-style-type: none"> + 5 °C to + 35 °C (maximum temperature with SAS hardware RAID) + 5 °C to + 45 °C no burner operation + 5 °C to + 50 °C no ODD operation Power loss of the expansion modules in total less than 30 W Gradient: Max. 10 °C/h, no condensation
- Storage/shipping	<ul style="list-style-type: none"> - 20°C to + 60°C Gradient: Max. 20 °C/h, no condensation
Relative humidity	Tested to IEC 60068-2-78, IEC 60068-2-30
- Operation	<ul style="list-style-type: none"> 5% to 80% at 25 °C (no condensation) Gradient: Max. 10 °C/h, no condensation
- Storage/shipping	<ul style="list-style-type: none"> 5% to 95% at 25 °C (no condensation) Gradient: Max. 20 °C/h, no condensation
Atmospheric pressure	
- Operation	1080 to 795 hPa (corresponds to an altitude of -1000 to 2000 m)
- Storage / shipping	1080 to 660 hPa (corresponds to an altitude of -1000 to 3500 m)
Mech. ambient conditions	
Vibration	Tested to IEC 60068-2-6, 10 cycles
- Operation ^{1,2} Storage/shipping	10 to 58 Hz 0.0375 mm, 58 Hz to 500 Hz: 4.9 m/s ² 5 to 9 Hz: 3.5 mm, 9 to 500 Hz: 9.8 m/s ²
Resistance to shock	Tested to IEC 60068-2-27, IEC 60068-2-29
- Operation ^{1,2} Storage/shipping	Half-sine: 50 m/s ² , 30 ms, 100 shocks per axis half-sine: 250 m/s ² , 6 ms, 1000 shocks per axis
Special features	
Quality assurance	to ISO 9001

General specifications	
Motherboard	
Chipset	Mobile Intel® QM57 Express Chipset (Platform Controller Hub)
Integrated RAID (on-board)	Mobile Intel® QM57 Express (5 Series SATA RAID Controller)
Processor	<ul style="list-style-type: none"> Intel® Core™ i3-330E (2.13 GHz, 1066 MT/sec FSB, 3 MB cache, EM64T, VT, 2 cores / 4 threads) Intel® Core™ i5-520E (2.4 GHz TurboBoost, 1066 MT/sec FSB, 3 MB cache, EM64T, VT, 2 cores / 4 threads), AMT Intel® Core™ i7-610E, 2.53 GHz TurboBoost, 1066 MT/sec FSB, 4 MB cache, EM64T, VT, 2 cores / 4 threads), AMT
RAM	2 DIMM base maximum 8 GB DDR3 with 1066MT/sec SDRAM (PC3-8500) Modules with and without ECC can be operated
Memory expansion	1 GB to 8 GB DDR3 (PC3-8500), max. 3.5 GB for 32-bit operating system and applications can be used. Modules with and without ECC can be ordered. (see ordering documents for features)
Free expansion slots	Max. configuration with 8 modules: 7 x PCI 1 x PCIe x16 Graphics (PEG or PCIe x8 IO possible) Max. configuration with 11 modules (optional): 7 x PCI 3 x PCIe x4 1 x PCIe x16 (PEG or PCIe x8 IO possible) All modules up to 312 mm length are supported
Max. permissible power consumption per PCI slot	5 V/5 A or 3.3 V/7 A, 12 V/0.5 A, -12 V/0.05, 3.3 Vaux/0.4 A
Max. permitted power consumption per PCIe slot	PCIe x4 module: 3.3 V/3A; 12 V/2.1 A, 3.3 Vaux/0.4 A
Max. permitted power consumption per PCIe slot	PCIe x16 module: 3.3 V/3A; 12 V/2.1 A, 3.3 Vaux/0.4 A
Max. permissible power loss per PCI slot	Accumulated power loss (all voltages) may not exceed 25 W.
Max. permissible power loss at all slots	Accumulated power loss (all slots) may not exceed 90 W. Accumulated 3.3 Vauxcurrent may not exceed 0.8 A.
Maximum bandwidth of PCI slots	133 MB/s bandwidth
Maximum bandwidth of PCIe x4 slots	2.5 GB/s bandwidth per lane
Drives (for configuration details, refer to the order documentation)	
Hard disk drive	3.5" SATA 300, 250 / 500 GB 3.5" SAS 3 GBit/s, 1000 GByte NCQ (Native Command Queuing) is supported.
Flash memory	2.5" Solid State Disk

14.1 General specifications

General specifications	
DVD ROM	5.25" SATA Read: DVD ROM: Single layer 18x, Dual layer 10x DVD+R/RW, DVD-R/RW 12x, DVD-RAM 5x CD-ROM, CD-R 48x, CD-RW 40x
DVD burner	5.25" SATA Read: DVD ROM: Single Layer 16x, Dual Layer 12x DVD-R/+R: Single layer 16x, Dual layer 12x DVD-RW/+RW 13x, DVD-RAM 6x CD-ROM/CD-R Read 48x, CD-RW 40x Write DVD+R 24x, DVD+RW 12x, DVD-R 24x, DVD-RW 6x DVD+R (DL) 12x, DVD-R DL 12x, DVD-RAM 12x CD-R 48x, CD-RW 32x
Chipset	
Main memory interface	Max. 8 GB SDRAM DDR3 (PC3-8500), unbuffered, ECC, no ECC Module types: 1 Gbit or 2 Gbit technology x8 and x16 organized
USB	Max. 7 USB 2.0 devices (500 mA high current, high speed up to 480 Mbps) Max. accumulated power consumption of all USB devices: 2.3 A.
PCI/PCIe	PCI V2.3, PCIe 2 data rate PCIe V1.0
SATA (on-board)	4x SATA 150/300, with optional RAID
SAS hardware RAID controller (optional) ⁷	<ul style="list-style-type: none"> • SAS RAID module PCIe x8, RAID 1, 5 (installed in PCIe-x16 slot) • Type: Adaptec 5405Z (independent processor, 512 MB DDR2 cache) • Parameters: <ul style="list-style-type: none"> – 1x Mini SAS adapter (SFF-8087 for 4 SAS/SATA drives) – Maximum data rate 3 GBit/s per port – Maintenance-free buffer unit for on-board cache memory
Graphics	
Graphics controller	Intel® HD Graphics Controller, 2-D and 3-D engine integrated in chipset
Graphics memory	Dynamic Video Memory Technology (uses 32 MB to 1.7 GB RAM)
Resolutions/frequencies/colors	<ul style="list-style-type: none"> • CRT (via DVI-I VGA adapter): <ul style="list-style-type: none"> – Up to 1600x1200 at 120 Hz / 32-bit color depth – Up to 2560x1600 at 60 Hz / 32-bit color depth • LCD via DVI-D: <ul style="list-style-type: none"> – Up to 2048x1152 at 60 Hz / 32-bit color depth

General specifications		
Graphics module (optional) ⁷		<ul style="list-style-type: none"> • Graphics card PCIe x16, Dual Head (2x DP, 2x VGA or 2x DVI-D) • Type: NVIDIA Quadro NVS 295 (256 MB graphics memory) • Maximum resolution: <ul style="list-style-type: none"> – DP 2560x1600 at 60 Hz / 32-bit color depth – DVI 1920x1200 at 60 Hz / 32-bit color depth – VGA 2048x1536 at 60 Hz / 32-bit color depth
Interfaces		
COM1		Serial interface 1 (V.24), 9-pin D-sub connector
COM2		Serial interface 2 (V.24), 9-pin D-sub connector
LPT1		Parallel interface (Standard, EPP and ECP mode) Connection for parallel interface printer
VGA (optional) (DVI-I)		Connection of an analog monitor via DVI-I / VGA adapter
1x DVI-D		For connecting a digital monitor
2x DP / DVI-D/VGA with Dual-Head graphics controller (optional) ⁷		For connecting two digital or analog monitors DVI-D or VGA via cable adapter
Keyboard		PS/2 keyboard connection
Mouse		PS/2 mouse connection
USB	Rear of the device	4 x USB 2.0 devices (500 mA high current, high speed up to 480 Mbps)
	Front panel	2 x USB 2.0 devices (500 mA high current, high speed up to 480 Mbps)
	Internal	1 x USB 2.0 devices (500 mA high current, high speed up to 480 Mbps)
PROFIBUS (optional)		9-pin D-sub socket, CP5611-compatible, 9.6 Kbps to 12 Mbps, programmable with software Electrically isolated RS485 (SELV circuit)*
PROFINET ⁴		3x RJ45 interface, CP 1616 compatible onboard interface based on ERTEC 400, 10/100 Mbps electrically isolated *
Ethernet ⁴		2 x Ethernet interface (RJ-45), wake on LAN, remote boot and teaming are supported. 10/100/1000 Mbps, electrically isolated * Ethernet 1: 82577 L, AMT-capable ⁶ , supports jumbo frames up to 4088 bytes Ethernet 2: Intel 82574 L, supports jumbo frames up to 9014 bytes
Audio - Microphone - Line out / Headset		IDT 92HD81HD 2x 0.5 W / 8 Ohm

General specifications			
Status displays (LEDs)	Labeling on the front panel	LED color	Meaning
	POWER	Green Yellow	Device active standby
	HDD	Green	HDD active
	ETHERNET 1 ⁴ ETHERNET 2 ⁴	Green Green	Active Active
	PN I MPI/DP ⁵	Green	MPI/DP active
		Red	PROFINET: No cable connected or fault
		Flashing red	PROFINET: Fault or node flash test function
	WATCHDOG	Green Red	Active Alarm
	TEMP	Red	Temperature alarm
	FAN	Red	Fan alarm
	HDD1 ALARM HDD2 ALARM HDD3 ALARM	Red or all red or all red flashing ³	Hard disk alarm in conjunction with SIMATIC monitoring software
Approvals / manufacturer's declarations			
cULus	60950-1		
CE	For details refer to Appendix A1 and manufacturer's declaration		

- * Electrical isolation within the safety extra-low voltage circuit (SELV)

- ¹ Mechanical interference must be safely excluded within the burning operation.

- ² Restrictions of HDD mounting on the side panel:
When mounting the device on telescopic rails, the values 10 to 58 Hz: 0.019 mm, 58 to 200 Hz: 3 m/s² may not be exceeded. Vibrations may not exceed 200 Hz.
Restrictions when HDDs are mounted in removable racks:
mechanical stress must be safely excluded.

- ³ All the flashing red LEDs indicate that the RAID system is being synchronized.
All the red LEDs are lit if the monitoring software was unable to locate the faulty HDD. It may be possible to locate this HDD using the RAID software. See the RAID system section.

- ⁴ For unique labeling, the LAN interfaces are numbered on the enclosure. The numbering by the operating system may deviate from this.

- ⁵ Interfaces supplied as optional.

- ⁶ AMT and teaming cannot be used simultaneously on the Ethernet interface.

- ⁷ SAS hardware RAID controller and the Dual Head graphics card occupy the same PCIe-x16 expansion slot, which means that they cannot be operated together.

Note

Observe the EGB guidelines (Page 211). The specifications apply only when:

- The devices is in correct working order.
- The fan cover and filter mat are installed.
- The front door is closed.

14.2 Power requirements of components (maximum values)

Base system

Component	Voltage					
	+5 V	+3.3 V	+12 V	-5 V	-12 V	5 Vaux
Motherboard core i processor with cooling	4 A	2.3 A	3.0 A		0.03 A	0.3 A
Front fan			0.5 A			
Rear fan			0.1 A			
Base system (dual core)	4 A	1 A	4 A	0 A	0.03 A	0.3 A
HDD ¹ SATA and SAS (typical values)	0.5 A		0.7 A			
DVD ROM ¹	0.9 A		0.8 A			
DVD Burner ¹	1.1 A		1.4 A			
SAS hardware RAID controller		0.4 A	1.2 A			
Single currents (max. permissible)	30 A ²	28 A ²	15 A	0.5 A	0.5 A	2 A
Total power consumption, permissible	210 W					
Efficiency of the power supply ¹	Redundant AC power supply: Approx. 70% (230 VAC) / approx. 65% (120 VAC) AC power supply: 80% (230 VAC) / approx. 75% (120 VAC)					
¹ based on the selected device configuration						
² The accumulated power of the + 5 V and + 3.3 V voltage must not exceed 190 W with an AC power supply, or 100 W with AC redundant power supply.						

Typical power values

Component	Current consumption (AC-SV, U=230 V)	Power consumption
Base device	0.2 A	45 W
Hard disk drive 1 x 3.5"	0.04 A	9 W
Hard disk drives 2 x 3.5"	0.08 A	18 W
Hard disk drives 3 x 3.5"	0.12 A	27 W
DVD-ROM drive	0.06 A	14 W
DVD burner drive	0.09 A	22 W

14.3 AC power supply

Output voltage

Voltage	Max. current	Voltage stability
+ 12 V	10 A	+/- 5 %
+ 12 V	13 A	+/- 5 %
- 12 V	0.3 A	+/- 10 %
+ 5 V	20 A ¹	+/- 5 %
+ 3.3 V	20 A ¹	+/- 5 %
+ 5 V Aux	2 A	+ 5 % / - 3 %

¹ The accumulated power of the +5 V and + 3.3 V supply may not exceed 190 W


Maximum inrush current at:

110 VAC = 25 A / 5 ms

230 VAC = 30 A / 5 ms

Power Good Signal

Power-Good-Signal:

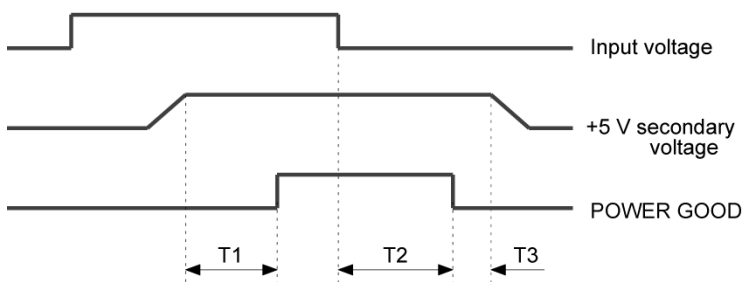

T1:	preset time	100 ... 500 ms
T2:	hold-up time	20 ms minimum
T3:	save time	1 ms minimum

Figure 14-1 Timing profile of the Power Good Signal

Note

Operation at an uninterruptible power supply (UPS)

The power supply contains an active PFC (Power Factor Correction) circuit to conform to the EMC guidelines.

Uninterruptible AC power systems (UPS) must supply a sinusoidal output voltage in the normal and buffered mode when used with SIMATIC PCs with an active PFC.

UPS characteristics are described and classified in the standards EN 50091-3 and IEC 62040-3. Devices with sinusoidal output voltage in the normal and buffered mode are identified with the classification "VFI-SS-...." or "VI-SS-....".

14.4 AC power supply, redundant

Output voltage

Voltage	Max. current	Voltage stability
+ 12 V	18 A ²⁾	+/- 5 %
+ 12 V	18 A ²⁾	+/- 5 %
+ 12 V	14 A ²⁾	+/- 5 %
- 12 V	0.8 A	+/- 10 %
+ 5 V	20 A ¹⁾	+ 5 % / - 4 %
+ 3.3 V	20 A ¹⁾	+ 5 % / - 4 %
+ 5 Vaux	2.0 A	+ 5 % / - 3 %

1) The max. permitted accumulated power of the +5 V and + 3.3 V voltages is 100 W.

2) the maximum accumulated current of the +12 V voltage must not exceed 24 A.

The maximum inrush current is as follows for:

110 VAC: 25 A, 5 ms



230 VAC: 30 A, 5 ms

14.5 Technical data of the telescopic rails

Ultimate load per pair	At least 23 kg
Full extraction length	At least 470 mm
Rail thickness	Maximum 9.7 mm
Mounting screws	M5 x 6 mm

Dimension drawings

15.1 Dimensional drawing of the device

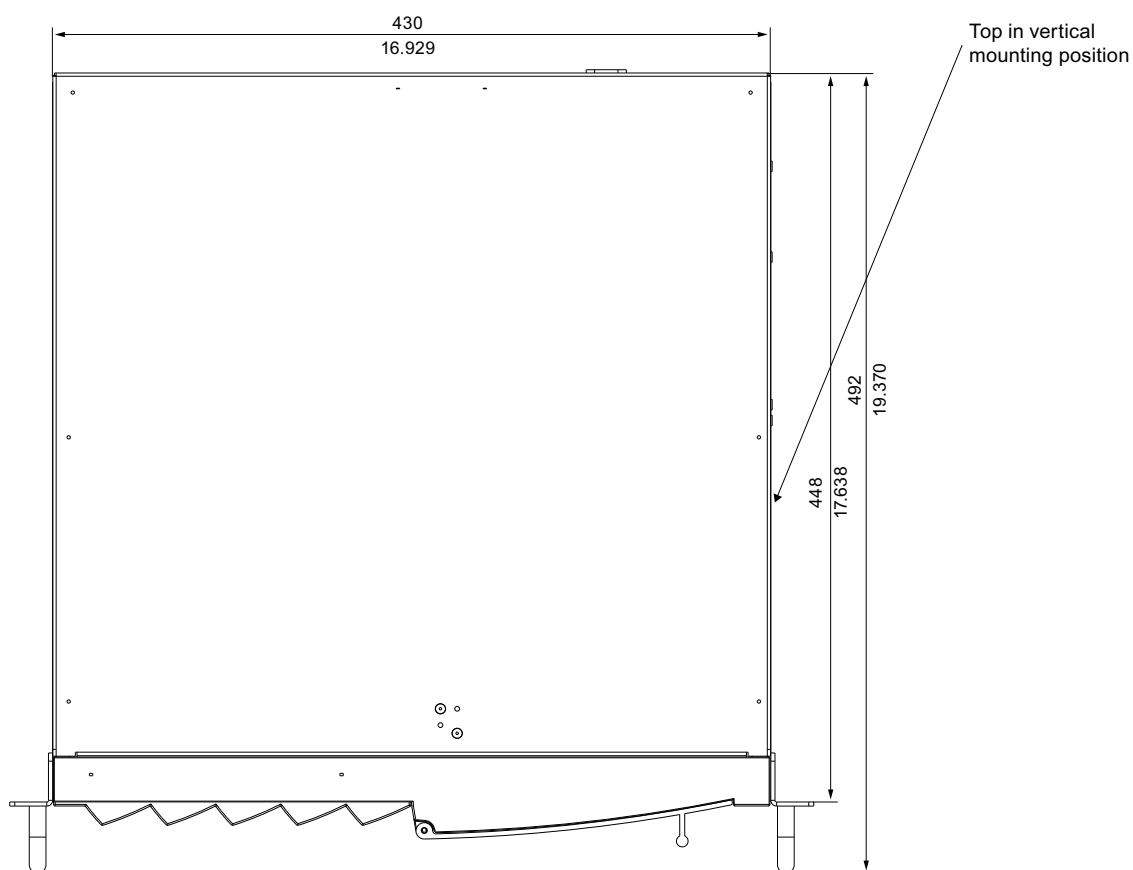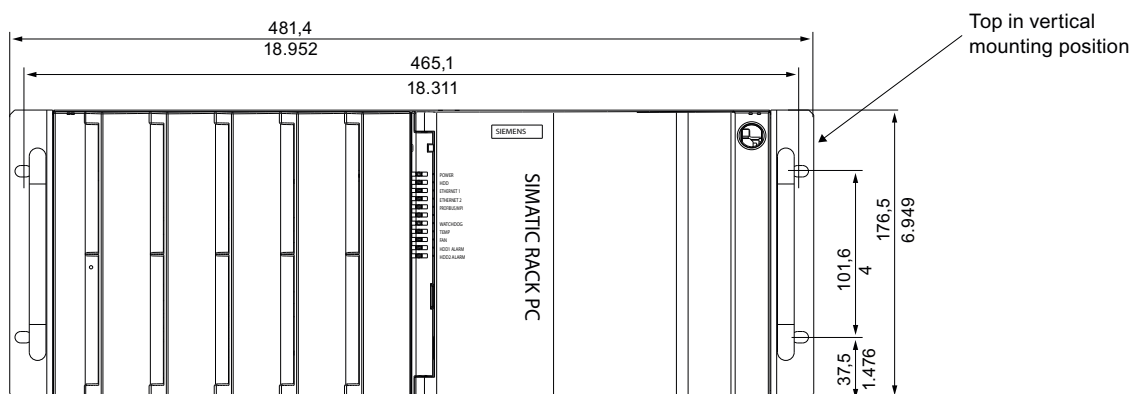

Units of measurement: $\frac{\text{mm}}{\text{Zoll}}$

Figure 15-1 Dimensional drawing

15.2 Dimensional drawing for the use of telescopic rails

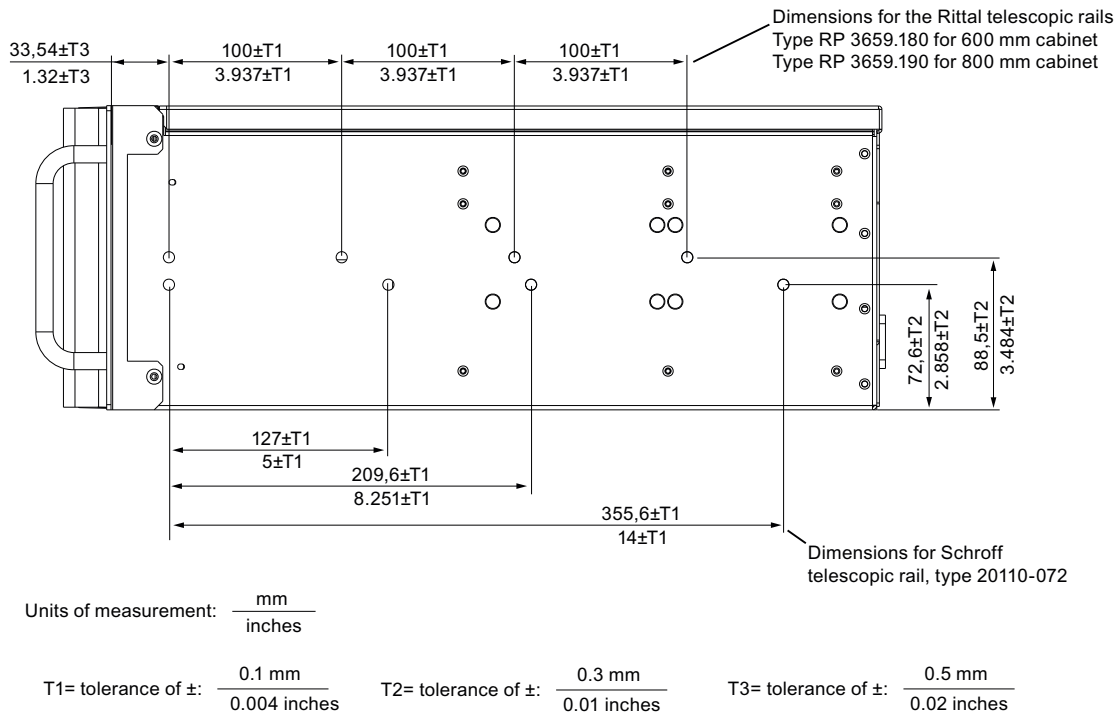


Figure 15-2 Dimensional drawing for the use of telescopic rails

15.3 Dimensional drawings for installation of expansion modules


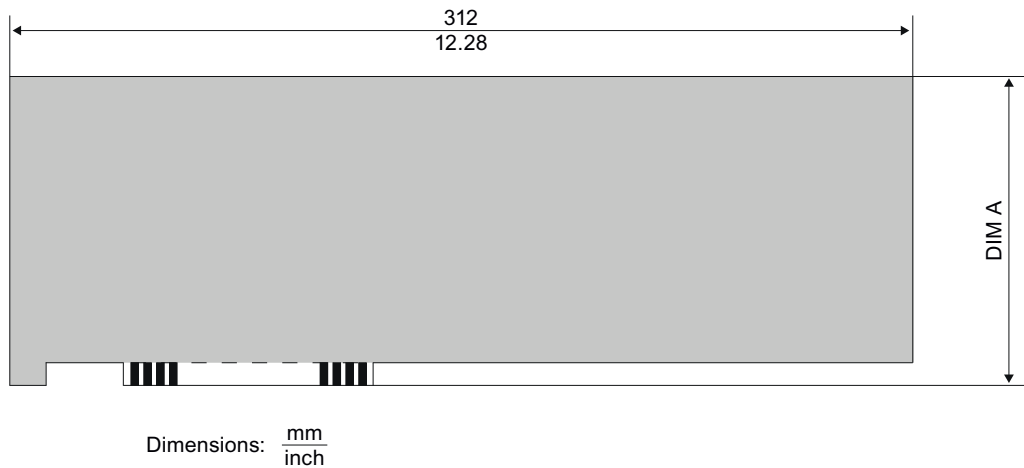


Figure 15-3 Maximum mountable PCI/PCIe module (shown without slot bracket and retainer)

15.3 Dimensional drawings for installation of expansion modules

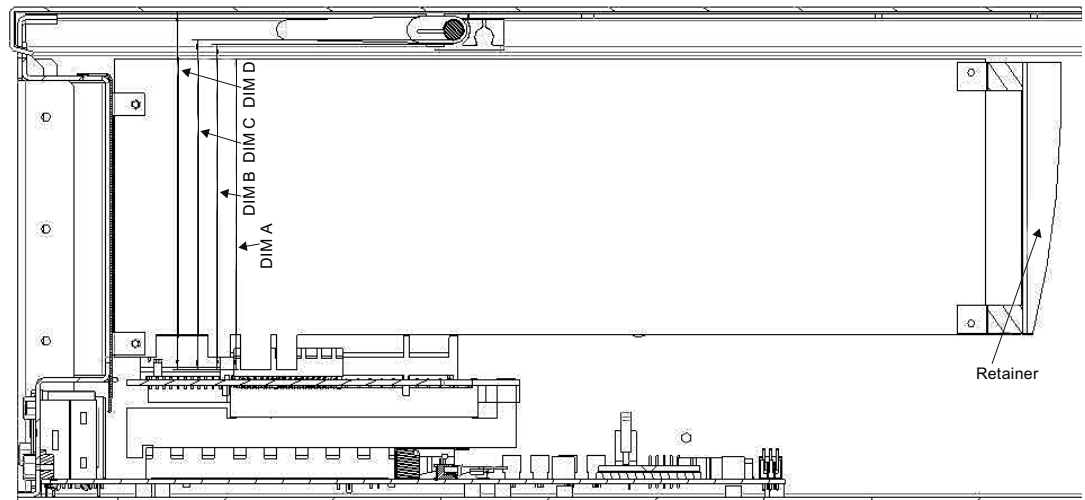

	PCI	PCIe	Meaning
DIM A (mm/inch)	106,68 / 4,2	111,15 / 4,38	Lower edge of module to upper edge of module
DIM B (mm/inch)	111,94 / 4,41	116,4 / 4,58	Lower edge of module to lower edge of retainer
DIM C (mm/inch)	113,44 / 4,47	117,9 / 4,64	Lower edge of module to retainer
DIM D (mm/inch)	123,54 / 4,86	128,0 / 5,0	Lower edge of module to bottom of device cover

Detailed descriptions

16.1 Motherboard

16.1.1 Structure and functions of the motherboard

Core components of the motherboard: processor and chipset, three slots for memory modules, internal and external interfaces, Flash BIOS and the backup battery.

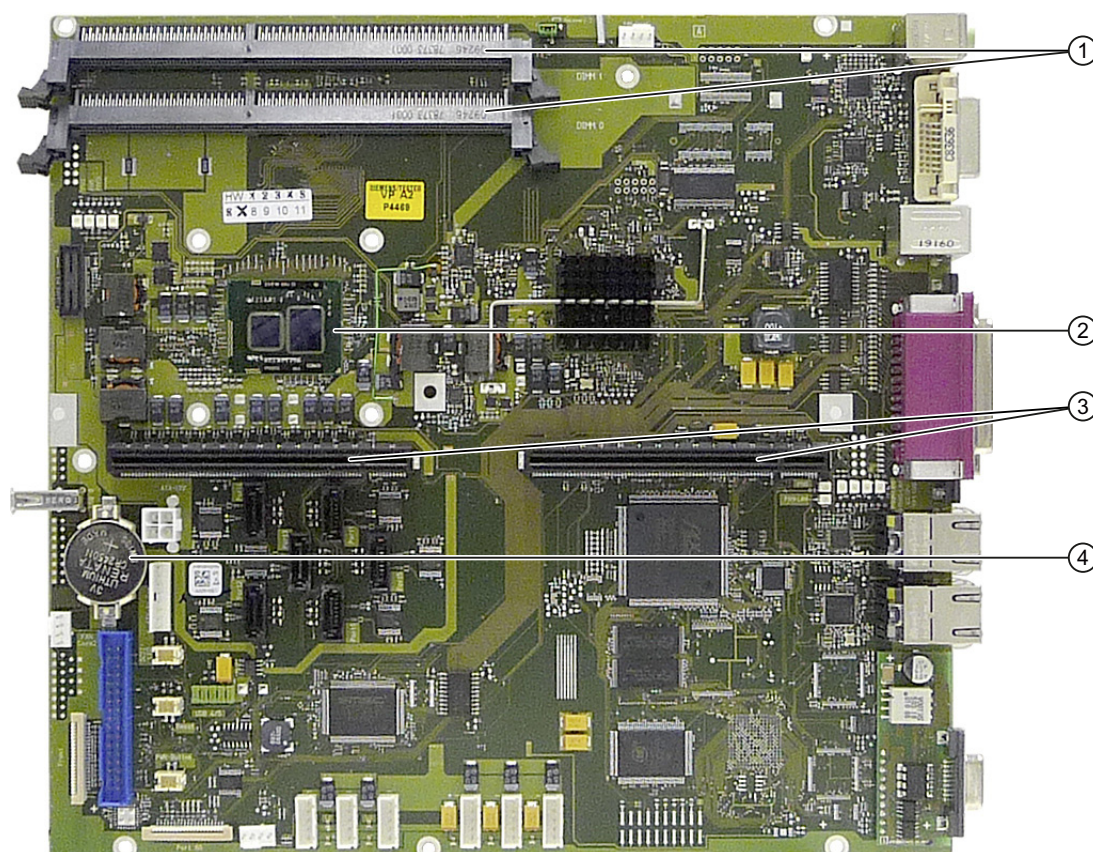


Figure 16-1 Layout of the motherboard

①	Two memory module slots	③	Slot for the bus board
②	Processor	④	Backup battery

16.1.2 Technical features of the motherboard

Component / interface	Description	Parameters
Chipset	Single chipset	<ul style="list-style-type: none"> Mobile Intel® 5 chipset QM57 Express (Platform Controller Hub)
BIOS	Update by means of software	<ul style="list-style-type: none"> Insyde modified by Siemens
CPU	Intel® Core™ i	<ul style="list-style-type: none"> VT and multimedia support Turbo Boost and AMT, depending on CPU Onboard cache with 3M/4M depending on CPU
Memory	2 DIMM module slots, max. 4 GB per module	<ul style="list-style-type: none"> Data width of 64/72 bits (without ECC / with ECC) 3.3 V DDR3-SDRAM in accordance with PC3-8500 specification 1 to 2 Gbit chip size on the module 1066 MT/sec transfer rate Variable from 1 GB to 8 GB / DIMM With and without ECC
Graphics	Integrated in chip set	<ul style="list-style-type: none"> Mobile CPU with integrated "Hi-K process Graphics" Graphics Controller and Mobile Intel® QM57 Express (Platform Controller Hub) <ul style="list-style-type: none"> VGA: <p>2560x1600/32-bit color depth/120 Hz to 2560x1600 at 60 Hz/32-bit color depth</p> DVI-I: <p>2048x1152/32-bit color depth/60 Hz</p> Graphics memory: <p>Up to 1.7 GB, used in system memory, 32 MB reserved.</p>
Hard disk ⁴	Various SATA modes, AHCI, RAID 0, 1 and RAID 5 can be set	<ul style="list-style-type: none"> Compatible to SATA -150 / 300 Supports NCQ (Native Command Queuing)
DVD ROM ⁴ DVD ROM/CD RW ⁴	SATA interface	<ul style="list-style-type: none"> Compatible to SATA -150 / 300
Floppy ⁴	FD drive interface	<ul style="list-style-type: none"> 1.44 MB
Keyboard	PS/2 keyboard interface	<ul style="list-style-type: none"> Standard
Mouse	PS/2 mouse interface	<ul style="list-style-type: none"> Standard


Component / interface	Description	Parameters
Serial	COM1, 9-pin COM2, 9-pin	<ul style="list-style-type: none"> • V.24
Parallel	Standard, bi-directional, EPP and ECP mode	<ul style="list-style-type: none"> • SUB-D 25-pole
PROFIBUS/MPI ²	SIMATIC S7 communication interface	<ul style="list-style-type: none"> • Electrically isolated ¹ compatible to CP5611 - 12 Mbps
PROFINET ²	Communication interface for PROFINET IO applications and SIMATIC installations	<ul style="list-style-type: none"> • 10/100 Mbps, electrically isolated¹ • CP -1616 compatible 3-port interface
USB 2.0	Universal Serial Bus	<p>7 high-current (500 mA) USB -2.0 ports, of those:</p> <ul style="list-style-type: none"> • 2 on the front • 4 on the back • 1 inside
Ethernet (two interfaces)	<p>10BaseT/100Base-TX/1000Base-TX</p> <p>Ethernet 1: Intel® 82577LM Gigabit Network Connection (Hanksville)</p> <p>Ethernet 2: Intel® 82574L Gigabit Network Connection</p>	<ul style="list-style-type: none"> • 10/100/1000 Mbps, electrically isolated¹ • Wake on LAN, remote boot • AMT-capable ⁵, teaming-capable • Supports jumbo frames up to 4088 bytes • With teaming capability • Supports jumbo frames up to 9014 bytes

- 1 Electrical isolation within the safety extra-low voltage circuit (SELV)
- 2 Optional product variant
- 3 Depends on the CPU type
- 4 Depends on the selected device configuration
A floppy disk drive cannot be ordered using the configurator
- 5 AMT and teaming cannot be used simultaneously on the Ethernet interface.

16.1.3 Position of the interfaces on the motherboard

The Rack PC motherboard contains the following interfaces:


- Interfaces for the connection of external devices
- Interfaces for internal components (drives, bus boards etc.)

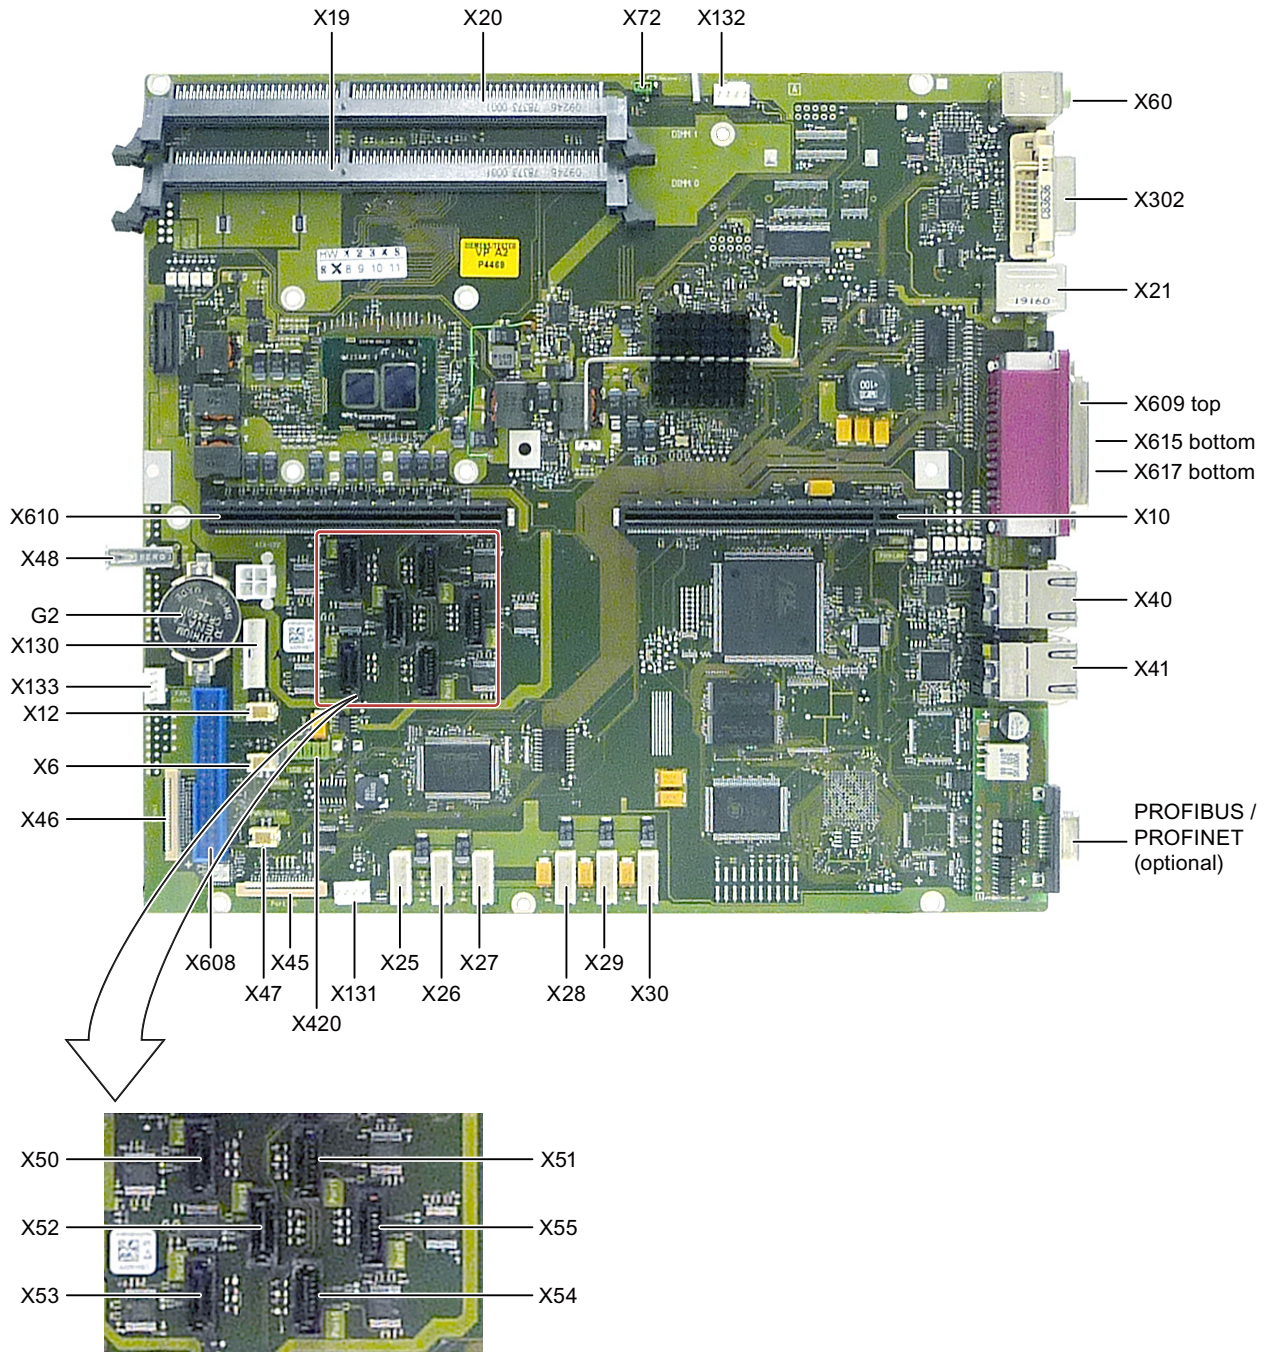

16.1.4 External interfaces


Interface	Position	Connector	Description
COM1	External	X617	9-pin, standard connector
COM2	External	X615	9-pin, standard connector
LPT1	External	X609	25-pin, standard socket
PS/2 mouse	External	X21 (7 to 12)	6-pin, miniature DIN socket (top socket)
PS/2 keyboard	External	X21 (1 to 6)	6-pin, miniature DIN socket (bottom socket)
USB 2.0	External	X40A, B; X41A, B; X420	Port 0, 2; 4, 5; USB ports 1, 3 at the front
PROFIBUS/MPI	External	X600	9-pin, standard socket, electrically isolated interface
PROFINET	External		RJ45
Ethernet 1 and 2	External	X40, 41	RJ45
DVI-I	External	X302	Combined socket: 24-pin DVI-D plus 5-pin VGA
Microphone	External	X60 (top)	6-pin 3.5-mm phono jack
Line out	External	X60 (bottom)	6-pin 3.5-mm phono jack

Serial interfaces COM1, COM2 (V24), X617, X615

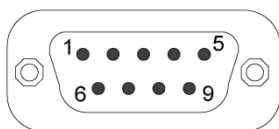


Pin no.	Short name	Meaning	Input / output
1	DCD (M5)	Receive signal (carrier)	Input
2	RxD (D2)	Receive data	Input
3	TxD (D1)	Send data	Output
4	DTR (S1)	Data terminal ready	Output
5	GND (E2)	Functional ground (reference potential)	–
6	DSR (M1)	Ready for operation	Input
7	RTS (S2)	Request to send	Output
8	CTS (M2)	Clear to send	Input
9	RI (M3)	Incoming call	Input

Parallel interface LPT1, X609

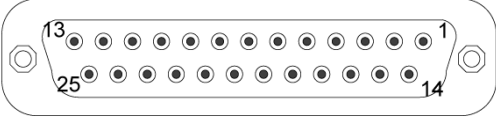

Pinno.	Short name	Meaning	Input / output
1	/ Strobe (CLK)	Data message	Output (open collector)
2	Data - Bit 0	Data channel 0	Output (TTL level)
3	Data - Bit 1	Data channel 1	Output (TTL level)
4	Data - Bit 2	Data channel 2	Output (TTL level)
5	Data - Bit 3	Data channel 3	Output (TTL level)
6	Data - Bit 4	Data channel 4	Output (TTL level)
7	Data - Bit 5	Data channel 5	Output (TTL level)
8	Data - Bit 6	Data channel 6	Output (TTL level)
9	Data - Bit 7	Data channel 7	Output (TTL level)
10	/ACK	Data acknowledge	Input (4.7 kΩ pull up)
11	BUSY	Not ready	Input (4.7 kΩ pull up)
12	PE (PAPER END)	Paper end	Input (4.7 kΩ pull up)
13	SELECT	Device selection	Input (4.7 kΩ pull up)
14	/ AUTO FEED	Automatically new line	Output (open collector)
15	/ ERROR	Device error	Input (4.7 kΩ pull up)
16	/ INIT	Reset / Initialization	Output (open collector)
17	/ SELECT IN	Printer selection	Output (open collector)
18...25	GND	Ground	-


PS/2 mouse interface, X21 7 to 12

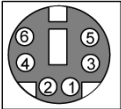


View onto the socket

Pin no.	Short name	Meaning	Input output
1	DAT	Data channel, mouse	Input/output
2	-	Not used	-
3	GND	Ground	-
4	P5VFK	+ 5 V (fused)	Output
5	CLK	Clock channel, mouse	Input/output
6	-	Not used	-

PS/2 keyboard interface, X21 1 to 6

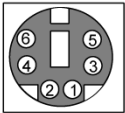 View onto the socket			
Pin no.	Short name	Meaning	Input output
1	DAT	Data channel, keyboard	Input/output
2	–	Not used	–
3	GND	Ground	–
4	P5VFK	+ 5 V (fused)	Output
5	CLK	Clock channel, keyboard	Input/output
6	–	Not used	–


USB 2.0 ports, X40A, B; X41A, B

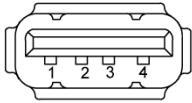			
Pinno.	Short name	Meaning	Input / output
1	VCC	+ 5 V (fused)	Output
2	– Data	Data channel	Input / output
3	+ Data	Data channel	Input / output
4	GND	Ground	–

The connectors are of type A.

The ports are rated as high-current USB 2.0 (500 mA).

PROFIBUS/MPI interface X600 1

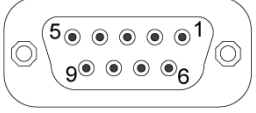			
Pinno.	Short name	Meaning	Input / output
1	–	Not used	–
2	–	Not used	–
3	LTG_B	Signal line B of MPI module	Input/output

4	RTS_AS	RTSAS, control signal for received data stream. The signal is "1" when the directly connected AS is sending.	Input
5	M5EXT	M5EXT return line (GND) of 5 V power supply. The current load of an external consumer connected between P5EXT and M5EXT may not exceed the 90 mA.	Output
6	P5 EXT	P5EXT power supply (+5 V) of the 5 V power supply. The current load of an external consumer connected between P5EXT and M5EXT may not exceed the 90 mA.	Output
7	–	Not used	–
8	LTG_A	Signal line A of the MPI module	Input/output
9	RTS_PG	RTS output signal of the MPI module. The control signal is "1" when the programming device is sending.	Output
Shield		on connector casing	

1 Optional product variant

PROFINET LAN X1 Port P1, P2, P3

<p>The diagram shows a rectangular connector with two LEDs at the top: LED 1 (green) on the left and LED 2 (yellow) on the right. Below the LEDs are eight pins. Pin 1 is on the left and pin 8 is on the right.</p>			
Pinno.	Short name	Meaning	Input / output
1	RD+	Receive data *	Input
2	RD-	Receive data *	Input
3	TD+	Send data *	Output
4, 5 ¹⁾	SYMR	Internal 75 Ohm terminating resistor	–
6	TD-	Receive data *	Output
7, 8 ¹⁾	SYMT-	Internal 75 Ohm terminating resistor	–
S		Shield	
	LED 1	Lit green: link	
	LED 2	Lights up yellow: activity	
* Auto negotiation and auto crossover supported			

Ethernet LAN connection, X40, X41

Pinno.	Short name	Meaning	Input / output
1	BI_DA+	Bi-directional data A+	Input / output
2	BI_DA-	Bi-directional data A-	Input / output
3	BI_DB+	Bi-directional data B+	Input / output
4	BI_DC+	Bi-directional data C+	Input / output
5	BI_DC-	Bi-directional data C-	Input / output
6	BI_DB-	Bi-directional data B-	Input / output
7	BI_DD+	Bi-directional data D+	Input / output
8	BI_DD-	Bi-directional data D-	Input / output
S		Shield	–
	LED 1	Off: 10 Mbps Lit in green color: 100 Mbps Lit in orange color: 1000 Mbit/s	–
	LED 2	Lit: Active connection (to a hub, for example) Flashing: activity	–

VGA interface of the DVI-I/VGA adapter or of the DP/VGA adapter


Pinno.	Short name	Meaning	Input / output
1	R	Red	Output
2	G	Green	Output
3	B	Blue	Output
4	–	Not used	–
5	GND	Ground	–
6	GND	Ground	–
7	GND	Ground	–
8	GND	Ground	–
9	+ 5 V	+ 5 V (fused)	Output
10	GND	Ground	–

11	–	Not used	–
12	DDC_DAT	Display data channel data	Input/output
13	EXT_H	Horizontal synchronizing pulse	Output
14	EXT_V	Vertical synchronizing pulse	Output
15	DDC_CLK	Display data channel clock	Input/output

DVI-D interface of the DVI-I/DVI-D adapter or of the DP/DVI-D adapter



			
Pinno.	Short name	Meaning	Input / output
S	GND	Ground	–
S1	GND	Ground	–
1	TX2N	TDMS data 2-	Output
2	TX2P	TDMS data 2+	Output
3	GND	Ground	–
4	NC	Not used	–
5	NC	Not used	–
6	DDC CLK	DDC clock	Input / output
7	DDC CLK	DDC data	Input / output
8	VSYNC	Vertical synchronizing pulse	Output
9	TX1N	TDMS data 1-	Output
10	TX1P	TDMS data 1+	Output
11	GND	Ground	–
12	NC	Not used	–
13	NC	Not used	–
14	+5 V	+5 V	Output
15	GND	Ground	–
16	MONDET	Hotplug detect	Input
17	TX0N	TDMS data 0-	Output
18	TX0P	TDMS data 0+	Output
19	GND	Ground	–
20	NC	Not used	–
21	NC	Not used	–
22	GND	Ground	–
23	TXCP	TDMS clock +	Output
24	TXCN	TDMS clock -	Output

DVI-I interface


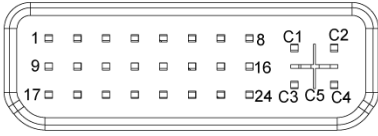


Pinno.	Short name	Meaning	Input / output
S	GND	Ground	–
S1	GND	Ground	–
C1	R	Red	Output
C2	G	Green	Output
C3	B	Blue	Output
C4	HSYNC	Horizontal synchronizing pulse	Output
C5	GND	Ground	–
CSA	GND	Ground	–
1	TX2N	TDMS data 2-	Output
2	TX2P	TDMS data 2+	Output
3	GND	Ground	–
4	NC	Not used	–
5	NC	Not used	–
6	DDC CLK	DDC clock	Input / output
7	DDC CLK	DDC data	Input / output
8	VSYNC	Vertical synchronizing pulse	Output
9	TX1N	TDMS data 1-	Output
10	TX1P	TDMS data 1+	Output
11	GND	Ground	–
12	NC	Not used	–
13	NC	Not used	–
14	+5 V	+5 V	Output
15	GND	Ground	–
16	MONDET	Hotplug detect	Input
17	TX0N	TDMS data 0-	Output
18	TX0P	TDMS data 0+	Output
19	GND	Ground	–
20	NC	Not used	–
21	NC	Not used	–
22	GND	Ground	–
23	TXCP	TDMS clock +	Output
24	TXCN	TDMS clock -	Output

Microphone interface, X60 top

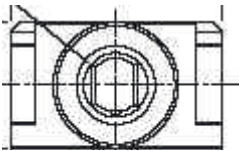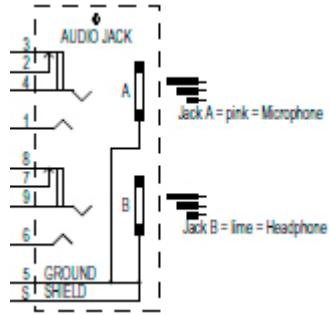			
Pin no.	Short name	Meaning	Input / output
1	Right	Right channel	Input
2	7M	Analog ground	Output
3	Sense	Switch contact for device identification	Input
4	Left	Left channel	Input
5	M	Logic ground	Output

Line Out interface, X60 bottom

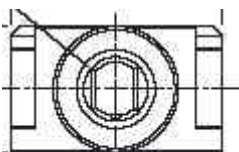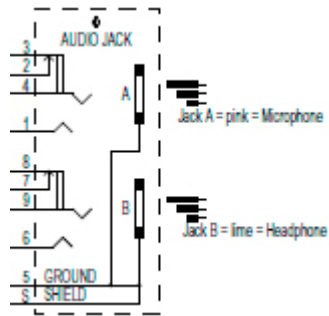			
Pin no.	Short name	Meaning	Input / output
5	M	Logic ground	Output
6	Left	Left channel	Output
7	7M	Analog ground	Output
8	Sense	Switch contact for device identification	Input
9	Right	Right channel	Output

16.1.5 Internal ports

Pin assignment of the internal interfaces

Interface	Position	Connector	Description
Memory	Internal	X19, X20	2 DIMM sockets, 64-/ 72-bit
Bus expansion	Internal	X10	Bus expansion socket, used by PCI and PCIe bus signals
Power supply	Internal	X9	4-pin 12 V ATX power connector (CPU-VRM supply)
Fan monitoring	Internal	X130	Power supply fan monitoring 8-pin pin header
Floppy	Internal	X608	Two drives can be installed (82078 compatible) 360 KB, 720 KB, 1.2 MB, 1.44 MB 3F0h–3F7h, 370h–377h, IRQ 6 can be disabled, edge triggered 34-pin, socket for standard floppy disk drive
SATA	Internal (hard disk drive, for example)	X50, 51, 52, 53, 54, 55	SATA connector, 7-pin
Connection for device fan	Internal	X132, X131	Power supply, device fan monitoring (controlled), 4-pin, pin header
Connection for SCSI LED	Internal	X12	Input for SCSI drive activity display
Internal USB interface	Internal	X420	For connecting the USB cable to the front panel of the computer
Front panel interface	Internal	X46	OP connection
RAID HDD Alarm	Internal	X11	2-pin plug, LED interface for hard disk or removable racks 1 and 2
Port 80 connector	Internal	X45	Connection for Port 80 / mode switch

Assignment of the SCSI activity connector, X12 Type JST B2B-PH-SM3-TB

Pin no.	Short name	Meaning	Input / output
1	NC	-	-
2	SCSI HD_N	0-V level means that the SCSI interface is active	Input

External Reset, X6, Type JST B2B-PH-SM3-TB

Pin no.	Short name	Meaning	Input / Output
1	GND	Ground	-
2	Reset	0 V level means reset	Input

External Power button, X47, Type JST B2B-PH-SM3-TB

Pin no.	Short name	Meaning	Input / Output
1	EXT_PWRBTN	OV level means Power button pressed	Input
2	GND	Ground	-

Pin assignment of the internal USB connector, X420

Pin no.	Short name	Meaning	Input / output
1	VCC	+ 5 V (fused)	Output
2	VCC	+ 5 V (fused)	Output
3	-Data USB1	Data channel	Input / output
4	-Data USB3	Data channel	Input / output
5	+Data USB1	Data channel	Input / output
6	+Data USB3	Data channel	Input / output
7	GND	Ground	-
8	GND	Ground	-
9	GND	Ground	-
10	Key	-	-

Note

Contact Customer Support or the Repair Center for detailed information on pin assignments of the interfaces.

SATA data interface, X50, 51, 52, 53, 54, 55

Pin no.	Short name	Meaning	Input / output
1	GND	Ground	-
2	TX-P	Transmitter positive	Output
3	TX-N	Transmitter negative	Output
4	GND	Ground	-
5	RX-N	Receiver negative	Input
6	RX-P	Receiver positive	Input
7	GND	Ground	-

Pin assignment of the power supply fan monitoring interface, X130

Pin no.	Short name	Meaning	Input / output
1 to 3	Reserved	-	-
4	Tacho signal	Monitoring signal	Input
5 - 7	Reserved	-	-
8	Ground	-	-

Pin assignment of the front fan interface, X131, X132

Pin no.	Short name	Meaning	Input / output
1	GND	Ground	-
2	VCC	+12 V fused	Output
3	Tacho signal	Monitoring signal	Input
4	PWM	Speed setting	Output

Pin assignment of the supply for the serial ATA drives X25, X26, X27, X28, X29, X30

Pin no.	Short name	Meaning	Input / output
1	+12 V	Power supply	Output
2	GND	Ground	-
3	GND	Ground	-
4	+5 V	Power supply	Output
5	+3.3 V	Power supply	Output

Pin assignment of the PEG interface (PCIe X16 socket), X610

Signal	Pin no.	Pin no.	Signal
P12V	B1	A1	P12V
P12V	B2	A2	P12V
P12V	B3	A3	P12V
GND	B4	A4	GND
SMB_CLK2	B5	A5	n.c.
SMB_DATA2	B6	A6	n.c.
GND	B7	A7	n.c.
P3V3	B8	A8	n.c.
n.c.	B9	A9	P3V3
AUX_3V	B10	A10	P3V3
WAKE2	B11	A11	PCIE_RESET_L
n.c.	B12	A12	GND

Signal	Pin no.	Pin no.	Signal
GND	B13	A13	PCIE0_ECLK
PCIEX16_TX_P(15)	B14	A14	PCIE0_ECLK_N
PCIEX16_TX_N(15)	B15	A15	GND
GND	B16	A16	PCIEX16_RX_P(15)
SDVO_CTRLCLK	B17	A17	PCIEX16_RX_N(15)
GND	B18	A18	GND
PCIEX16_TX_P(14)	B19	A19	n.c.
PCIEX16_TX_N(14)	B20	A20	GND
GND	B21	O21	PCIEX16_RX_P(14)
GND	B22	A22	PCIEX16_RX_N(14)
PCIEX16_TX_P(13)	B23	A23	GND
PCIEX16_TX_N(13)	B24	A24	GND
GND	B25	A25	PCIEX16_RX_P(13)
GND	B26	A26	PCIEX16_RX_N(13)
PCIEX16_TX_P(12)	B27	A27	GND
PCIEX16_TX_N(12)	B28	A28	GND
GND	B29	A29	PCIEX16_RX_P(12)
n.c.	B30	A30	PCIEX16_RX_N(12)
SDVO_CTRLDATA	B31	A31	GND
GND	B32	A32	n.c.
PCIEX16_TX_P(11)	B33	A33	n.c.
PCIEX16_TX_N(11)	B34	A34	GND
GND	B35	A35	PCIEX16_RX_P(11)
GND	B36	A36	PCIEX16_RX_N(11)
PCIEX16_TX_P(10)	B37	A37	GND
PCIEX16_TX_N(10)	B38	A38	GND
GND	B39	A39	PCIEX16_RX_P(10)
GND	B40	A40	PCIEX16_RX_N(10)
PCIEX16_TX_P(9)	B41	A41	GND
PCIEX16_TX_N(9)	B42	A42	GND
GND	B43	A43	PCIEX16_RX_P(9)
GND	B44	A44	PCIEX16_RX_N(9)
PCIEX16_TX_P(8)	B45	A45	GND
PCIEX16_TX_N(8)	B46	A46	GND
GND	B47	A47	PCIEX16_RX_P(8)
MCH_CFG_20	B48	A48	PCIEX16_RX_N(8)
GND	B49	A49	GND
PCIEX16_TX_P(7)	B50	A50	n.c.
PCIEX16_TX_N(7)	B51	A51	GND
GND	B52	A52	PCIEX16_RX_P(7)
GND	B53	A53	PCIEX16_RX_N(7)
PCIEX16_TX_P(6)	B54	A54	GND

Signal	Pin no.	Pin no.	Signal
PCIEX16_TX_N(6)	B55	A55	GND
GND	B56	A56	PCIEX16_RX_P(6)
GND	B57	A57	PCIEX16_RX_N(6)
PCIEX16_TX_P(5)	B58	A58	GND
PCIEX16_TX_N(5)	B59	A59	GND
GND	B60	A60	PCIEX16_RX_P(5)
GND	B61	A61	PCIEX16_RX_N(5)
PCIEX16_TX_P(4)	B62	A62	GND
PCIEX16_TX_N(4)	B63	A63	GND
GND	B64	A64	PCIEX16_RX_P(4)
GND	B65	A65	PCIEX16_RX_N(4)
PCIEX16_TX_P(3)	B66	A66	GND
PCIEX16_TX_N(3)	B67	A67	GND
GND	B68	A68	PCIEX16_RX_P(3)
GND	B69	A69	PCIEX16_RX_N(3)
PCIEX16_TX_P(2)	B70	A70	GND
PCIEX16_TX_N(2)	B71	A71	GND
GND	B72	A72	PCIEX16_RX_P(2)
GND	B73	A73	PCIEX16_RX_N(2)
PCIEX16_TX_P(1)	B74	A74	GND
PCIEX16_TX_N(1)	B75	A75	GND
GND	B76	A76	PCIEX16_RX_P(1)
GND	B77	A77	PCIEX16_RX_N(1)
PCIEX16_TX_P(0)	B78	A78	GND
PCIEX16_TX_N(0)	B79	A79	GND
GND	B80	A80	PCIEX16_RX_P(0)
n.c.	B81	A81	PCIEX16_RX_N(0)
n.c.	B82	A82	GND

Pin assignment of the PCI-PCIe interface (PCIe X16 socket), X10

Signal	Pin no.	Pin no.	Signal
N12V	B1	A1	AUX_5V
P12V	B2	A2	P12V
P12V	B3	A3	P12V
GND	B4	A4	GND
PCI_INT_N(7)	B5	A5	PCI_INT_N(6)
PCI_INT_N(5)	B6	A6	PCI_INT_N(8)
P5V	B7	A7	P5V
PCI_REQ_N(4)	B8	A8	P5V
PCI_REQ_N(3)	B9	A9	PCI_GNT_N(4)

Signal	Pin no.	Pin no.	Signal
GND	B10	A10	PCI_GNT_N(3)
PCI0_PCLK	B11	A11	AUX_3V
GND	B12	A12	PLT_RST_N_BUFF
PCI1_PCLK	B13	A13	GND
GND	B14	A14	PCI_GNT_N(1)
PCI_REQ_N(1)	B15	A15	PCI_GNT_N(2)
PCI_REQ_N(2)	B16	A16	GND
P5V	B17	A17	PME
PCI_AD(31)	B18	A18	PCI_AD(30)
PCI_AD(29)	B19	A19	P3V3
GND	B20	A20	PCI_AD(28)
PCI_AD(27)	B21	O21	PCI_AD(26)
PCI_AD(25)	B22	A22	GND
P3V3	B23	A23	PCI_AD(24)
PCI_CBE_N(3)	B24	A24	n.c.
PCI_AD(23)	B25	A25	P3V3
GND	B26	A26	PCI_AD(22)
PCI_AD(21)	B27	A27	PCI_AD(20)
PCI_AD(19)	B28	A28	GND
P3V3	B29	A29	PCI_AD(18)
PCI_AD(17)	B30	A30	PCI_AD(16)
PCI_CBE_N(2)	B31	A31	P3V3
GND	B32	A32	FRAME
IRDY	B33	A33	GND
P3V3	B34	A34	TRDY
DEVSEL	B35	A35	GND
GND	B36	A36	STOP
PLOCK	B37	A37	P3V3
PERR	B38	A38	SMB_CLK1
P3V3	B39	A39	SMB_DAT1
SERR	B40	A40	GND
P3V3	B41	A41	PAR
PCI_CBE_N(1)	B42	A42	PCI_AD(15)
PCI_AD(14)	B43	A43	P3V3
GND	B44	A44	PCI_AD(13)
PCI_AD(12)	B45	A45	PCI_AD(11)
PCI_AD(10)	B46	A46	GND
GND	B47	A47	PCI_AD(9)
PCI_AD(8)	B48	A48	PCI_CBE_N(0)
PCI_AD(7)	B49	A49	P3V3
P3V3	B50	A50	PCI_AD(6)
PCI_AD(5)	B51	A51	PCI_AD(4)

Signal	Pin no.	Pin no.	Signal
PCI_AD(3)	B52	A52	GND
GND	B53	A53	PCI_AD(2)
PCI_AD(1)	B54	A54	PCI_AD(0)
P5V	B55	A55	P5V
P5V	B56	A56	P5V
P5V	B57	A57	PCIE_1X4X
AUX_5V	B58	A58	GND
WAKE1	B59	A59	PLT_RST_N_PCIE4X
GND	B60	A60	PS_ON
GND	B61	A61	PS_PWRGD
n.c.	B62	A62	GND
n.c.	B63	A63	GND
GND	B64	A64	PCIE_TX_P(1)
GND	B65	A65	PCIE_TX_N(1)
PCIE_RX_P(1)	B66	A66	GND
PCIE_RX_N(1)	B67	A67	GND
GND	B68	A68	PCIE1_ECLK
GND	B69	A69	PCIE1_ECLK_N
PCIE_TX_P(2)	B70	A70	GND
PCIE_TX_N(2)	B71	A71	GND
GND	B72	A72	PCIE_RX_P(2)
GND	B73	A73	PCIE_RX_N(2)
PCIE_TX_P(3)	B74	A74	GND
PCIE_TX_N(3)	B75	A75	GND
GND	B76	A76	PCIE_RX_P(3)
GND	B77	A77	PCIE_RX_N(3)
PCIE_TX_P(4)	B78	A78	GND
PCIE_TX_N(4)	B79	A79	GND
GND	B80	A80	PCIE_RX_P(4)
RESERVE1 *)	B81	A81	PCIE_RX_N(4)
RESERVE2 *)	B82	A82	GND

16.2 Displays and operator panel

16.2.1 Operating panel - Layout and function

The operator panel is interconnected with the motherboard using a 26-pin connecting cable.

Operator panel	Item	Description
	①	USB port (only the top USB contact is used)
	②	9-pole pin header Connection to the motherboard (x420)
	③	External reset connector
	④	Connection to the motherboard (x46)
	⑤	LEDs
	⑥	On/off pushbutton Single-pole pushbutton
	⑦	Reset button Single-pole pushbutton
	⑧	USB port

16.2.2 Pin assignment of the OP connectors

External Reset (3), type: JST B2B-PH-SM3-TB

Pin no.	Short name	Meaning	Input / output
1	PWR Good	External reset, (IO low max. 30 mA)	
2	GND	Ground	

The device is reset when pins 1 and 2 (for example, by means of a pushbutton) are short-circuited. It remains in this state until the short-circuit is cleared.

Note

Contact Customer Support or the Repair Center for detailed information on pin assignments of the interfaces.


16.3 Bus board

16.3.1 Bus board - Layout and principle of operation


The bus board is designed as a link between the motherboard and the expansion modules. It is mounted using six screws.

This bus board is available in two versions:


Variant 1: Low end (8 slots)	
7 PCI slots, 2 upstream of a PCI2PCI bridge, 5 downstream	
Blue line	Upstream of the PCI bridge (primary PCI bus)
Red line	Downstream of the PCI bridge (secondary PCI bus)
1 PCIe-x16 (PEG slot, or PCIe-x8 IO)	

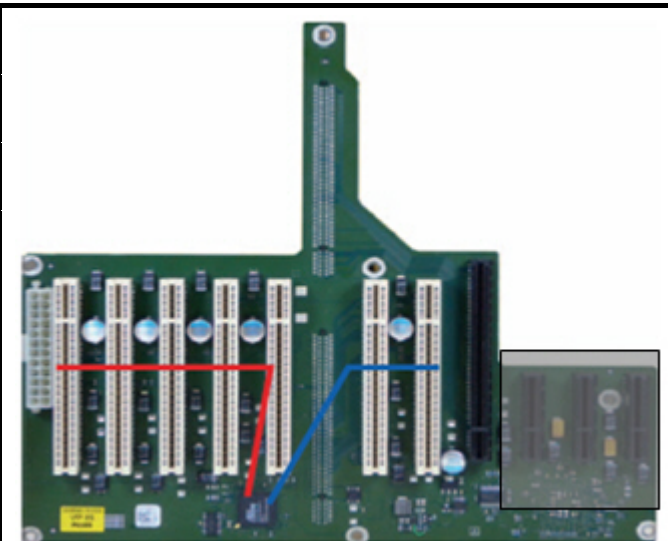

Variant 2: High end (11 slots)	
7 PCI slots, 2 upstream of a PCI2PCI bridge, 5 downstream	
Blue line	Upstream of the PCI bridge (primary PCI bus)
Red line	Downstream of the PCI bridge (secondary PCI bus)
1 PCIe-x16 (PEG slot, or PCIe-x8 IO)	
3 x PCIe-x4 slots	

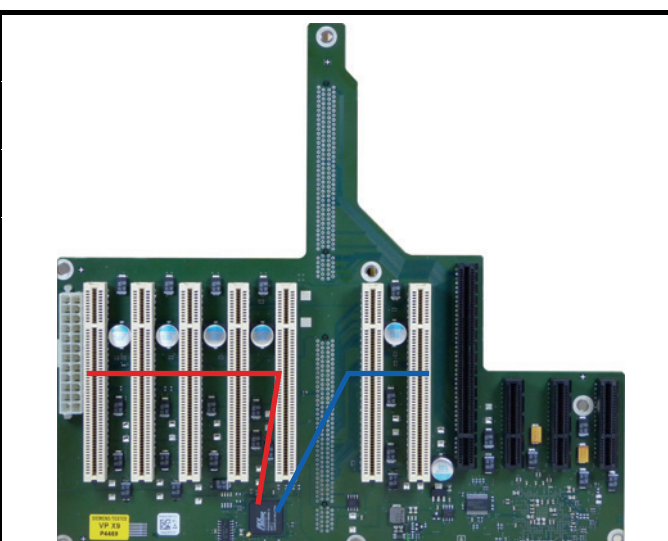

16.3 Bus board

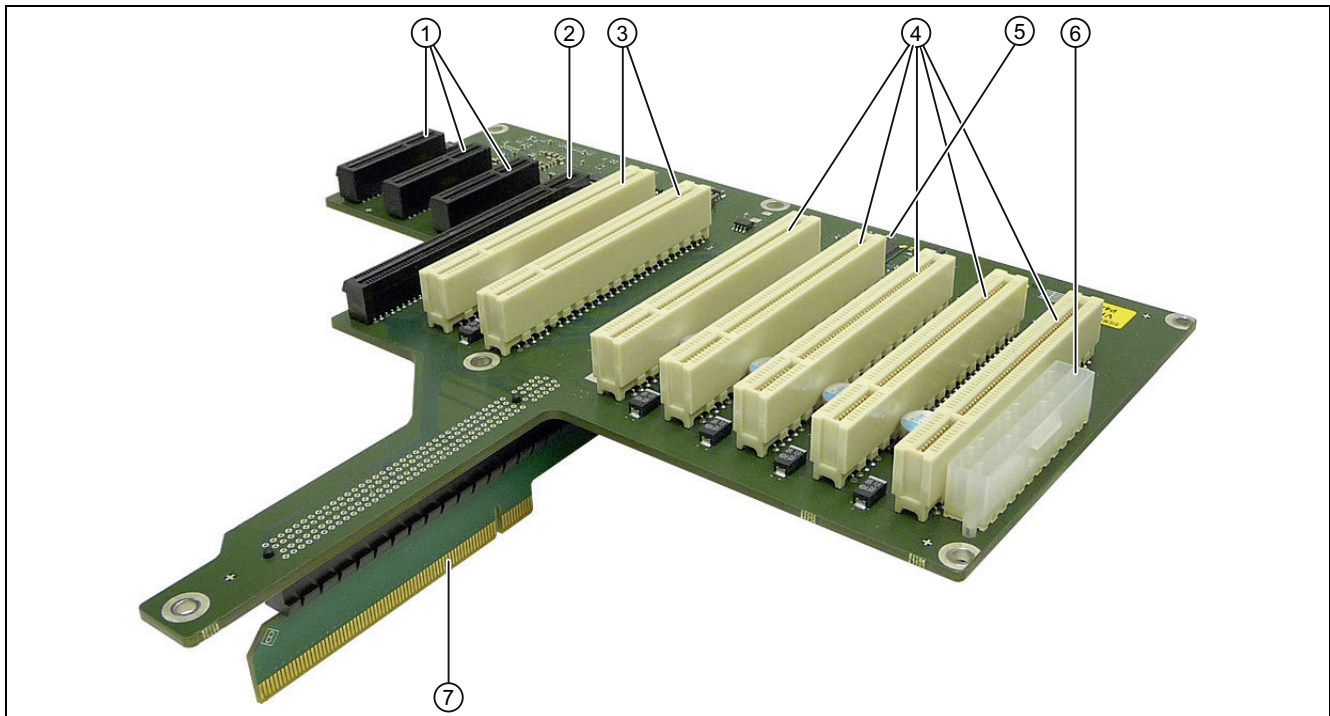

①	High-end equipment variant with 3 x PCIe x4 slots (Slot 1, 2, 3), with PCIe switch and circuit
②	PCIe-x16 (PEG slot, or PCIe-x8 IO, Slot 4)
③	Primary PCI bus: 2 slots (Slot 5, 6)
④	Secondary PCI bus: 5 slots (Slots 7, 9, 10, 11)
⑤	PCI, PCIe 4lane, PCIe 16lane Riser
⑥	BTX power connector
⑦	PCI2PCI bridge

Can host expansion modules conforming to PCI specification (Rev. 2.3) or PCI specification 2 All PCI slots support master mode. Power is directly supplied to the expansion modules via the bus board connection.

16.3.2 Pin assignment of the bus board connectors

Pinout for PCI slots (slots 5, 6, 7, 8, 9, 10, 11)

	5V System Environment	
	Side B	Side A
1	-12 V	TRST#
2	TCK	+12 V
3	Ground	TMS
4	TDO	TDI
5	+5 V	+5 V
6	+5 V	INTA#
7	INTB#	INTC#
8	INTD#	+5 V
9	PRSNT1#	Reserved
10	Reserved	+5 V (I/O)
11	PRSNT2#	Reserved
12	Ground	Ground
13	Ground	Ground
14	Reserved	Reserved
15	Ground	RST#
16	CLK	+5 V (I/O)
17	Ground	GNT#
18	REQ#	Ground
19	+5 V (I/O)	Reserved
20	AD[31]	AD[30]
21	AD[29]	+3.3 V
22	Ground	AD[28]
23	AD[27]	AD[26]
24	AD[25]	Ground
25	+3.3 V	AD[24]
26	C/BE[3]#	IDSEL
27	AD[23]	+3.3 V
28	Ground	AD[22]
29	AD[21]	AD[20]
30	AD[19]	Ground
31	+3.3 V	AD[18]
32	AD[17]	AD[16]
33	C/BE[2]#	+3.3 V
34	Ground	FRAME#
35	IRDY#	Ground
36	+3.3 V	TRDY#

16.3 Bus board

37	DEVSEL#	Ground
38	Ground	STOP#
39	LOCK#	+3.3 V
40	PERR#	SDONE
41	+3.3 V	SBO#
42	SERR#	Ground
43	+3.3 V	PAR
44	C/BE[1]#	AD[15]
45	AD[14]	+3.3 V
46	Ground	AD[13]
47	AD[12]	AD[11]
48	AD[10]	Ground
49	Ground	AD[09]
50	CONNECTOR KEY	
51	CONNECTOR KEY	
52	AD[08]	C/BE[0]#
53	AD[07]	+3.3 V
54	+3.3 V	AD[06]
55	AD[05]	AD[04]
56	AD[03]	Ground
57	Ground	AD[02]
58	AD[01]	AD[00]
59	+5 V (I/O)	+5 V (I/O)
60	ACK64#	REQ64#
61	+5 V	+5 V
62	+5 V	+5 V

Pinout of the PEG interface (PCIe x16 socket), Slot 4

Signal	Pin no.	Pin no.	Signal
P12V	B1	A1	P12V
P12V	B2	A2	P12V
P12V	B3	A3	P12V
GND	B4	A4	GND
SMB_CLK2	B5	A5	n.c.
SMB_DATA2	B6	A6	n.c.
GND	B7	A7	n.c.
P3V3	B8	A8	n.c.
n.c.	B9	A9	P3V3
AUX_3V	B10	A10	P3V3
WAKE2	B11	A11	PCIE_RESET_L
n.c.	B12	A12	GND

Signal	Pin no.	Pin no.	Signal
GND	B13	A13	PCIE0_ECLK
PCIEX16_TX_P(15)	B14	A14	PCIE0_ECLK_N
PCIEX16_TX_N(15)	B15	A15	GND
GND	B16	A16	PCIEX16_RX_P(15)
SDVO_CTRLCLK	B17	A17	PCIEX16_RX_N(15)
GND	B18	A18	GND
PCIEX16_TX_P(14)	B19	A19	n.c.
PCIEX16_TX_N(14)	B20	A20	GND
GND	B21	O21	PCIEX16_RX_P(14)
GND	B22	A22	PCIEX16_RX_N(14)
PCIEX16_TX_P(13)	B23	A23	GND
PCIEX16_TX_N(13)	B24	A24	GND
GND	B25	A25	PCIEX16_RX_P(13)
GND	B26	A26	PCIEX16_RX_N(13)
PCIEX16_TX_P(12)	B27	A27	GND
PCIEX16_TX_N(12)	B28	A28	GND
GND	B29	A29	PCIEX16_RX_P(12)
n.c.	B30	A30	PCIEX16_RX_N(12)
SDVO_CTRLDATA	B31	A31	GND
GND	B32	A32	n.c.
PCIEX16_TX_P(11)	B33	A33	n.c.
PCIEX16_TX_N(11)	B34	A34	GND
GND	B35	A35	PCIEX16_RX_P(11)
GND	B36	A36	PCIEX16_RX_N(11)
PCIEX16_TX_P(10)	B37	A37	GND
PCIEX16_TX_N(10)	B38	A38	GND
GND	B39	A39	PCIEX16_RX_P(10)
GND	B40	A40	PCIEX16_RX_N(10)
PCIEX16_TX_P(9)	B41	A41	GND
PCIEX16_TX_N(9)	B42	A42	GND
GND	B43	A43	PCIEX16_RX_P(9)
GND	B44	A44	PCIEX16_RX_N(9)
PCIEX16_TX_P(8)	B45	A45	GND
PCIEX16_TX_N(8)	B46	A46	GND
GND	B47	A47	PCIEX16_RX_P(8)
MCH_CFG_20	B48	A48	PCIEX16_RX_N(8)
GND	B49	A49	GND
PCIEX16_TX_P(7)	B50	A50	n.c.
PCIEX16_TX_N(7)	B51	A51	GND
GND	B52	A52	PCIEX16_RX_P(7)
GND	B53	A53	PCIEX16_RX_N(7)
PCIEX16_TX_P(6)	B54	A54	GND

Signal	Pin no.	Pin no.	Signal
PCIEX16_TX_N(6)	B55	A55	GND
GND	B56	A56	PCIEX16_RX_P(6)
GND	B57	A57	PCIEX16_RX_N(6)
PCIEX16_TX_P(5)	B58	A58	GND
PCIEX16_TX_N(5)	B59	A59	GND
GND	B60	A60	PCIEX16_RX_P(5)
GND	B61	A61	PCIEX16_RX_N(5)
PCIEX16_TX_P(4)	B62	A62	GND
PCIEX16_TX_N(4)	B63	A63	GND
GND	B64	A64	PCIEX16_RX_P(4)
GND	B65	A65	PCIEX16_RX_N(4)
PCIEX16_TX_P(3)	B66	A66	GND
PCIEX16_TX_N(3)	B67	A67	GND
GND	B68	A68	PCIEX16_RX_P(3)
GND	B69	A69	PCIEX16_RX_N(3)
PCIEX16_TX_P(2)	B70	A70	GND
PCIEX16_TX_N(2)	B71	A71	GND
GND	B72	A72	PCIEX16_RX_P(2)
GND	B73	A73	PCIEX16_RX_N(2)
PCIEX16_TX_P(1)	B74	A74	GND
PCIEX16_TX_N(1)	B75	A75	GND
GND	B76	A76	PCIEX16_RX_P(1)
GND	B77	A77	PCIEX16_RX_N(1)
PCIEX16_TX_P(0)	B78	A78	GND
PCIEX16_TX_N(0)	B79	A79	GND
GND	B80	A80	PCIEX16_RX_P(0)
n.c.	B81	A81	PCIEX16_RX_N(0)
n.c.	B82	A82	GND

Pinout for PCI Express slot x4 (slots 1, 2, 3)

	Side B	Side A
1	P12V	PRSNT1_N
2	P12V	GND
3	P12V	P12V
4	GND	GND
5	SMBCLK	PTCK
6	SMBDAT	PTDI
7	GND	PTDO
8	P3V3	PTMS
9	PTRST_N	P3V3
10	Aux_3V3	P3V3
11	PCIE_Wake_N	PCI RST_N
12	Reserved	GND
13	GND	GND
14	PCIE_TX_P(1)	GND
15	PCIE_TX_N(1)	GND
16	M	PCIE_RX_P(1)
17	PRSNT2_N	PCIE_RX_N(1)
18	GND	GND
19	PCIE_TX_P(2)	Reserved
20	PCIE_TX_N(2)	GND
21	GND	PCIE_RX_P(2)
22	GND	PCIE_RX_N(2)
23	PCIE_TX_P(3)	GND
24	PCIE_TX_N(3)	GND
25	GND	PCIE_RX_P(3)
26	GND	PCIE_RX_N(3)
27	PCIE_TX_P(4)	GND
28	PCIE_TX_N(4)	GND
29	GND	PCIE_RX_P(4)
30	GND	PCIE_RX_N(4)
31	PRSNT2_N	GND
32	GND	Reserved

16.3.3 Interrupt assignment of the slot connectors on the bus board

Slot No. / ACPI/IRQ Host IRQ Line	IRQ number																								Comments
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	A	B	C	D	E	F	G	H	
Slot 4 (PCIe-x16)									Z								Y								
Slot 1 (PCIe-X4)					Z					Z							Y								
									Z									Y							
									Z									Y							
Slot 2 (PCIe-X4)											Z						Y								
										Z								Y							
											Z							Y							
Slot 3 (PCIe-X4)												Z						Y							
												Z						Y							
												Z							Y						
Slot 5 and 8 PCI													Z							Y					
													Z								Y				
													Z									Y			
													Z										Y		
Slot 6 and 9													Z										Y		
													Z										Y		
													Z										Y		
													Z										Y		
Slot 7 and 10 PCI										Z													Y		
											Z												Y		
												Z											Y		
													Z										Y		
Slot 11														Z									Y		
														Z									Y		
														Z									Y		
														Z									Y		

- Y Interrupt in APIC mode
- Z BIOS Default Interrupt PIC mode, e.g. DOS
- 1) Host PCI-IRQ A to H is assigned to IRQ 16 to 23 permanently in APIC mode. Host PCI-IRQ A to H is assigned to IRQ 0 to 15 automatically in PIC mode by the BIOS. A specific assignment cannot be forced.

NOTICE

As long as no modules are plugged into slots 1, 2, 3, IRQs 17, 18, 19 are not used by the PCIe switch, the display only shows that these IRQs would be used if modules were plugged in.

The PCIe switch is displayed in Windows Device Management as "PCI standard PCI-to-PCI bridge".

16.3.4 Exclusive PCI hardware interrupt

Applications demanding high-performance interrupt handling require high-speed hardware interrupt reaction. The PCI hardware interrupt should only be used by one resource in order to ensure high-speed reaction of the hardware.

Setting up an exclusive interrupt on the device (only APIC mode)

An exclusive interrupt can only be set for PCI Slot 5 or 8 and Slot 6 or 9. Further exclusive interrupts for use at the slots are not available.

Assigning exclusive interrupts in BIOS Setup (PIC mode only)

The interrupts are automatically assigned to the slots at system startup due to the default settings in system BIOS.

Several slots may share the same interrupt, depending on the system configuration. This functionality is known as interrupt sharing. Exclusive interrupts are not available in PIC mode. Disable specific system resources in order to obtain exclusive interrupts. The resulting free interrupt is then assigned to the slots. The lower free IRQ is assigned to the lower Slot No.

If a conflict arises through the assignment, a message will be displayed and has to be acknowledged.

Message: "Resources Conflict. Please re-select [ok]"

The interface that causes the conflict is disabled automatically. Additional information is available in the section Interrupt assignments (Page 167).

Example:

If you want to use "IRQ 3" for a slot, you have to disable the "Internal COM 2" by using Advanced > Peripheral Configuration. IRQ 3 is then assigned automatically to the slot that has the lowest slot number.

	IRQ assignments for Windows (APIC mode)
Ethernet 1	16 ^{1) 2)}
Ethernet 2	17 ¹⁾
PROFIBUS/MPI	19 ¹⁾
PCI slot 1	20 ¹⁾
PCI slot 2	21 ¹⁾
PCI Express slot	16 ^{1) 3)}

1) Requirement: The modules in the PCI slots each require only one interrupt

2) Requirement: VGA and PCI Express do not require an interrupt

3) Requirement: VGA does not require an interrupt and Ethernet1 is disabled

16.4 System resources

16.4.1 Currently allocated system resources

All system resources (hardware addresses, memory configuration, allocation of interrupts, DMA channels) are assigned dynamically by the Windows OS, depending on the hardware configuration, drivers and connected external devices. You can view the current configuration of system resources or possible conflicts with the following operating systems:

Windows XP Professional	Start > Run , then enter "msinfo32" in Open field and confirm with OK
Windows 7	Start > Enter "msinfo32" in the search function

16.4.2 System resources used by the BIOS/DOS

The following tables describe the system resources for the factory state of the device.

16.4.2.1 I/O address allocation

I/O address (hex)		Size (bytes)	Description of the basic function	Possible alternative function
from	to			
0000	000F	16	DMA controller	
0010	001F	16	Motherboard resources	
0020	0021	2	Programmable interrupt controller	
0022	003F	30	Motherboard resources	
0040	0043	4	System timer	
0044	005F	28	Motherboard resources	
0060	0060	1	Keyboard controller	
0061	0061	1	System loudspeaker	
0062	0063	2	Motherboard resources	
0064	0064	1	Keyboard controller	
0067	006F	9	Motherboard resources	
0070	0075	6	System CMOS/real-time clock	
0076	0080	11	Motherboard resources	
0081	008F	15	DMA controller	
0090	009F	16	Motherboard resources	
00A0	00A1	2	Programmable interrupt controller	
00A2	00BF	30	Motherboard resources	
00C0	00DF	32	DMA controller	
00E0	00EF	16	Motherboard resources	
00F0	00FE	15	Numeric data processor	
0110	016F	96	Not used	
0170	0177	8	Secondary EIDE channel	
0178	01EF	120	Not used	
01F0	01F7	8	Primary EIDE channel	Switchable in Setup, then free
01F8	01FF	8	Not used	
0200	0207	8	Reserved for game port	
0208	02E7	224	Not used	
02E8	02EF	8	Reserved	
02F8	02FF	8	COM2	Switchable in Setup, then free
0300	031F	32	Not used	
0320	032F	16	Not used	
0330	033F	16	Not used	
0340	035F	32	Not used	

I/O address (hex)				
0360	0367	8	Not used	
0370	0371	2	SOM	
0372	0375	4	Not used	
0376	0376	1	Secondary EIDE channel	
0378	037F	8	LPT 1	Switchable in Setup, then free
0380	03AF	48	Not used	
03B0	03BB	12	Graphics	
03BC	03BF	4	Reserved	
03C0	03DF	16	Graphics	
03E0	03E7	8	Not used	
03E8	03EF	6	Reserved	
03F0	03F5	6	Standard floppy disk controller	
03F6	03F6	1	Primary EIDE channel	
03F7	03F7	1	Standard floppy disk controller	
03F8	03FF	8	COM1	Switchable in Setup, then free
Dynamic range; resources are managed by means of Plug and Play functionality				
0400	0777	888	Not used	
0778	077F	8	ECP LPT 1	
0780	07FF	128	Not used	
0800	080F	16	ACPI communications range	Fixed
0810	0CFB	1260	PCI configuration index	Fixed
0CFC	0CFF	4	PCI configuration data	Fixed
0D00	0EFF	512	Not used	
0F00	0F4F	80	Super IO	
0F50	0FFF	176	Not used	
1000	10FF	256	Used internally	
1180	11FF	128	Used internally	
1800	187F	128	Used internally	
8800	8BFF	1023	SATA RAID Controller	
8C00	FEFF	29288	Not used for SATA RAID	
8870	8897	39	PATA RAID Controller	
8898	FEFF	30311	Not used for PATA RAID	
1880	886F	28655	Not used	
FF00	FF0F	16	EIDE bus master register	

16.4.2.2 Interrupt assignments

The functions are assigned different interrupts, depending on the operating system. A distinction is made between the PIC and APIC modes.

Function	IRQ number																Comment								
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15		16	17	18	19	20	21	22	23
IRQ (ACPI mode)	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
IRQ (PIC mode)	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Host PCI IRQ Line																	A	B	C	D	E	F	G	H	1)
Function																									
Timer output 0	X																								Fixed
Keyboard		X																							Fixed
Cascaded (IRQ9)			X																						Fixed
Serial interface 2				X																					Can be switched off
Serial interface 1					X																				Can be switched off
FD controller						X																			Can be switched off
Parallel interface 1							X																		Can be switched off
Real time clock (RTC)								X																	Can be switched off
PS/2 mouse												X													Fixed, can be switched off
Numerical processor													X												Fixed
SATA											Z													Y	Can be switched off
USB Port 0/1											Z													Y	Cannot be switched off
USB Port 2/3											Z													Y	Cannot be switched off
USB Port 4/5										Z													Y		Cannot be switched off
USB 2.0 controller										Z													Y		Can be switched off
Ethernet 1										Z							Y								Can be switched off
Ethernet 2										Z							Y								Can be switched off
VGA										Z							Y								Can be switched off
PROFIBUS or PROFINET						Z														Y					Optional, can be switched off
Audio										Z							Y								Can be switched off

Y Interrupt in APIC mode

Z BIOS Default Interrupt PIC mode, e.g. DOS

1) Host PCI-IRQ A to H is assigned to IRQ 16 to 23 permanently in APIC mode. Host PCI-IRQ A to H is assigned to IRQ 0 to 15 automatically in PIC mode by the BIOS. A specific assignment cannot be forced.

PCI / PCIe cards and the on-board PCI / PCIe devices require PCI interrupt channels. These interrupt channels can be shared and are plug-and-play compatible, that is, several devices can share the same interrupt. The IRQ is assigned automatically.

PCI interrupt channels must be derived from the PIC interrupt pool, that is PCI modules also use PIC resources. These IRQ channels are assigned automatically.

The Host PCI IRQ channels A to H are permanently assigned in APIC mode. These default settings cannot be modified.

The Host PCI IRQ channels A to H in PIC mode are assigned automatically in BIOS. The assignment can be changed by disabling functions. Resulting free IRQs are assigned to the slots.

16.4.2.3 Memory address assignments

PCI VGA modules can be operated with expansion ROM up to 48K.

Address		Size	Description of the basic function	Possible alternative function
from	to			
0000 0000	0007 FFFF	512K	Conventional system memory	
0008 0000	0009 F7FF	127K	Conventional system memory extended	
0009 F800	0009 FFFF	2K	XBDA, extended Bios Data Area	
000A 0000	000A FFFF	64K	VGA graphics refresh memory	Shared SMM for power management
000B 0000	000B 7FFF	32K	SW graphics / text refresh memory	Not used
000B 8000	000B FFFF	32K	VGA graphics/text refresh memory	
000C 0000	000C BFFF	48K	VGA BIOS expansion	
000C 0000	000C E9FF	59K ¹⁾	VGA BIOS	Always occupied
000C F000	000D FFFF	68K ¹⁾	Not used (no RAID, no PXE)	via EMM High DOS Memory
000C F000	000C FFFF	4K ¹⁾	PXE	
000D 0000	000D FFFF	64K ¹⁾	Not used (no RAID, with PXE)	via EMM High DOS Memory
000C F000	000D 37FF	18K ¹⁾	RAID	
000D 3800	000D FFFF	50K ¹⁾	Not used (RAID, no PXE)	via EMM High DOS Memory
000C F000	000D 47FF	22K ¹⁾	RAID and PXE	
000D 4800	000D FFFF	46K ¹⁾	Not used	
000E 0000	000E 1FFF	8K	USB	
000E 2000	000E 3FFF	8K	DMI data	
000E 4000	000F FFFF	112K	System BIOS	
0010 0000	CFFF FFFF	3.5 GB	System memory at ≥ 4 GB memory expansion and 32-bit OS	Depends on memory configuration
E000 0000	FFEF FFFF	511 MB	PCIe Configuration Space	
FFF0 0000	FFFF FFFF	1 MB	Firmware HUB	
		8 GB	RAM expansion	

¹⁾ Optional memory allocation, depending on settings in BIOS Setup

16.5 BIOS Setup

16.5.1 Overview

BIOS Setup program

BIOS SETUP allows you to set the hardware configuration, and system properties. SETUP is also used to set the time and date of the realtime clock.

Changing the device configuration

Your device configuration is preset for operating with the included software. You should only change the default values if you have modified the technical configuration your device, or if a fault occurs when the unit is powered up.

16.5.2 Starting BIOS Setup

Start the setup program as follows:

1. Reset the device (warm or cold restart).

In the figures shown, the default settings differ based on the device versions. With the default setting of the Box PC, the display shown below appears following power-on, for example:

```
SIMATIC IPC847C PROFIBUS   A5E02619226-ES003

F2 is pressed. Go to Setup Utility.

System Information
BIOS version       : L15.01.02.3
System Memory Speed: 1067 MHz
Processor Type     : Intel(R) Core(TM) i7 CPU 610 @ 2.53GHz

2,004,484,096 bytes of system memory tested OK
```

On completion of the POST, the BIOS gives you the opportunity of starting the SETUP program. The following message appears on the screen:

- Press F2 go to Setup Utility
- Press F12 go to Boot Manager

2. Press the F2 key while the BIOS prompt appears on the screen.

16.5.3 BIOS Setup menus

The various menus and submenus are listed on the next pages. You can obtain information on the selected SETUP item from the "item-specific help" part of the respective menu.

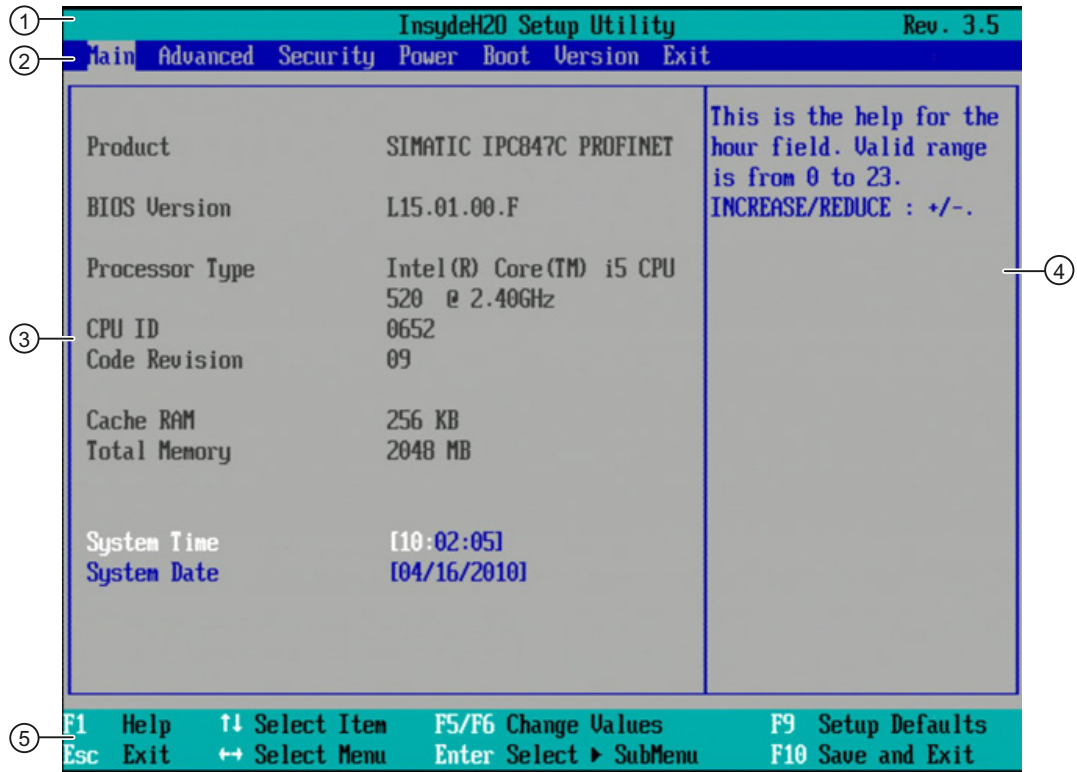


Figure 16-2 SETUP Main menu (example)

① Header	④ Help window
② Menu bar	⑤ Command line
③ System information	

Menu layout

The screen is divided into four sections. In the top section ②, you can select the submenus [Main], [Advanced], [Security], [Power], [Boot], [Version], [Exit]. You can select various settings or submenus in the left middle section ③. Short help texts are displayed on the right ④ for currently selected menu entries; the bottom section contains information for operator input.

The following figures represent examples of specific device configurations. The screen content may deviate slightly depending on the equipment actually supplied.

You can move between the menu forms using the cursor keys [←] left and [→] right.

Menu	Meaning
Main	System functions are set here
Advanced	An extended system configuration can be set here
Security	This is where setting security functions such as the password are set.
Power	The behavior of the device after a power failure and after wake events is specified here.
Boot	This is where the boot priority is specified.
Version	This shows device-specific information (such as the release version).
Exit	Used for terminating and saving.

16.5.4 Main menu

InsydeH2O Setup Utility		Rev. 3.5
Main	Advanced	Security
Power	Boot	Version
Exit		
Product	SIMATIC IPC847C PROFIBUS	This is the help for the hour field. Valid range is from 0 to 23. INCREASE/REDUCE : +/-.
BIOS Version	L15.01.02.3	
Processor Type	Intel(R) Core(TM) i7 CPU 610 @ 2.53GHz	
CPU ID	0652	
Code Revision	0C	
Cache RAM	256 KB	
Total Memory	2048 MB	
System Time	[15:10:59]	
System Date	[11/19/2010]	
F1 Help	↑↓ Select Item	
Esc Exit	↔ Select Menu	Enter Select ▶ SubMenu
		F9 Setup Defaults
		F10 Save and Exit

Figure 16-3 Main menu (example)

Settings in the main menu

In the main menu, you can move up and down to select the following system configuration boxes by means of the [↑] up and [↓] down cursor keys:

Field	Meaning
System Time	For viewing and setting the current time
System Date	For viewing and setting the current date

System time and date

System Time and System Date indicate the current values. Once you have selected the appropriate option, you can use the [+] and [-] keys to modify the time setting

Hour: Minute: Second

and for the date

Month/Day/Year

You can navigate between the entries in the date and time fields (for example, from hour to minute) using the ENTER key.

16.5.5 Advanced menu

Menu layout

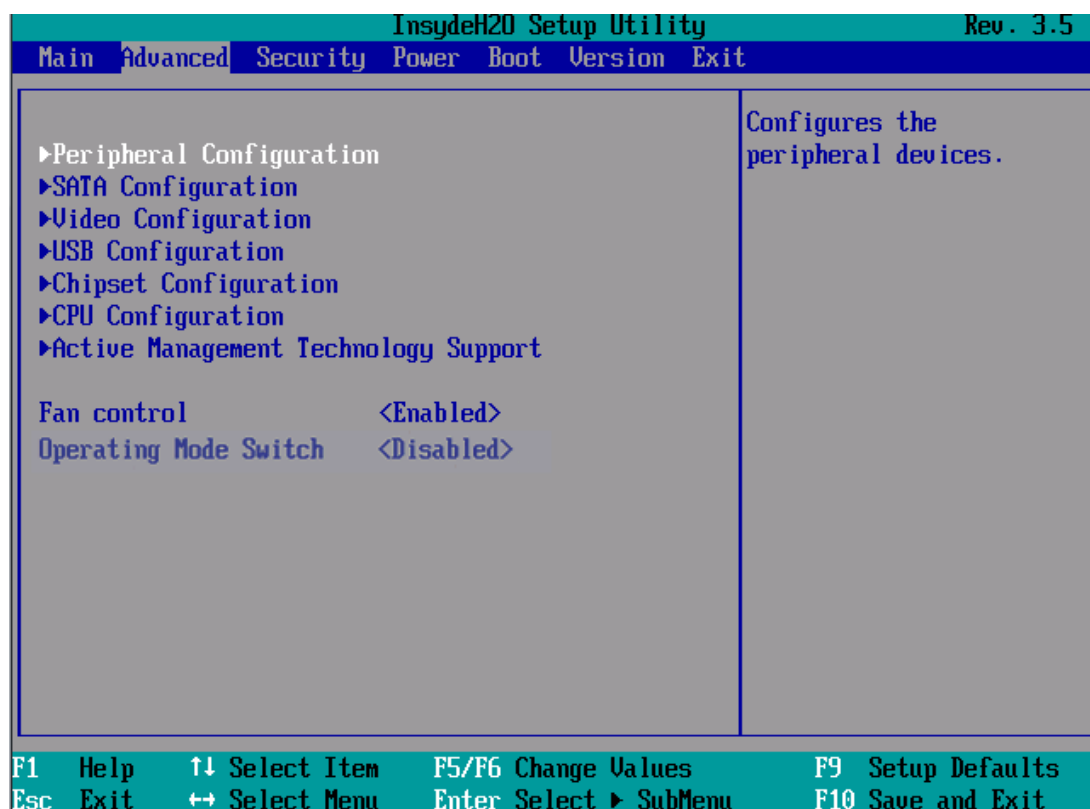


Figure 16-4 "Advanced" menu (example)

Settings in the Advanced Menu

Entry	Meaning
Peripheral Configuration	Configuration of components on the motherboard.
SATA Configuration	Configuration of the SATA interface.
Video Configuration	Configuration of the graphics interface
USB Configuration	Configuration of the USB ports
Chipset Configuration	Extended chipset configuration.
CPU Configuration	Configuration of CPU parameters
Active Management Technology Support	Configuration of the AMT functionality
Fan control	Activate/deactivate fan control. If deactivated, the fans always run at full speed.
Operating Mode Switch	Evaluate the mode switch.

Advanced menu > "Peripheral Configuration"

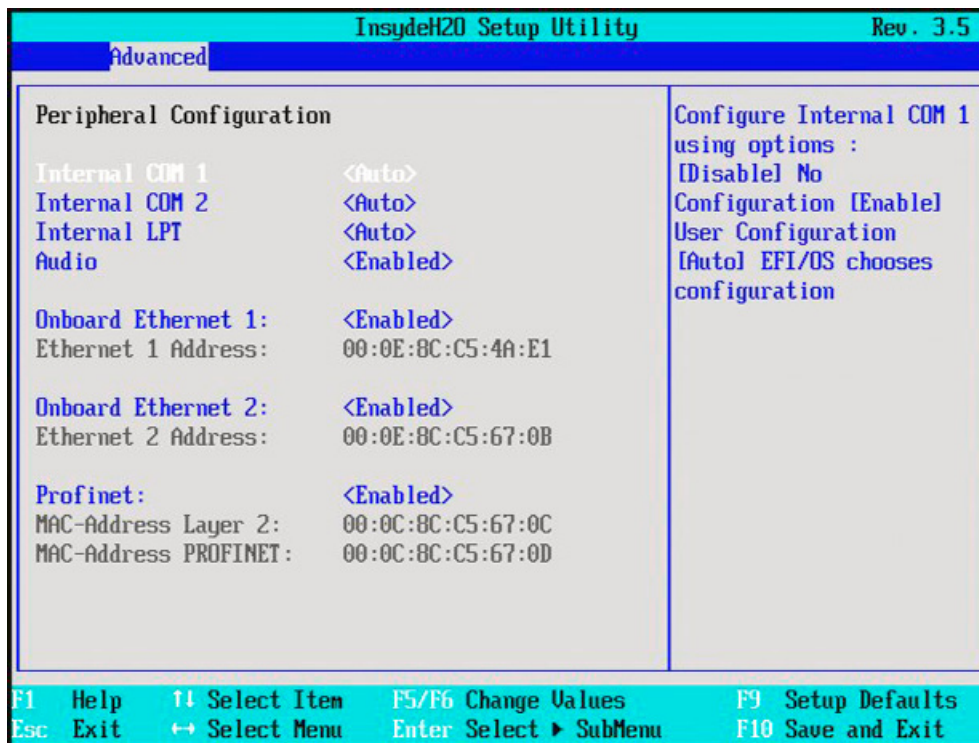


Figure 16-5 "Peripheral Configuration" submenu example

Entry	Meaning
Internal COM 1, Internal COM 2	Enable (Enabled) or disable (Disabled) the serial interface or configure it automatically (Auto). With Enabled, it is possible to specify the I/O base address and the interrupt. AUTO: BIOS switches on the COM. Resources are assigned in the OS per reconfiguration.
Internal LPT	Enable (Enabled) or disable (Disabled) the parallel interface or configure it automatically (Auto). With Enabled, it is possible to specify the I/O base address, the interrupt, mode and the DMA channel. AUTO: BIOS switches on the LPT. Resources are assigned and the mode set in the OS per reconfiguration.
Audio	Enable or disable the audio interface
Onboard Ethernet 1:	Enable or disable the onboard Ethernet 1 interface.
Ethernet 1 Address:	Display the MAC address of Ethernet 1
Onboard Ethernet 2:	Enable or disable the onboard Ethernet 2 interface.
Ethernet 2 Address:	Display the MAC address of Ethernet 2
PCI – MPI / DP or PROFINET	Enable or disable the onboard MPI/DP or PROFINET interface.

Advanced menu > SATA/PATA Configuration

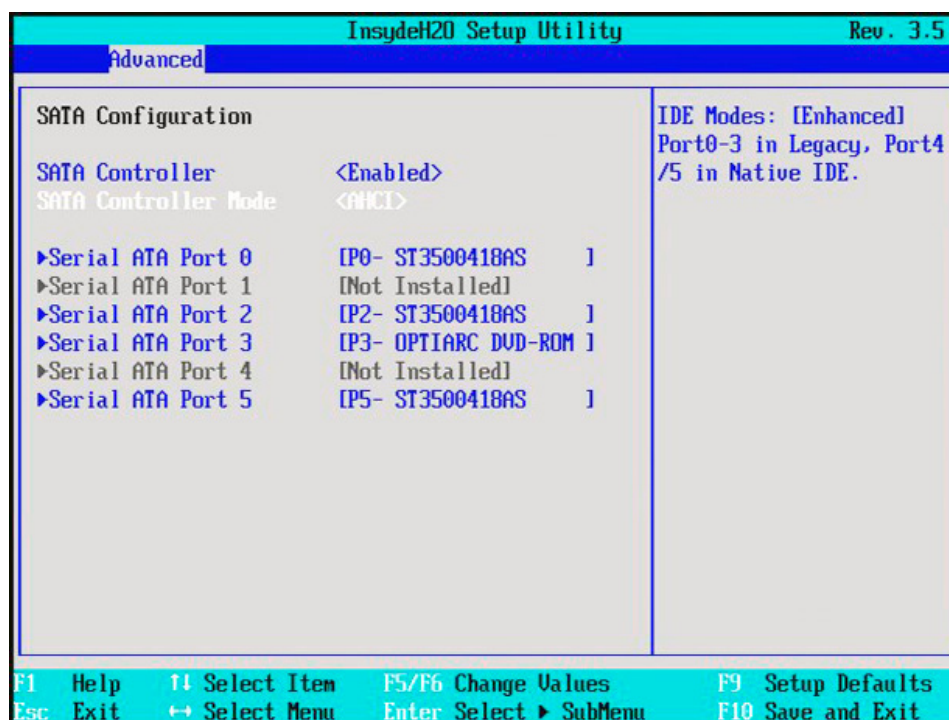


Figure 16-6 "SATA/PATA Configuration" submenu example

Entry	Meaning
SATA Controller	Enable or disable the SATA and PATA controllers.
SATA Controller mode	Set operating mode of the SATA controller: <ul style="list-style-type: none"> Enhanced: SATA Ports 0-3 operate in Legacy mode, SATA Ports 4-5 in native IDE mode AHCI : Disable or enable the AHCI support RAID: Disables or enables RAID support
Serial ATA Port 0	Submenu for SATA Port 0 configuration
Serial ATA Port 1	Submenu for SATA Port 1 configuration
Serial ATA Port 2	Submenu for SATA Port 2 configuration
Serial ATA Port 3	Submenu for SATA Port 3 configuration
Serial ATA Port 4	Submenu for SATA Port 4 configuration
Serial ATA Port 5	Submenu for SATA Port 5 configuration

CAUTION**Data loss**

The RAID array information on the data carriers may be deleted when you switch from RAID to "AHCI" or "Enhanced".

This result is a malfunction of the device.

NOTICE

RAID must be disabled in connection with the SAS hardware RAID controller.

Advanced menu > Video Configuration

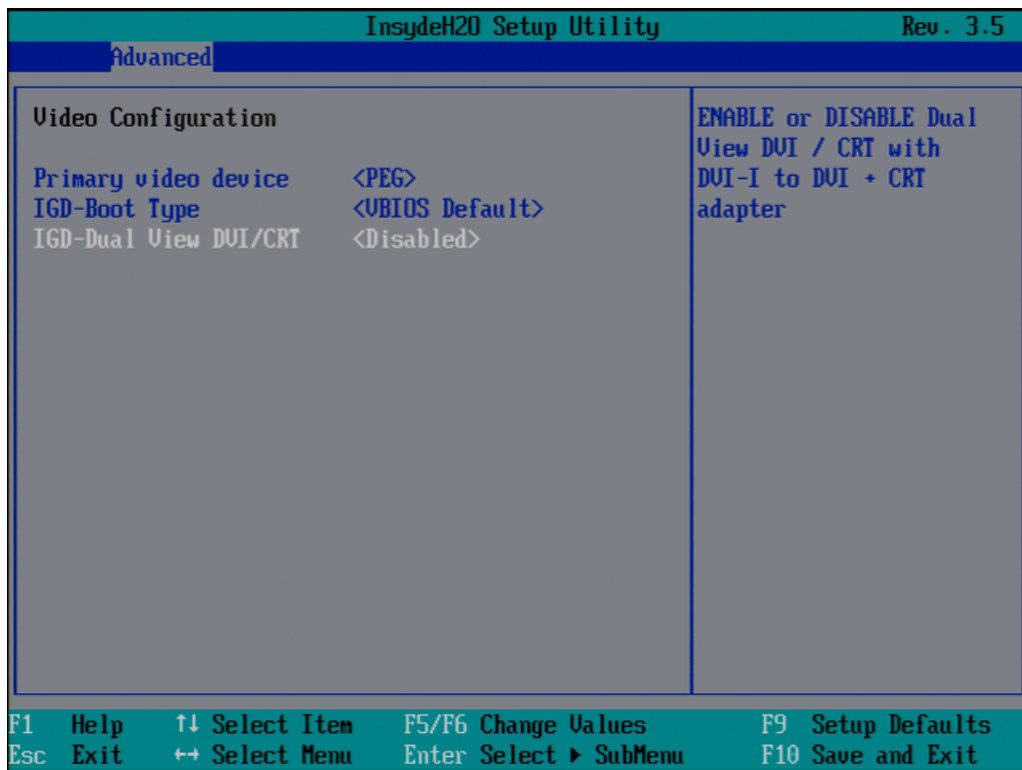


Figure 16-7 Submenu Advanced menu > Video Configuration example

Entry	Meaning
Primary video device	Selection of the primary video interface to which the boot messages are to be output: <ul style="list-style-type: none"> • IGD: Internal onboard graphics • PEG: PCIExpress graphics (internal graphics is deactivated) • PCI: PCI graphics (internal graphics is deactivated)
IGD boot type	Selection of the video device that is used during booting. <ul style="list-style-type: none"> • VBIOS default: The graphics specified by the VIDEO BIOS is used. • CRT: VGA screen • EFP: External Flat Panel (DVI) • CRT+EFP: VGA and DVI screen
IGD Dual View DVI/CRT	Activate/deactivate the dual view mode: Simultaneous operation of 2 monitors (CRT and DVI) by means of adapter (splitter) at the DVI output of the device.

Advanced menu > USB Configuration

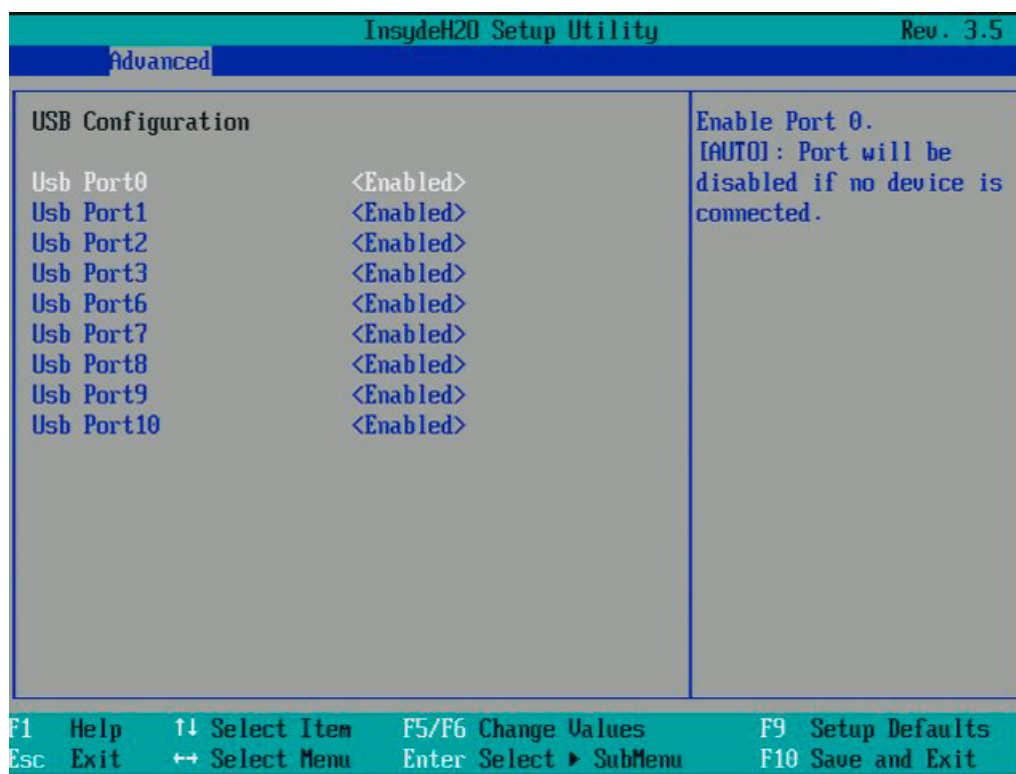


Figure 16-8 Submenu Advanced menu > USB Configuration

Entry	Meaning
USB Port0 -10	<ul style="list-style-type: none"> • Enable: USB port is activated. • Auto: USB port is deactivated when no device is plugged. • Disable: USB port is disabled.

The following table lists the assignment of the USB ports to the USB interfaces:

USB port	USB interface
0	Ext. interface X60 P1
1	Ext. interface X60 P2
2	Ext. interface X60 P3
3	Ext. interface X60 P4
6	Int. interface X43 Pin 1 - 5
7	Int. interface X43 Pin 6 - 10
8	Front-end interface of the panel fronts X42
9	Int. interface X38
10	Keyboard / Touch controller interface of the panel fronts X44

Advanced menu > Chipset Configuration

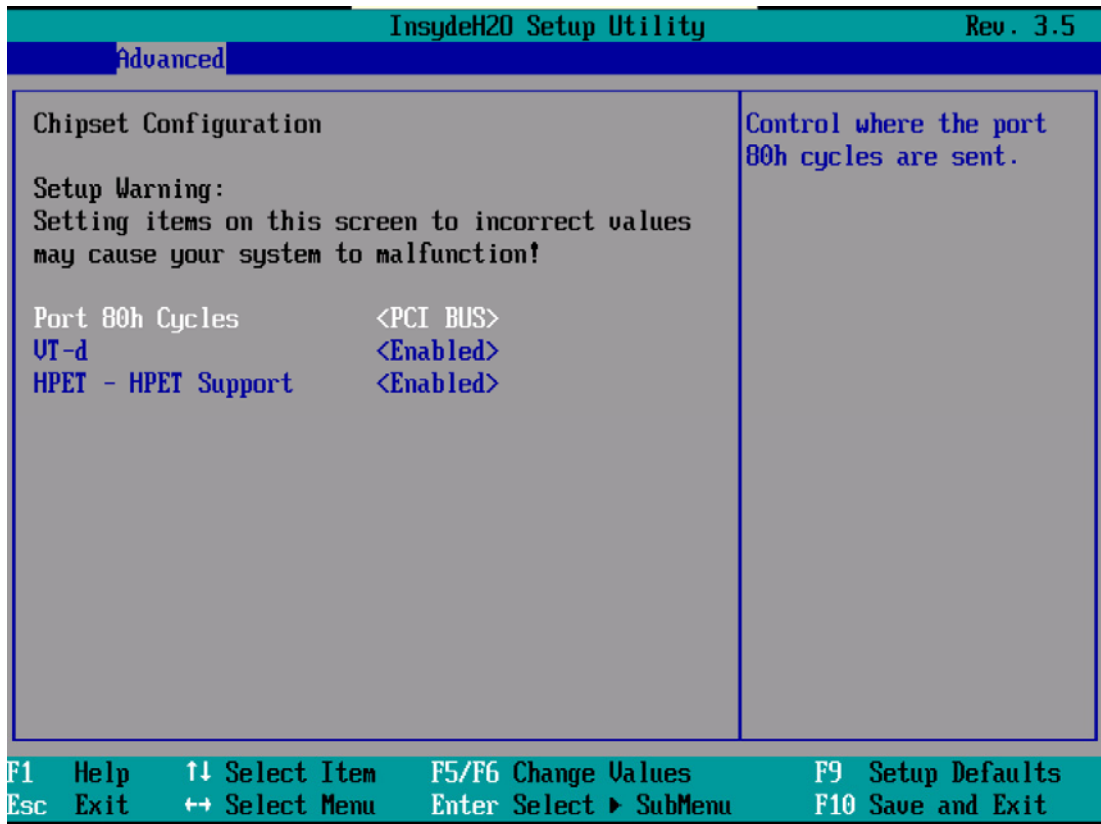


Figure 16-9 Submenu Advanced menu > Chipset Configuration

Entry	Meaning
Port 80h Cycles	Output Port 80 status display to PCI bus or LPC BUS (status display at the device).
VT-d	Enable or disable advanced support for virtualization technology "DIRECT I/O"
HPET	Enable High Precision Event Timer

Advanced menu > CPU Configuration

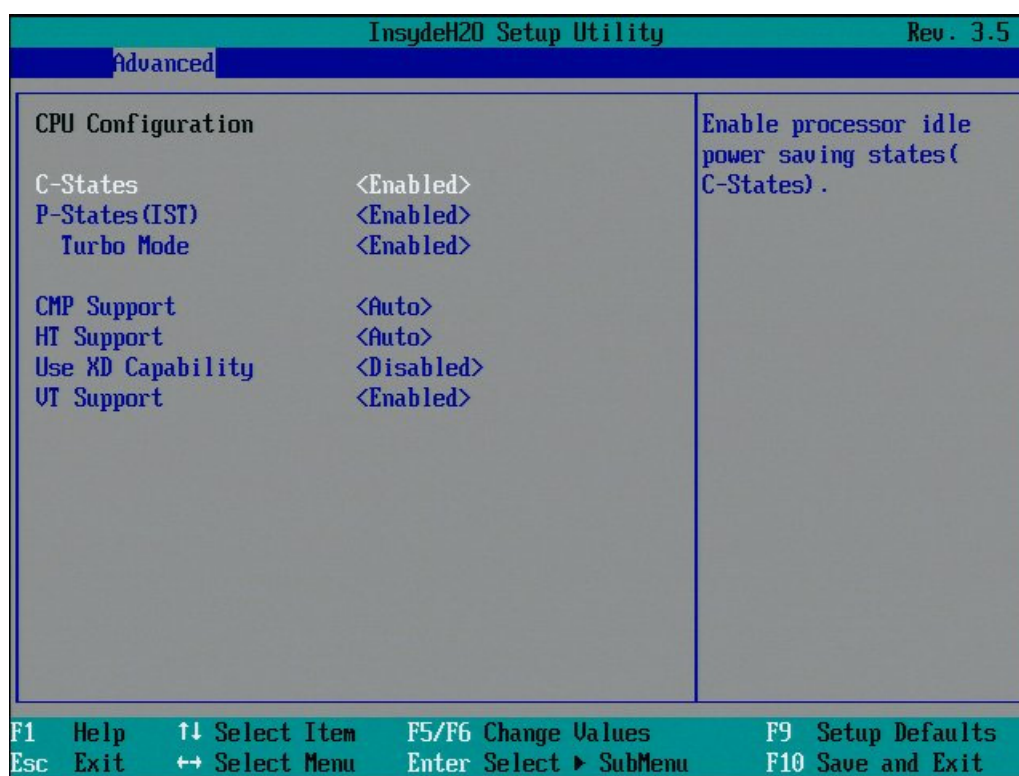



Figure 16-10 Submenu Advanced menu > CPU Configuration

Entry	Meaning
C-States	Enable the power saving modes of the processor.
P-States (IST)	Enable the performance modes of the processor.
Turbo Mode	Enable or disable Turbo Modes.
CMP support	<ul style="list-style-type: none"> • Auto: Multi Core operation, if available • Disabled: Single Core operation
HT Support	<ul style="list-style-type: none"> • Auto: Use hyperthreading, if available. • Disabled: Hyperthreading disabled.
Use XD Capability	Enable or disable XD (Execute Disable) Capability.
VT Support	Enable or disable virtualization functionality "Vanderpool Technology".

16.5.6 "Advanced, Active Management Technology Support" menu


Settings in the BIOS

The following figure shows the BIOS submenu "Advanced Menu > Active Management Technology Support", in which you configure part of AMT in the BIOS. You will find further configuration options for AMT in the MEBx (see "Settings in the MEBx").

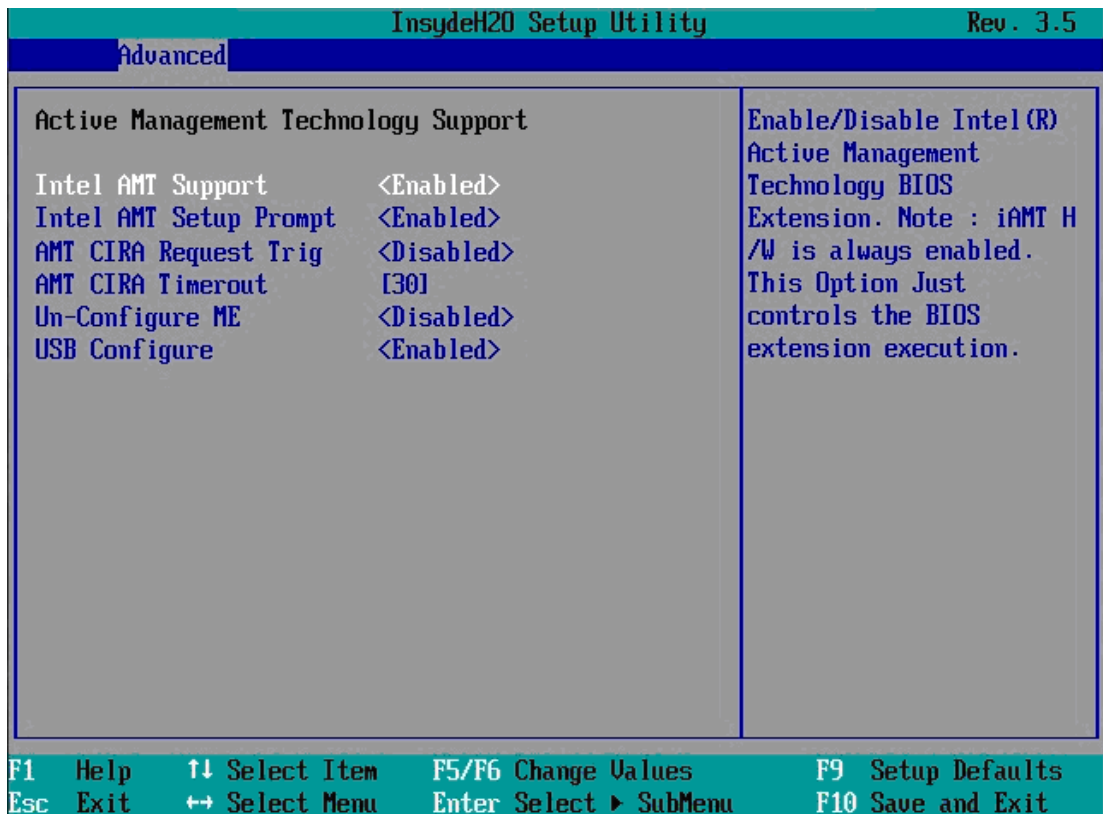


Entry	Meaning
Intel AMT Support	Enable and disable BIOS support for Intel Active Management Technology (AMT)
Intel AMT Setup Prompt	Enable and disable the boot interruption <Ctrl+P> to call up the MEBx configuration page.
AMT CIRA Request Trig	Enable CIRA (Client Initiated Remote Access, "Fast Call For Help"). CIRA allows AMT maintenance event if the AMT PC is not in the intranet.
AMT CIRA Timeout	CIRA timeout for connection establishment with MPS (Manageability Presence Server / "vPro Enabled Gateway").
Un-Configure ME	Resets all the values of the MEBx to their defaults (see section "Resetting with Un-configure (Page 198)").
USB Configure	Enable and disable the USB configuration (provisioning).

Settings in the MEBx

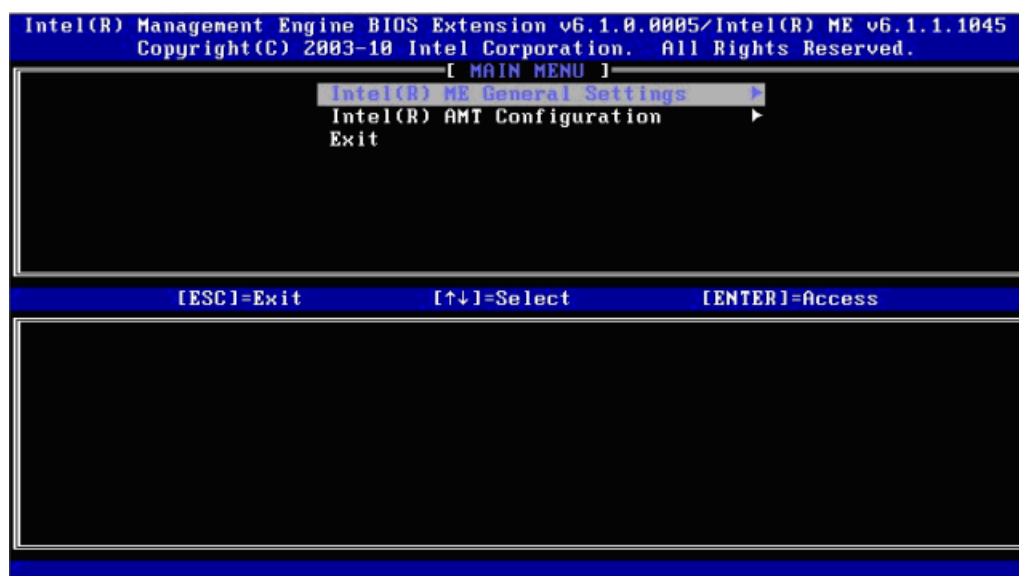

Entry	Meaning
Intel(R) ME General Settings	Opens the submenu with the general ME settings (see "ME General Settings").
Intel(R) AMT Configuration	Opens the submenu for the AMT settings (see "ME General Settings").
Exit	Exits the MEBx.


ME general settings

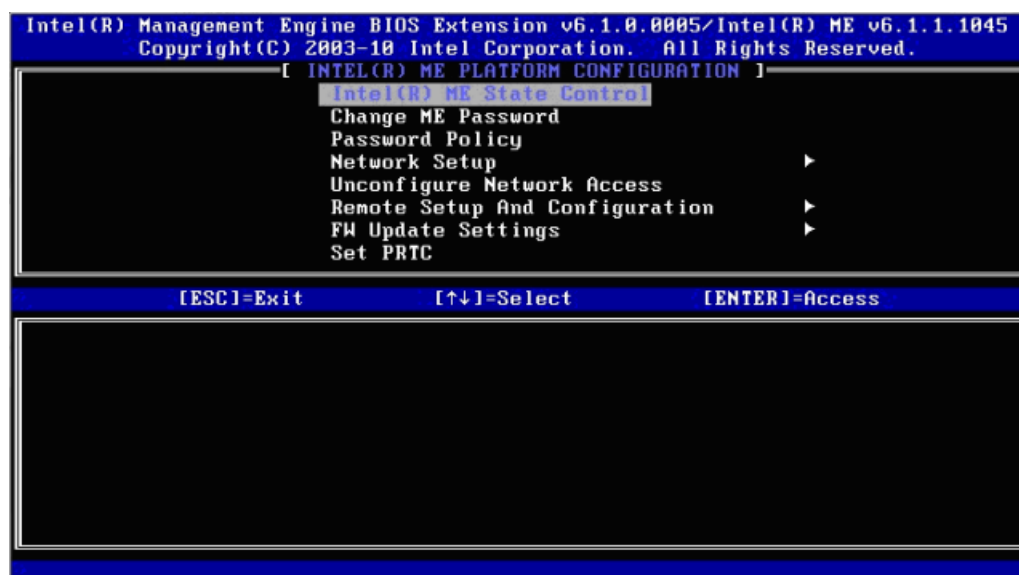

You cannot see all the switches in the menu at the same time. Use the arrow buttons to display the hidden switches.

Entry	Meaning
Intel(R) ME State Control	<p>Enable ME: Normal operation</p> <p>Disable ME: Stops ME at a very early boot stage to search for errors.</p> <ul style="list-style-type: none"> • When searching for errors, ME can then be excluded as a possible source of error. • No ME activities on a BUS.
Change ME Password	Used to change the password
Password Policy	Password policy that specifies the conditions under which the password can be modified remotely.
Network Setup	Network settings, for example DHCP, IP address, host name, domain name.
Activate Network Access	Activates the network interface. This menu entry only exists if the network is not activated.
Unconfigure Network Access	Deactivates the network interface and resets the network settings to their default values.
Remote Setup And Configuration	Displays the current provisioning settings.
FW Update Settings	Sets the user rights and the conditions under which ME firmware updates can be transferred.
Set PRTC	PRTC (protected real time clock) is an internal ME clock, that is required in the ME, for example for comparing times with TLS & Kerberos, time stamps of events. Period of validity: 1/1/2004 – 4/1/2021.
Power Control	Specifies the power states S0, S3, S4 of the computer in which the ME is activated.
Previous Menu	Return to the main menu.

AMT configuration

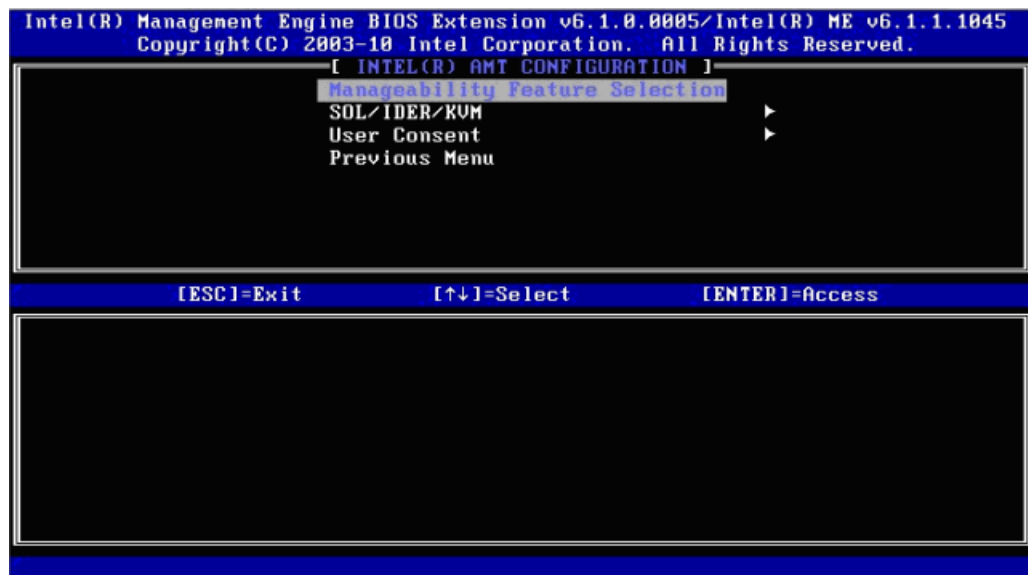

Entry	Meaning
Manageability Feature Selection	Enable and disable all AMT features.
SOL/IDER/KVM	Enable and disable the features SOL, IDE redirection, KVM.
User Consent	User consent settings. Forces the following additional security behavior: When a user attempts to establish a KVM connection remotely, a six-figure number is displayed on the AMT PC. The remote user must enter this number on the help desk PC before the KVM connection can be opened.
Previous Menu	Return to the main menu.

16.5.7 Security menu

In this menu access to the IPC can be limited or prevented by assigning passwords (Supervisor / User password).

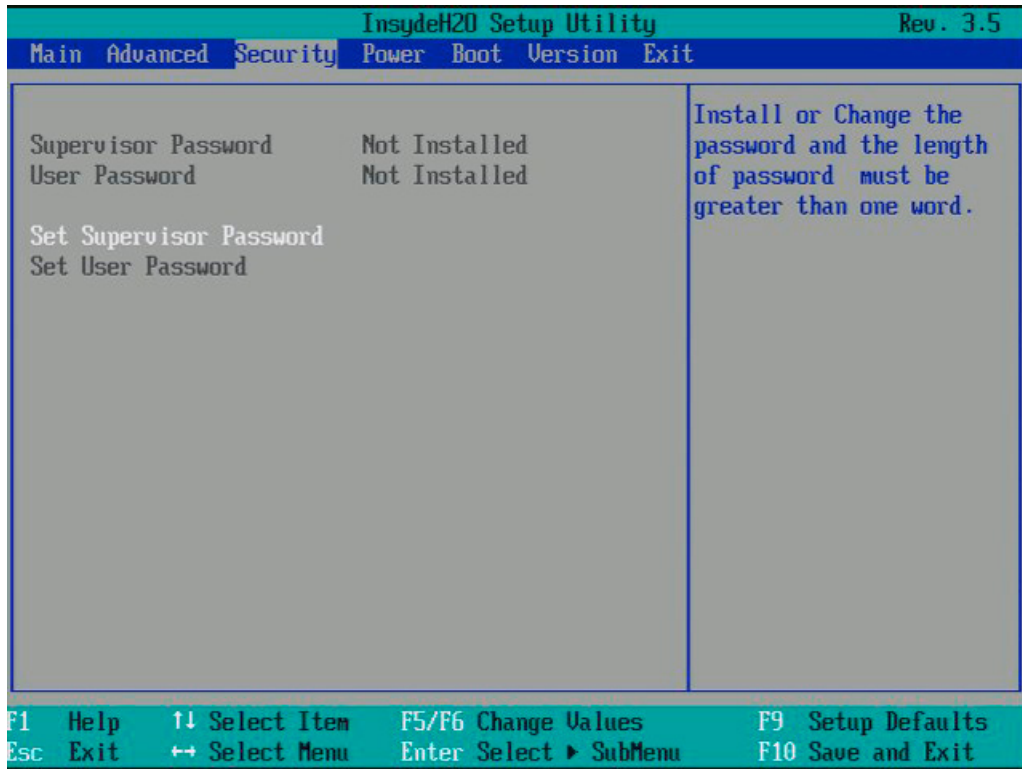


Figure 16-11 Security menu

Entry	Meaning
Supervisor Password	<ul style="list-style-type: none"> • Installed: A Supervisor password is set up • Not installed: No Supervisor password is set up
User password	<ul style="list-style-type: none"> • Installed: A User password is set up • Not installed: No User password is set up
Set Supervisor Password	Set a Supervisor password for full access to the SETUP. This field opens the password input dialog. After entering the Supervisor password correctly, the user can change the password, or clear and thus deactivate it by pressing "ENTER".
Set User Password	Set a User password for limited access to the SETUP. This field opens the password input dialog. Logged on users can change the password, or clear and thus deactivate it by pressing "RETURN."

16.5.8 "Power" menu

The behavior of the device after a power failure and after wake events is specified in this menu.

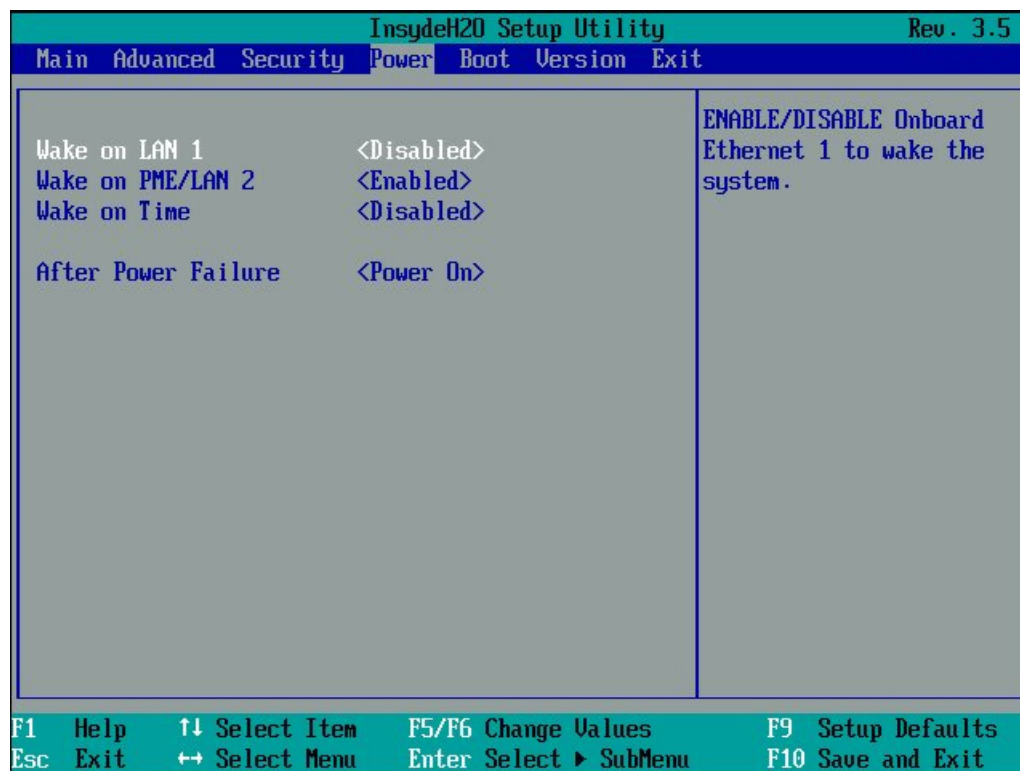


Figure 16-12 Power menu

Entry	Meaning
Wake on LAN 1	Device can be activated by an event via LAN.
Wake on PME/LAN 2	The device switches on when a Power Management Event occurs.
Wake on Time	The device switches on at a moment to be specified when it is in the operating state S5.
After Power Failure	Specification of the device behavior after a voltage failure and voltage recovery. <ul style="list-style-type: none"> • [Power On]: After voltage failure and subsequent voltage restoration, the device switches on automatically. • [Stay Off]: After voltage failure and subsequent voltage restoration, the device remains switched off. • [Last State]: If the device was switched on when the power failure occurred, the device switches on when the voltage is restored. Otherwise, the device remains switched off when the voltage is restored.

16.5.9 Boot Menu

In this menu this booting behavior of the device is specified and the boot medium or sequence of the boot media is determined.

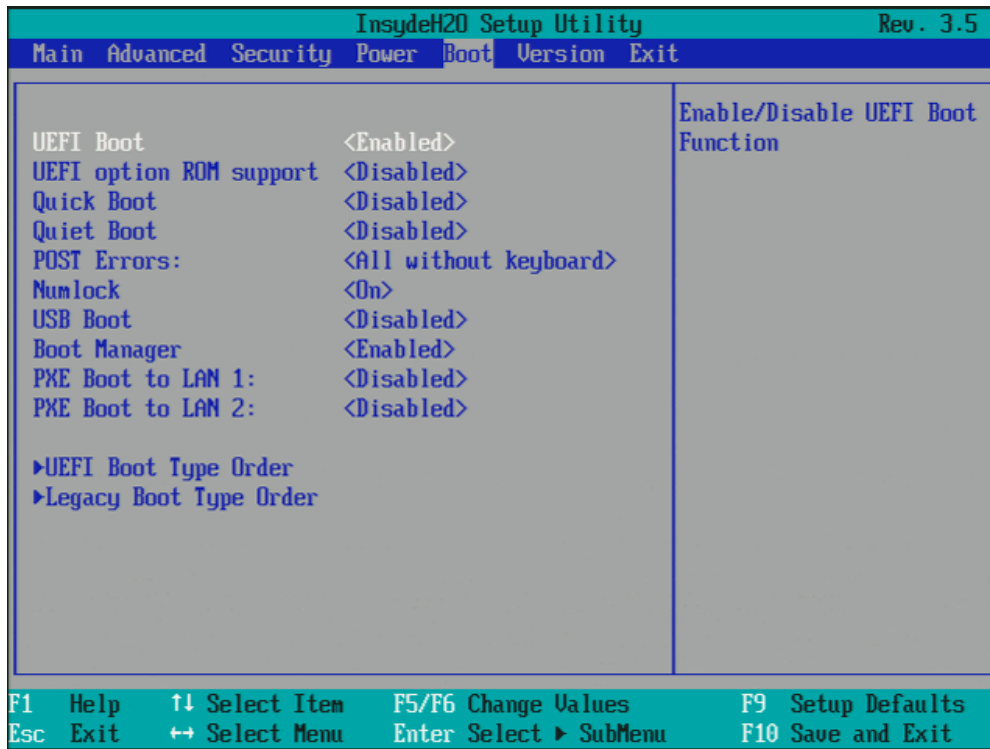


Figure 16-13 Boot Menu

Entry	Meaning
UEFI Boot	Enable (Enabled) or disable (Disabled, default) the UEFI Boot functionality
UEFI option ROM support	Enable (Enabled) or disable (Disabled, default) the UEFI Boot option from bootable expansion modules.
Quick Boot	Enable or disable If enabled, the programming device starts faster because various hardware function tests are skipped.
Quiet Boot	Bootling is carried out in text mode.
POST errors	Specification of the bootling behavior if errors are recognized. <ul style="list-style-type: none"> • Never halt on errors: Continue the bootling process when errors occur. • Halt on all errors: Interrupt the bootling process when errors occur. • All Without keyboard: Interrupt the bootling process when errors occur, except for keyboard errors. • All without kb/smart: Interrupt the bootling process when errors occur, except for keyboard and S.M.A.R.T errors. (SMART: Self-Monitoring, Analysis and Reporting Technology)
NumLOCK	On = Enable numeric keypad on right Off = Disable numeric keypad on right (= navigation)
USB Boot	Allow/Do not allow bootling of inserted USB devices.

Entry	Meaning
Boot manager	Enable (Enabled, Default) or disable (Disabled) of the Boot manager accessible through <F12> button.
Ethernet 1 Remote Boot	Enable or disable booting of the LAN1.
Ethernet 2 Remote Boot	Enable or disable booting of the LAN2.
UEFI Boot Type Order	Set order of the EFI boot media
Legacy Boot Type Order	Set traditional boot order (Normal, Advanced, Advanced Placeholder)

Boot Menu > Legacy Boot Type Order: Standard

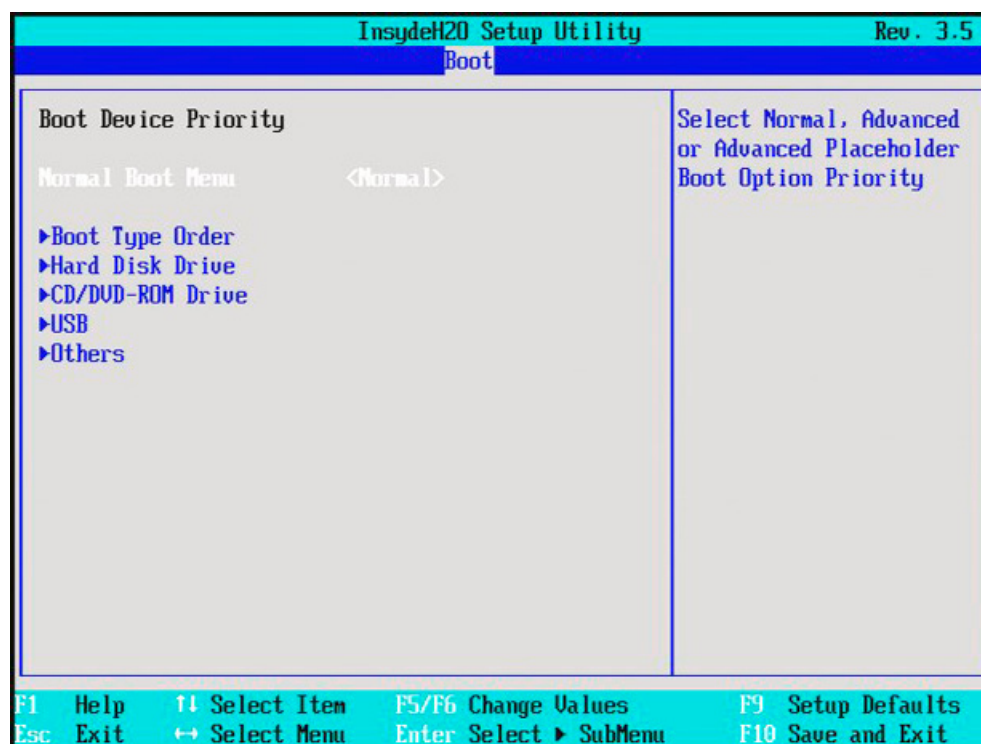


Figure 16-14 Submenu "Boot / Legacy / Normal Boot Menu <Normal>" example

Entry	Meaning
Entry	Meaning
Normal Boot Menu	<ul style="list-style-type: none"> • Normal = Boot order based on component type • Advanced = Customized boot order of all components • Advanced Placeholder = Individual, fixed booting sequence that is not changed automatically
Boot Type Order	Submenu for setting the boot order of component groups relative to one another
Hard disk drive ¹⁾	Submenu for setting the boot order within the hard disk group
CD/DVD ROM Drive ¹⁾	Submenu for setting the boot order within the group of optical drives.
USB ¹⁾	Submenu for setting the boot order within the group of USB drives.
Others ¹⁾	Submenu for setting the boot order within the group of Others (for example Remote Boot Device).

¹⁾ The groups are only displayed if a device of this group exists.

Boot menu / Legacy / Normal Boot Menu (Advanced)

In this menu all the connected bootable components and their booting position are displayed. The booting position of the component can be moved freely. During booting the component at the first position (highest booting priority) is used. If the component is not available, booting is carried out from the next component in the list.

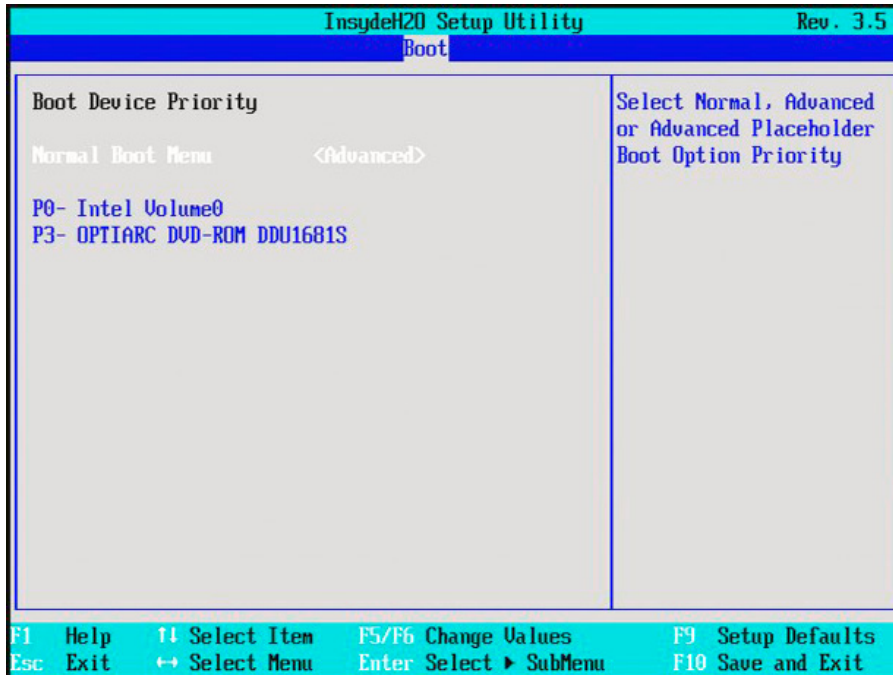


Figure 16-15 Submenu "Boot / Legacy / Normal Boot Menu <Advanced>" example

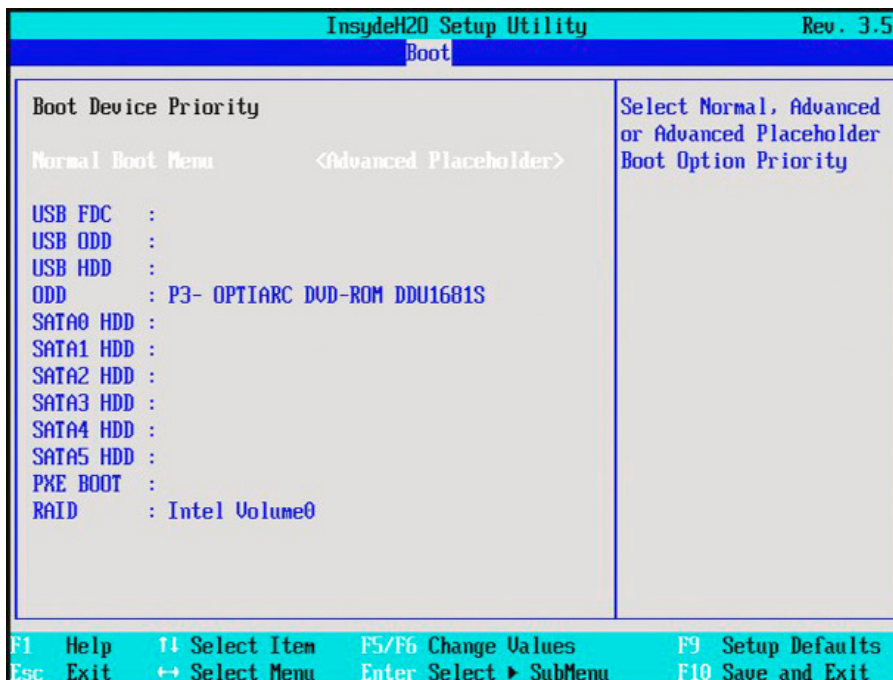


Figure 16-16 Advanced Placeholder example

Bootable components that are disconnected from and then reconnected to the PC between booting processes are set by the BIOS to the first position in the case of the "Advanced" setting, and relocated back to their original booting position (Advanced Placeholder Boot) in the case of the "Advanced Placeholder" setting.

The boot sequence is changed as follows:

Select the boot component with the ↑ ↓ keys, move to the desired position with + or -.

Note

During the booting process the boot manager can be started by using the F12 key. The boot manager displays all the available boot components and boots the device selected by the user.

16.5.10 Version Menu

This menu contains system information which should be made available to Technical Support.

InsydeH2O Setup Utility		Rev. 3.5
Main	Advanced	Security
Power	Boot	Version
Exit		
Product	SIMATIC IPC847C PROFIBUS	
BIOS Version	L15.01.02.3	
BIOS Number	A5E02619226-ES003	
InsydeH2O Version	3.60.20.1061	
Baseboard Revision	2	
MPI/DP Firmware ID	01	
Intel ME Version	6.1.1.1045	
Video Option ROM	2026	
RAID Option ROM	9.6.0.1014	
PXE Option ROM	1.3.30	
F1 Help	↑↓ Select Item	F5/F6 Change Values
Esc Exit	↔ Select Menu	Enter Select ► SubMenu
		F9 Setup Defaults
		F10 Save and Exit

Figure 16-17 Version menu example

16.5.11 Exit menu

You always exit BIOS Setup in this menu.

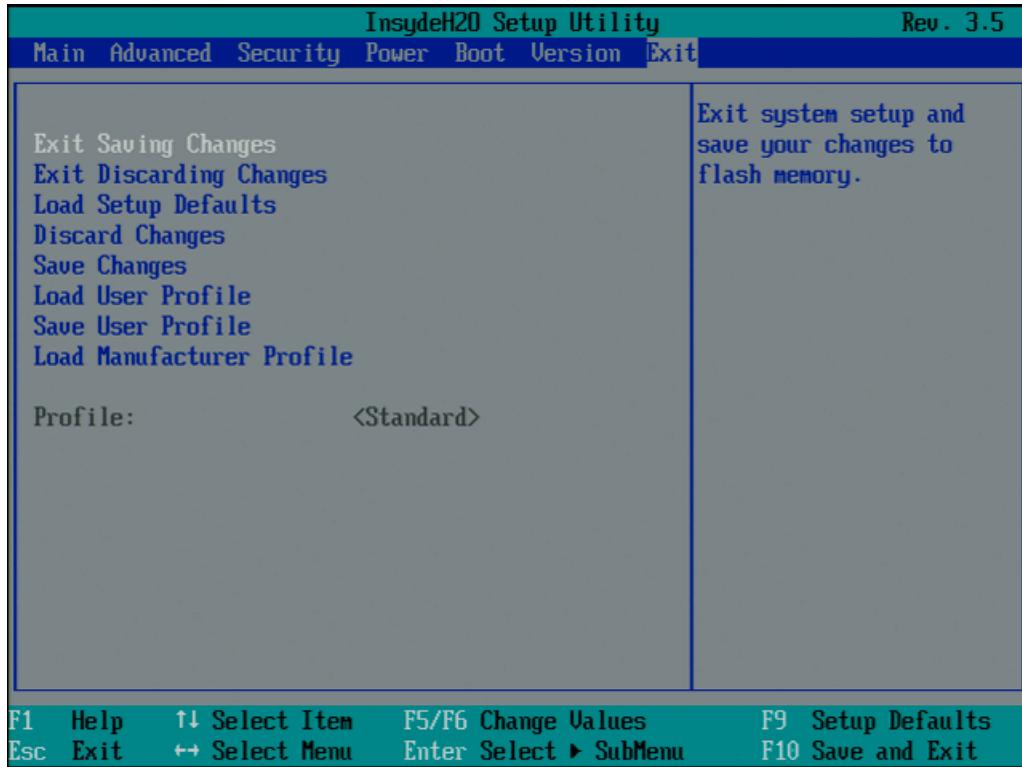


Figure 16-18 The "Exit" menu (example)

Entry	Meaning
Exit Saving Changes	All the parameter changes are saved. Afterwards a system restart is carried out with the new parameters.
Exit Discarding Changes	All the parameter changes are discarded and the system is restarted with the old parameters.
Load Setup Defaults	All parameters are set to safe values.
Discard Changes	All the parameter changes are rejected.
Save Changes	All the parameter changes are saved.
Load User Profile	All the user-defined settings are loaded. (The user settings must have been saved beforehand with the Save User Profile function.)
Save User Profile	The set parameters are saved as a USER profile.
Load Manufacturer Profile	The manufacturer parameters are downloaded to the SETUP device.
Profiles	Display field: Displays the active profile (Standard, User, Manufacturer) with which the device is currently operating ...

16.5.12 BIOS Setup default settings

Documenting the device configuration

If you have changed any default settings in Setup, you can enter them in the following table. You can then refer to these entries for any future hardware modifications.

Note

Print out the table below and keep the pages in a safe place once you made your entries.

The default setup settings vary depending on the ordered device configuration.

If you have changed any default settings in Setup, you can enter them in the following table. You can then refer to these entries for any future hardware modifications.

BIOS Setup default settings

System parameters	Default settings	Local settings
Main		
System Time	hh:mm:ss	
System Date	MM/DD/YYYY	

System parameters	Default settings	Local settings
Advanced>Peripheral Configuration		
Internal COM 1	Auto	
Internal COM 2	Auto	
Internal LPT	Auto	
Audio	Enabled	
Onboard Ethernet 1	Enabled	
Onboard Ethernet 2	Enabled	
PCI – MPI / DP	Enabled	
Profinet		

System parameters	Default settings	Local settings
Advanced>SATA Configuration		
SATA Controller	Enabled	
SATA Controller mode	AHCI	

System parameters	Default settings	Local settings
Advanced>SATA Configuration		

System parameters	Default settings	Local settings
Advanced>Video Configuration		
Primary video device	PEG	
IGD boot type	VBIOS default	
IGD Dual View DVI/CRT	Disabled	

System parameters	Default settings	Local settings
Advanced > USB Configuration		
USB Port0	Enabled	
USB Port1	Enabled	
USB Port2	Enabled	
USB Port3	Enabled	
USB Port6	Enabled	
USB Port7	Enabled	
USB Port8	Enabled	
USB Port9	Enabled	
USB Port10	Enabled	

System parameters	Default settings	Local settings
Advanced>Chipset Configuration		
Port 80h Cycles	LPC Bus	
VT-d	Enabled	
HPET	Enabled	

System parameters	Default settings	Local settings
Advanced>CPU Configuration		
C-States	Enabled	
P-States (ACTUAL)	Enabled	
Turbo mode	Enabled	
CMP support	Auto	
HT Support	Auto	
Use XD Capability	Disabled	
VT Support	Enabled	

System parameters	Default settings	Local settings
Advanced>Active Management Technology Support		
Intel AMT Support	Disabled	
Intel AMT Setup Prompt	Disabled	
AMT CIRA Request Trig	Disabled	
AMT CIRA Timerout	30	
Un-Configure ME	Disabled	
USB Configure	Enabled	

System parameters	Default settings	Local settings
Advanced		
Fan control	Enabled	
Operating Mode Switch	Disabled	

System parameters	Default settings	Local settings
Security		
Supervisor Password	Not installed	
User password	Not installed	
Set Supervisor Password	Inactive (no password assigned)	
Set User Password	Inactive (no password assigned)	

System parameters	Default settings	Local settings
Power		
Wake on LAN 1	Enabled	
Wake on PME/LAN 2	Disabled	
Wake on Time	Disabled	
After Power Failure	Power On	

System parameters	Default settings	Local settings
Boot		
UEFI Boot	Disabled	
UEFI option ROM support	Disabled	
Quick Boot	Disabled	
Quiet Boot	Disabled	
POST errors	All without keyboard	
NumLOCK	On	
USB Boot	Enabled	
Boot manager	Enabled	
PXE Boot to LAN 1	Disabled	
PXE Boot to LAN 2	Disabled	

System parameters	Default settings	Local settings
Boot > UEFI Boot Type Order		

System parameters	Default settings	Local settings
Boot > Legacy Boot Type Order		
Normal Boot Menu	Advanced Placeholder	

System parameters	Default settings	Local settings
Version		
Product	SIMATIC IPC	
BIOS Version	V15.01.	
BIOS Number		
InsydeH2O Version		
MPI / DP Firmware ID		

System parameters	Default settings	
Version		
FPGA Revision ID		
Intel ME Version		
Video Option ROM		
RAID Option ROM		
PXE Option ROM		

- 1 Deviating default settings are possible. These depend on the manufactured device configuration.

System parameters	Default settings	Local settings
Exit		
Profile:		


16.6 Active Management Technology (AMT)

16.6.1 AMT basics

The processors Intel Core i5 and Core i7 support Intel® vPro™ and Intel Active Management Technology at the hardware end.

An administrator at the Help Desk PC accesses the AMT PCs. Only the AMT PCs must have an integrated Intel AMT.

The following figure shows the possible structure of a network for remote management on the basis of SIMATIC AMT-PCs.

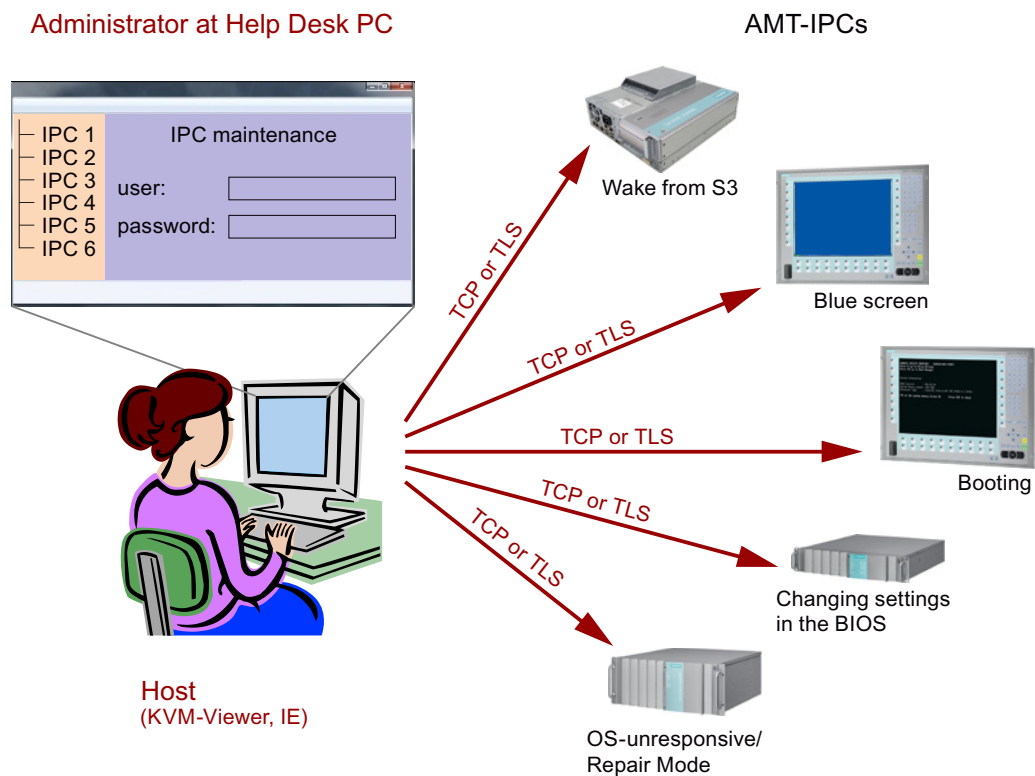

From a SIMATIC IPC which does not have Intel AMT functions, you can access networked SIMATIC IPCs with Intel AMT using the SIMATIC IPC Remote Manager and/or a web browser.

SIMATIC IPCs that support AMT feature two onboard Ethernet interfaces, each with a separate controller. You can configure the controller integrated in the chipset for use with Intel AMT. Further details about the controller can be found in the technical specification.

For security reasons, AMT is disabled when you receive a SIMATIC IPC. Enable AMT in the BIOS setup. Afterwards the Intel® Management Engine (Intel® ME) has to be activated and set for AMT. You make additional settings in the Management Engine:

- Configuring the network for access via AMT
- Creating a password

This section describes the required measures and settings on the local IPC so that the IPC can be controlled and maintained remotely from a management station known below as the help desk PC.

The local IPC is known below as the "AMT PC".

The sections contain the following information:

- AMT settings in the MEBx and in the BIOS setup
- Basic configuration of AMT
- Further useful notes

16.6.2 Enabling AMT, basic configuration

Procedure

For security reasons, AMT is not enabled on new devices.

To enable AMT, follow these steps:

1. Connect the AMT PC with the LAN.
2. If necessary, first reset AMT to the default status (see section "Unconfigure").
3. To access the BIOS, press the <F2> key while the device is booting.
4. In the Advanced menu, enable "Intel AMT Support", and "Intel AMT Setup Prompt".
5. Exit the BIOS with the <F10> key "Save and Exit". The AMT PC restarts.
6. To access the MEBx, press the <Ctrl+P> keyboard shortcut
7. In the login dialog, enter the standard password "admin".
8. Change the default password. The new password must include the following characters:
 - In total at least eight characters
 - One upper case letter
 - One lower case letter
 - One number
 - One of the special characters ! @ # \$ % ^ & * @ # \$ % ^ & *

Note

The underscore _ and the space characters are valid password characters, however they do not increase password complexity.

9. Enable "Intel (R) AMT Configuration > Manageability Feature Selection".
10. Enable "Intel (R) ME General Settings > Activate Network Access".

16.6.3 Advanced settings

The BIOS and the MEBx contain the most important basic settings for AMT. Additional tools are necessary if you want to make more advanced settings. If required, these must be downloaded from the relevant manufacturer's site. For information on the options and use of these tools, refer to the relevant documentation of the manufacturer.

- Manageability Commander and other tools of the Intel DTK (Manageability Developer Tool Kit): Programs from the Intel DTK that you can download from the Internet at "<http://software.intel.com/en-us/manageability>".
- AMT Web interface: For encrypted connections, the URL of the Web interface is "https://<Fully qualified domain name>:16993" and for unencrypted connections "http://<IP address>:16992".
- WinRM: A command line program that is part of Windows as of Windows Vista. This tool can be downloaded for older Windows versions.

16.6.4 Resetting with Un-configure

Note

If the AMT PC still has its factory settings, for example has just been purchased, you can skip this section.

If you have already configured AMT previously, it is best to discard all the previous AMT settings made in the MEBx.

NOTICE
All previous settings in the management engine are deleted. Correct operation in the plant may be at risk. Note down all the settings in the MEBx. Make the settings again as necessary following Unconfigure.

To reset the AMT settings, follow these steps:

1. Enable the "Un-configure ME" entry in "Advanced > Active Management Technology Support" in the BIOS.
2. Exit the BIOS with the <F10> key "Save and Exit". The AMT PC restarts.
3. After the restart, a user prompt appears asking whether you really want to discard all the settings in the management engine:

```
Intel(R) Management Engine BIOS Extension v6.1.0.0005
Copyright(C) 2003-10 Intel Corporation. All Rights Reserved.

Found unconfigure of Intel(R) ME
Continue with unconfiguration (Y/N)
```

4. Confirm with "Y". On a German keyboard, this means pressing the <Z> key.

The device continues to boot with the factory settings of the management engine.

16.6.5 Determining the network address

To connect the AMT PC with the AMT server, the network address that uniquely localizes the AMT server on the AMT PC must be entered.

If DHCP is set for the automatic assignment of the network address in "Network Setup" in the MEBx of the AMT PC, the network address is not fixed.

Procedure

If the AMT server uses the same network address as the operating system of the AMT PC (most common situation):

1. You can obtain the address of the AMT server in the command line in Windows using "ipconfig" and in UNIX using "ifconfig".

If the AMT server and operating system do not use the same network address, ask your network administrator for the address you have been assigned.

16.6.6 Forcing user consent

When establishing a connection to the AMT PC, the KVM viewer may prompt the user to enter a six-figure code. This code is displayed on the screen of the AMT PC. The user of the AMT PC must inform the user of the KVM viewer of this code.

Procedure

To set up this code query on the KVM viewer, follow these steps:

1. Select "Intel(R) AMT Configuration > User Consent" in the MEBx.
2. Select the value "KVM" for "User Consent".

To allow a user with administrator privileges to avoid this code query, follow these steps:

1. Select "Intel(R) AMT Configuration > User Consent" in the MEBx.
2. Enable "Opt-in configurable from remote IT".

16.7 CP 1616 onboard communications processor

16.7.1 Introduction

The CP 1616 on-board allows the connection of industrial PCs to Industrial Ethernet.

The basic characteristics of the PCS 1616 onboard are:

- Optimized for PROFINET IO
- With Ethernet realtime ASIC ERTEC 400
- Three RJ45 sockets for connecting terminal devices or addition network components
- Integrated 3-port real-time switch
- Automatic hardware detection

16.7.1.1 Network connections

Ethernet

The CP 1616 is designed for operation in Ethernet networks. Additional features are:

- The connectors are designed for 10BaseT and 100BaseTX.
- Data transfer rates of 10 and 100 Mbps in full/half duplex mode are supported.
- The handshake is performed automatically (auto negotiation).
- A 3-port realtime switch is located in the module.
- Autocrossing

Three RJ45 connectors

The CP 1616 is connected to the LAN (Local Area Network) via one of the three RJ45 sockets of the PC.

These three sockets lead to the integrated realtime switch.


16.7.1.2 Typical Communication Partners

CP 1616 onboard as an IO controller

The following diagram shows a typical application: CP 1616 onboard as PROFINET IO controller on the IO controller layer.

The IO base controller user program runs on the PC. This program accesses the functions of the IO base user program interface.

Data traffic is routed via the communication processor to several SIMATIC S7 PROFINET IO devices, ET 200S over Industrial Ethernet.

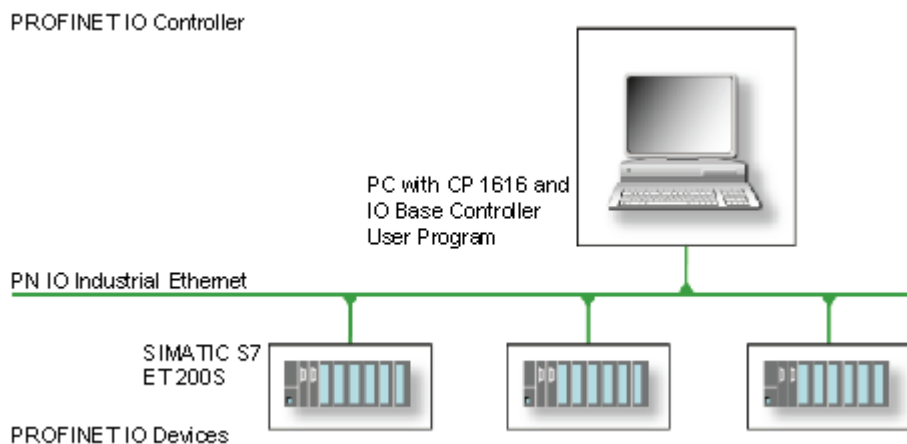


CP 1616 onboard as IO device

The following diagram shows a typical application: Two PCs each with a CP as a PROFINET IO device on the IO device layer.

A PC with a CP as PROFINET IO controller, a SIMATIC S7-400 with a CP 443-1 as PROFINET IO controller and two SIMATIC S7 ET 200S PROFINET IO devices are also connected in the network.

The IO base device user program runs on the IO device PC. This program accesses the functions of the IO base user program interface. Data traffic is routed via the CP 1616 onboard communication processor to a PC as PROFINET IO controller, or to an S7-400 automation system with CP 443-1 over Industrial Ethernet.

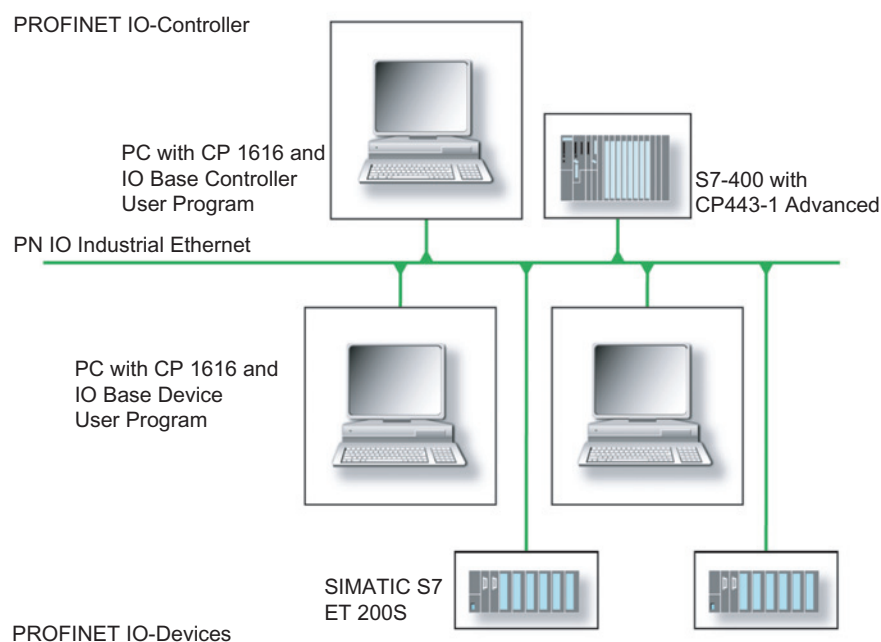

16.7.2 Firmware Loader

This section will familiarize you with the application area and use of the firmware loader. You can find additional, detailed information about the individual loader variants in the integrated help of the program.

"Firmware" refers to the system programs in the SIMATIC NET modules.

Scenario for using the firmware loader

The CP 1616 onboard is supplied with the latest version of the firmware. If new functions become available due to product development, you can make them available by performing a firmware download.

Application area for the firmware loader

The firmware loader enables you to reload new firmware releases to SIMATIC NET modules. It is used for:

- PROFIBUS modules
- Industrial Ethernet modules
- Modules for gateways, for example IE/PB link

Installation

The firmware loader is available on your PG/PC under Windows following the installation of STEP 7/NCM PC.

Loader files

The firmware loader supports the following file types:


- <File>.FWL
A file form that contains information in addition to the LAD file format, which is displayed by the firmware loader. The firmware loader can use this information to check if the firmware is compatible to the device.
- <File>.LAD
A file format that only contains the system program to be loaded into the module.

Read the information provided along with the loader file, for example, in the readme file. This information is also displayed in the firmware loader when the FWL file is loaded.

16.7.2.1 Loading firmware

Start downloading procedure

1. In the Windows Start menu, select the menu command SIMATIC > STEP 7 > NCM S7 > Firmware Loader.

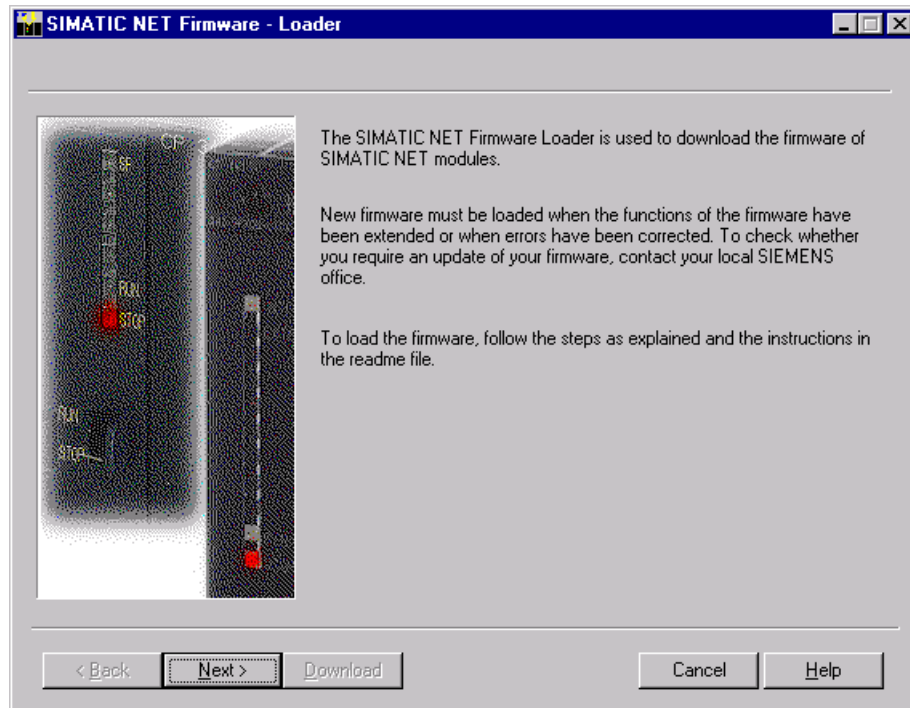

2. Click "Next" and follow the instructions in the dialog fields that follow. A help function is integrated in the software as support.

CAUTION

Ensure that the loader file you are using for the update is suitable for the version of firmware on your module. If you have any doubts, contact your local Siemens consultant.

CAUTION

Be aware that aborting the loading process may result in an inconsistent state in your module.

You can find additional, detailed information about the individual loader variants in the integrated help.

NOTICE

When loading the firmware or commissioning the module, be aware that the CP 1616 onboard takes five MAC addresses (always in direct sequence). The first two are shown in the BIOS.

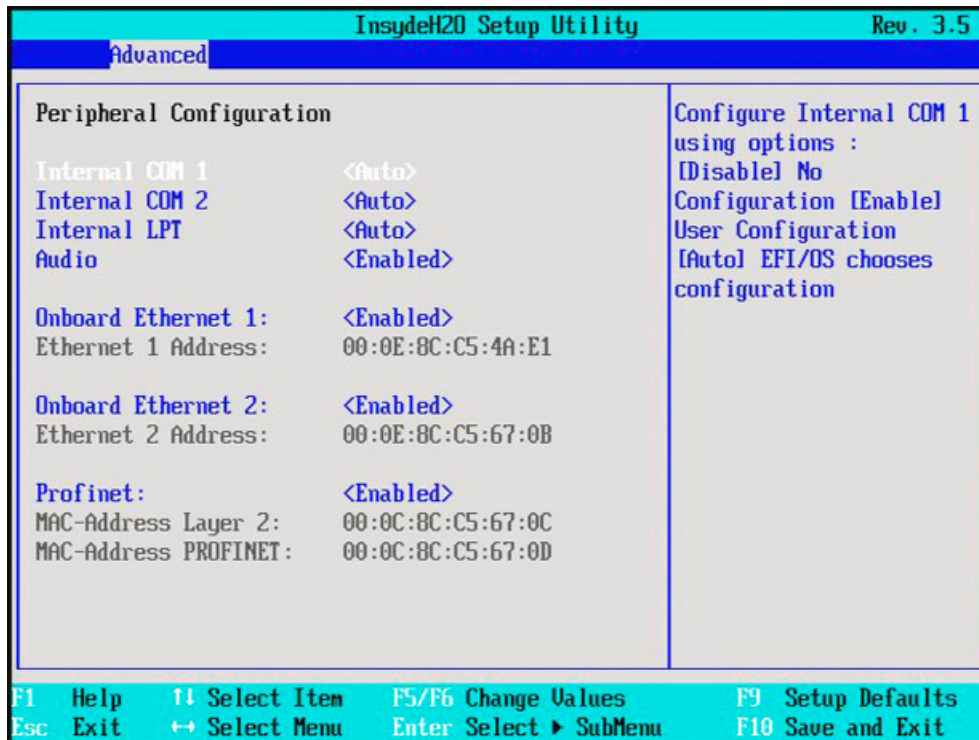


Figure 16-19 Advanced menu > "Peripheral Configuration"

Example

The lower MAC address under "Profinet" is intended for Layer 2 communication, while the second one is for Ethernet/PROFINET communication.

16.7.3 Further actions in STEP 7/NCM PC

Configuring

Your PC is now ready, although you still have to configure the SIMATIC NET communication software. The rest of the procedure is described in the "Commissioning PC Stations" manual (on the Windows PC that also contains STEP 7/NCM PC: Start > Simatic > Documentation > English > Commissioning PC Stations).

Appendix

A.1 Guidelines and declarations

The following applies to the SIMATIC product described in this document:

Notes on CE marking



The following applies to the SIMATIC product described in this document:

EMC directive

This product meets the requirements of EC directive 2004/108/EEC "Electromagnetic Compatibility", and is designed for operation in the following fields of application in accordance with this CE marking:

Fields of application	Requirement for	
	Emitted interference	Immunity to interferences
Residential, business and commercial operations, and small businesses	EN 61000-6-3: 2007	EN 61000-6-1: 2007
Industry	EN 61000-6-4: 2007	EN 61000-6-2: 2005

The product complies with EN 61000-3-2:2006 (harmonic currents) and EN 61000-3-3:2008 (voltage fluctuations and flicker.)

Low-voltage directive

The product fulfills the requirements of EC Directive 2006/95/EC "Low Voltage Directive". Conformance with this directive has been verified according to EN 60950-1: 2006.

Declaration of conformity

The EC declaration of conformity and the corresponding documentation are made available to authorities in accordance with the EC directives stated above. Your sales representative can provide these on request.

Note the installation guidelines

The installation guidelines and safety instructions given in this documentation have to be noted during commissioning and operation.

Connecting I/Os

Noise immunity requirements to EN 61000-6-2 are met if connected I/Os are suitable for industrial applications. Peripheral devices are only be connected via shielded cables.

A.2 Certificates and Approvals

ISO 9001 certificate

The Siemens quality management system for all production processes (development, production and sales) meets ISO 9001:2000 requirements.

This has been certified by DQS (the German society for the certification of quality management systems).


Q-Net certificate no.: DE-001108 QM

Software License Agreement

The device can be supplied with or without preinstalled software. For devices with preinstalled software, please note the relevant license agreements.

Approvals for the USA, Canada and Australia


Product safety

The following approval is available for the device:	
	Underwriters Laboratories (UL) to Standard UL 60950-1, Report E11 5352 and Canadian Standard C22.2 No. 60950-1 (I.T.E)

EMC

USA	
Federal Communications Commission Radio Frequency Interference Statement	This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
Shielded cables	Shielded cables must be used with this equipment to maintain compliance with FCC regulations.
Modifications	Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
Conditions of operations	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must tolerate any interference received, including interference that may cause undesired operation.

CANADA	
Canadian Notice	This Class B digital apparatus complies with Canadian ICES-003.
Avis Canadian	Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

AUSTRALIA	
	This product meets the requirements of the standard EN 61000-6-3:2007 Generic standards - Emission standard for residential, commercial and light-industrial environments.

A.3 Service and support

You can find additional information and support for the products described on the Internet at the following addresses:

- Technical support (http://www.siemens.de/automation/csi_en_WW)
- Support request form (<http://www.siemens.com/automation/support-request>)
- After-sales information system for SIMATIC PC / PG (<http://www.siemens.com/asis>)
- SIMATIC Documentation Collection (<http://www.siemens.com/simatic-tech-doku-portal>)
- Your local representative (<http://www.automation.siemens.com/mcms/aspa-db/en/Pages/default.aspx>)
- Training center (<http://sitrain.automation.siemens.com/sitrainworld/?ApplLang=en>)
- Industry Mall (<http://mall.automation.siemens.com>)

When contacting your local representative or Technical Support, please have the following information at hand:

- Order number of the device (MLFB)
- BIOS version (industry PC) or image version (HMI device)
- Installed additional hardware
- Installed additional software


Tools & downloads

Please check regularly if updates and hotfixes are available for download to your device. The downloads are available on the Internet under "After Sales Information System SIMATIC PC/PG" (see above).

A.4 Retrofitting instructions

The section below describes the approved variants of the drive and processor configuration for Rack PCs and the resultant operating conditions. Hard disks (HDD) can be installed in the internal drive bay or in the removable rack.

Approved configuration versions for the temperature range 5°C to 35°C

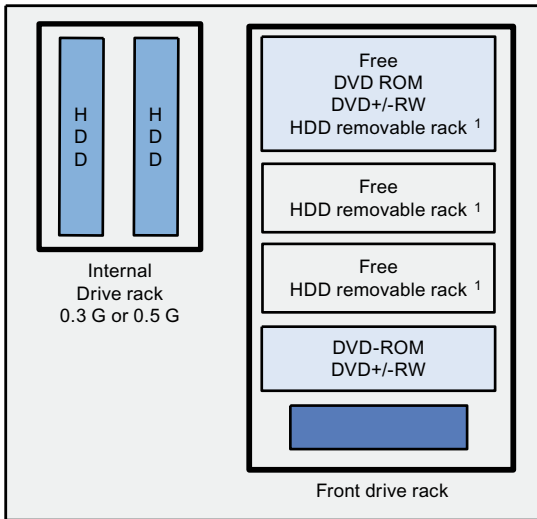


¹ An SAS or SATA hard disk in the removable rack

Maximum power loss of expansion modules: 80 W.

Devices equipped with hard disks in removable racks may not be exposed to shock or vibration during operation. The restrictions do not apply for the use of SSD.


Approved configuration versions for the temperature range 5°C to 40°C

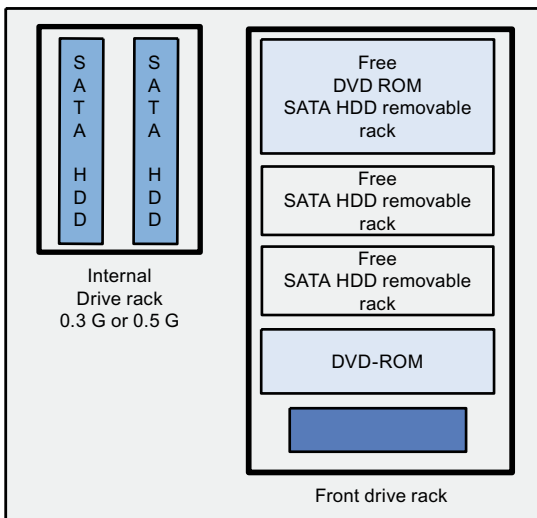

Maximum power loss of expansion modules: 80 W.

Devices equipped with hard disks in removable racks may not be exposed to shock or vibration during operation. The restrictions do not apply for the use of SSD.


Approved configuration versions for the temperature range 5°C to 45°C

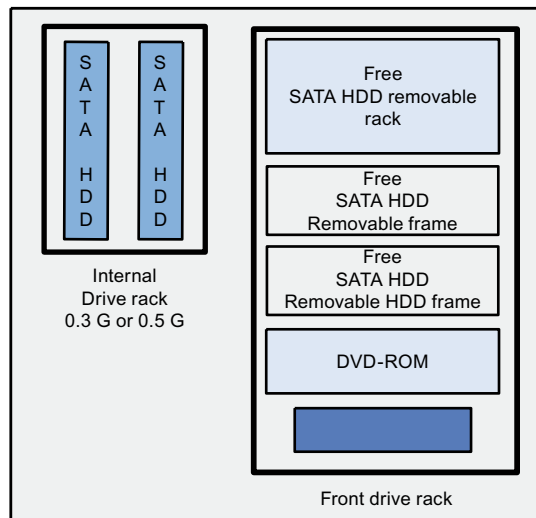

Maximum power loss of expansion modules: 80 W.

Devices equipped with hard disks in removable racks may not be exposed to shock or vibration during operation. The restrictions do not apply for the use of SSD.

Approved configuration versions for the temperature range 5°C to 50°C

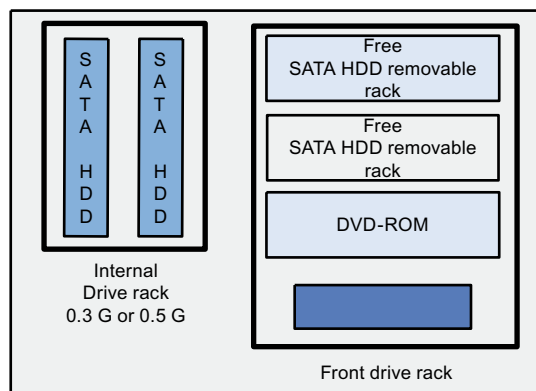

Maximum power loss of expansion modules: 30 W. DVD ROM/CD RW and DVD ROM can be installed and operated within the temperature limits as described earlier.

Devices equipped with hard disks in removable racks may not be exposed to shock or vibration during operation. The restrictions do not apply for the use of SSD.

ESD directive

Meaning



An electronic module is equipped with highly integrated electronic components. Due to their design, electronic components are highly sensitive to overvoltage and thus to the discharge of static electricity. Such electronic components are labeled as electrostatic sensitive devices (ESD).

The following abbreviations are commonly used for electrostatic sensitive devices:

- ESD – Electrostatic Sensitive Device
- ESD – Electrostatic Sensitive Device (internationally recognized term)

Electrostatic charge

CAUTION

Electrostatic charge


ESDs may be destroyed by voltages far below the level perceived by human beings. If you are not discharged electrostatically, the voltage that you transfer when touching a component or the contact points of a module can already cause damage.

The damage to an ESD caused by overvoltage is usually not recognized immediately. The damage only becomes apparent after a long period of operation.

Discharge any electrostatic charge of your body before you touch the ESD.

Anyone who is not connected conductively to their surroundings is subject to electrostatic charge.

The following diagram shows the maximum voltage values to which a person can be charged electrostatically. The values depend on the material and humidity. The shown values are in conformity with the specifications of EN 61000-4-2.

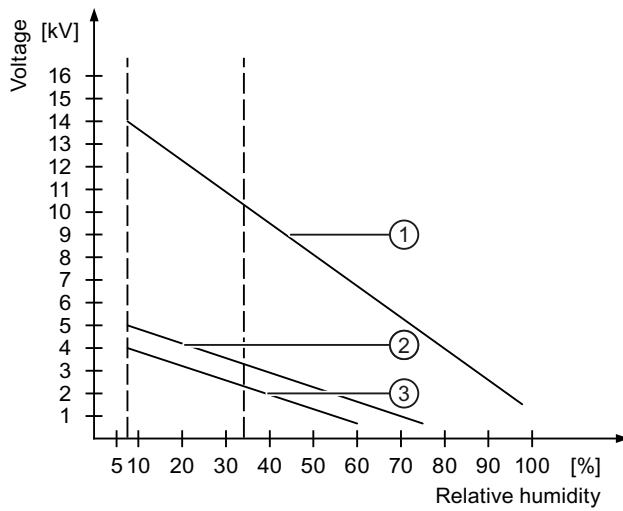

- ① Synthetic materials
- ② Wool
- ③ Antistatic materials such as wood or concrete

Protective measures against discharge of static electricity

CAUTION

Grounding measures

There is no equipotential bonding without grounding. An electrostatic charge is not discharged and may damage the ESD.

When working with electrostatic sensitive devices, make sure that the person and the workplace are properly grounded.

Note the following:

- Only touch the ESD if it is absolutely necessary.
- When you touch ESD modules, avoid touching the pins or the PCB tracks.
This precaution reduces the risk of damaging an ESD.
- Discharge electrostatic electricity from your body if you are performing measurements on an ESD.
To do so, touch a grounded metal object before you carry out the measurement.
- Always use grounded measuring instruments.

List of abbreviations

Abbreviation	Term	Meaning
AC	Alternating current	Alternating current
ACPI	Advanced Configuration and Power Interface	
PLC	Programmable controller	
AGP	Accelerated Graphics Port	High speed bus system
AHCI	Advanced Host Controller Interface	Standardized controller interface for SATA devices. This is supported in Microsoft Windows XP as of SP1 and IAA driver.
AMT	Active Management Technology	Remote maintenance technology from Intel
APIC	Advanced Programmable Interrupt Controller	Extended programmable interrupt controller
APM	Advanced Power Management	Tool for monitoring and reducing power consumption of the PC
AS	Automation system	
ASIS	After Sales Information System	
AT	Advanced Technology	
ATA	Advanced Technology Attachment	
ATX	AT-Bus-Extended	
AWG	American Wire Gauge	US standard for the cable diameter
BIOS	Basic Input Output System	Basic Input Output System
CAN	Controller Area Network	
CD-ROM	Compact Disc – Read Only Memory	Removable storage medium for large data volumes
CD-RW	Compact Disc – Rewritable	Rewritable CD
CE	Communauté Européenne (CE symbol)	The product is in conformance with all applicable EC directives
CF	Compact Flash	
CGA	Color Graphics Adapter	Standard monitor interface
CIRA	Client Initiated Remote Access	Administration of AMT PCs not in the intranet
CLK	Clock pulse	Clock signal for controllers
CMOS	Complementary Metal Oxide Semiconductors	Complementary metal oxide semiconductors
COA	Certificate of authentication	Microsoft Windows Product Key
CoL	Certificate of License	License authorization
COM	Communications Port	Term for the serial interface
CP	Communication Processor	Communication computer

Abbreviation	Term	Meaning
CPU	Central Processing Unit	CPU
CRT	Cathode Ray Tube	
CSA	Canadian Standards Association	Canadian organization for tests and certifications according to own or binational standards (with UL / USA) standards
CTS	Clear To Send	Clear to send
DRAM	Dynamic Random Access Memory	
DC	Direct Current	DC current
DCD	Data Carrier Detect	Data carrier signal detection
DDRAM	Double Data Random Access Memory	Memory chip with high-speed interface
DHCP	Dynamic Host Configuration Protocol	Protocol for configuring IP networks
DMA	Direct Memory Access	Direct memory access
DOS	Disk Operating System	Operating system without GUI
DP	Display Port	New powerful digital monitor port
DQS	Deutsche Gesellschaft zur Zertifizierung von Qualitätsmanagement mBH	
DSR	Data Set Ready	Ready for operation
DTK	Developer Tool Kit	Tools for software development, testing, configuration etc.
DTR	Data Terminal Ready	Data terminal is ready
DVD	Digital Versatile Disk	Digital versatile disk
DVI	Digital Visual Interface	Digital display interface
DVI-I	Digital Visual Interface	Digital display interface with digital and VGA signals
ECC	Error checking and correction	Error correction code
ECP	Extended capability port	Extended parallel port
EFI	Extensible Firmware Interface	
EGA	Enhanced Graphics Adapter	PC to monitor interface
ESD	Components sensitive to electrostatic charge	
DM	Electronic Manual	
EIDE	Enhanced Integrated Drive Electronics	An enhancement of the IDE standard
EISA	Extended Industry Standard Architecture	Extended ISA standard
EMM	Expanded Memory Manager	Manages memory expansions
EM64T	Extended Memory 64 technology	
EN	European standard	
EPROM / EEPROM	Erasable Programmable Read-Only Memory / Electrically Erasable Programmable Read-Only Memory	Plug-in submodules with EPROM/EEPROM chips
EPP	Enhanced Parallel Port	Bi-directional Centronics interface
ESC	Escape character	Control character
EWf	Enhanced Write Filter	
FAQ	Frequently Asked Questions	FAQs
FAT 32	File Allocation Table 32-bit	32-bit file allocation table

Abbreviation	Term	Meaning
FBWF	File-Based Write Filter	
FD	Floppy disk	Disk drive, 3.5"
FQDN	Fully qualified domain name	Full name of a domain
FSB	Front Side Bus	
GND	Ground	Chassis ground
GPT	Globally Unique Identifier Partition Table	
HD	Hard disk	Hard disk
HDA	High Definition Audio	
HDD	Hard Disk Drive	Hard disk drive
HU	Height unit	
HMI	Human Machine Interface	User interface
HORM	Hibernate Once - Resume Many	
HT	Hyper-Threading	
HTML	Hyper Text Markup Language	Script language for creating Internet pages.
HTTP	Hypertext Transfer Protocol	Protocol for data transfer on the Internet
Hardware	Hardware	
I/O	Input/Output	Data input/output on computers
IAA	Intel Application Accelerator	
IAMT	Intel Active Management Technology	Diagnostics, management and remote control of PCs
IDE	Integrated Device Electronics	
IDER	IDE Redirection	Remotely mounting an ISO file as a drive
IEC	International Electrical Commission	
IGD	Integrated Graphics Device	
IP	Ingress Protection	Degree of protection
IR	Infrared	Infrared
IRDA	Infrared Data Association	Standard for data transfer via IR module
IRQ	Interrupt Request	Interrupt request
ISA	Industry Standard Architecture	Bus for expansion modules
ITE	Information Technology Equipment	
KVM	Keyboard, Video, Mouse	
L2C	Level 2 cache	
LAN	Local Area Network	Computer network that is limited to a local area.
LCD	Liquid Crystal Display	Liquid crystal display
LEDs	Light Emitting Diode	Light emitting diode
LPT	Line Printer	Printer port
LVDS	Low Voltage Differential Signaling	
LW	Drive	
MAC	Media access control	Media access control
MC	Memory Card	Memory card in credit card format
ME	Management engine	Unit implemented by AMT
MEBx	Management Engine BIOS Extension	User interface for basic configuration of AMT

List of abbreviations

Abbreviation	Term	Meaning
MLFB	Machine-readable product designation	
MMC	Micro Memory Card	Memory card of the format 32 mm x 24.5 mm
MPI	Multipoint-capable interface for programming devices	
MPS	Manageability Presence Server	Proxy for AMT
MS-DOS	Microsoft Disc Operating System	
MTBF	Mean Time Between Failures	
MUI	Multilanguage User Interface	Language localization in Windows
NA	Not Applicable	
NAMUR	Normenarbeitsgemeinschaft for Mess- und Regelungstechnik in der chemischen Industrie (standardization body for instrumentation and control technology in the chemicals industry)	
NC	Not Connected	Not connected
NCQ	Native Command Queuing	Automatic re-sorting of the file and disk access, for increased performance
NEMA	National Electrical Manufacturers Association	Syndicate of manufacturers of electrical components in the USA
NMI	Non Maskable Interrupt	Interrupt the processor can not reject
NTFS	New Techniques File System	Secure file system for Windows versions (2000, XP, 7)
ODD	Optical Disk Drive	
OPC	OLE for Process Control	Standardized interface for industrial processes
PATA	Parallel ATA	
PC	Personal computer	
PCI	Peripheral Component Interconnect	High-speed expansion bus
PCIe	Peripheral Component Interconnect express	High-speed serial, differential full-duplex PtP interface with high data rate.
PCMCIA	Personal Computer Memory Card International Association	
PE	Protective Earth	Protective conductor
PEG	PCI Express Graphics	
PG	Programming device	
PIC	Programmable Interrupt Controller	Programmable interrupt controller
POST	Power On Self Test	
PRTC	Protected Real Time Clock	Clock in the management engine MEBx
PXE	Preboot Execution Environment	Software for running new PCs without hard disk data via the network
RAID	Redundant Array of Independent Disks	Redundant hard disk array
RAL	Restricted Access Location	Installation of device in operating facilities with restricted access - for example, a locked switchgear cabinet
RAM	Random Access Memory	
RI	Ring Input	Incoming call

Abbreviation	Term	Meaning
ROM	Read-Only Memory	
RS 485	Reconciliation Sublayer 485	Bi-directional bus system designed for up to 32 nodes.
RTC	Real Time Clock	Real-time clock
RTS	Reliable Transfer Service	Request to send
RxD	Receive Data	Data transfer signal
SAS	Serial attached SCSI	
SATA	Serial Advanced Technology Attachment	
SCSI	Small Computer System Interface	
SDRAM	Synchronous DRAM	
SELV	Safety Extra Low Voltage	Safety extra low voltage
SLC	Second Level Cache	
SMART	Self Monitoring Analysis and Reporting Technology	Hard disk error diagnostics program
SMS	Short Message Service	Short message via telecommunication network
SNMP	Simple Network Management Protocol	Network protocol
SO-DIMM	Small Outline Dual Inline Memory Module	
SOL	Serial over LAN	Text-based remote control
SOM	SafeCard on Motherboard (SOM)	
SPP	Standard Parallel Port	Synonym for parallel port
SRAM	Static Random Access Memory	Static RAM
SSD	Solid State Drive	
SVGA	Super Video Graphics Array	Enhanced VGA standard with at least 256 colors
SVP	Serial number of the device	
SW	Software	
TCO	Total Cost of Ownership	
TFT	Thin-Film-Transistor	Type of LCD flat-screen
TTY	Tele Type	Asynchronous data transfer
TxD	Transmit Data	Data transfer signal
TXT	Trusted Execution Technology	Hardware implementation
TWD	Watchdog Time	Watchdog monitoring time
UEFI	Unified Extensible Firmware Interface	
UL	Underwriters Laboratories Inc.	US organization for tests and certifications according to own or binational standards (with CSA / Canada) standards.
UMA	Unified Memory Architecture	Video memory
URL	Uniform Resource Locator	Designation of the full address of an Internet page
USB	Universal Serial Bus	
UXGA	Ultra Extended Graphics Array	Graphic standard, maximum resolution 1600x1200 pixels.
V.24		ITU-T standardized recommendation for data transfer via serial ports.
VCC		Positive supply voltage of integrated circuits

List of abbreviations

Abbreviation	Term	Meaning
VDE	Verein deutscher Elektrotechniker (Union of German Electrical Engineers)	
VGA	Video Graphics Array	Video adapter which meets industrial standard
VRM	Voltage Regulator Module	
VT	Virtualization Technology	Intel technology with which a virtually closed environment can be made available.
VT-D	Virtualization Technology for Directed I/O	Enables the direct assignment of a device (e.g. network adapter) to a virtual device.
W2k	Windows 2000	
WAN	Wide Area Network	
WAV	Wave Length Encoding	Loss-free file format for audio data.
WD	Watchdog	Program monitoring with error detection and alarming.
WLAN	Wireless LAN	Wireless local area network
WoL	Wake on Local Area Network	
WWW	World Wide Web	
XD	Execute Disable Capability	Hardware implementation
XGA	Extended Graphics Array	Graphic standard, maximum resolution 1024x768 pixels.
ZMM	Zero Maintenance Cache Protection Module	Maintenance-free cache unit for saving cache contents

Glossary

AHCI mode

AHCI is a standardized method to address the SATA controller. AHCI describes a structure in the RAM, which contains a general area for control and status, as well as a command list.

APIC mode

Advanced peripheral interrupt controller. 24 interrupt lines are available.

ATAPI CD-ROM Drive

AT Bus Attachment Packet Interface (connected to AT bus) CD-ROM drive

Automation system (AS)

A programmable controller (PLC) of the SIMATIC S7 system consist of a central controller, one or several CPUs, and various I/O modules.

Backup

Duplicate of a program, data medium or database, used either for archiving purposes or for the protection of vital and non-replaceable data against loss when the working copy is corrupted. Certain applications automatically generate backup copies of data files, and manage both the current and the previous versions on the hard disk.

Baud

Physical unit for the step speed in signal transmission. Defines the number of transferred signal states per second. With only two states, one baud is equivalent to a transmission rate of 1 bps.

Boot disk

A boot disk is a disk with a "Boot" sector. This can be used to load the operating system from the disk.

Cache

High-speed access buffer for interim storage (buffering) of requested data.

CE marking

Communauté Européene The CE mark confirms compliance of the product with corresponding EC Directives, for example, with the EMC Directive.

Chipset

Located on the motherboard, connects the processor with the RAM, the graphics controller, the PCI bus, and the external interfaces.

Cold restart

A start sequence, starting when the computer is switched on. The system usually performs some basic hardware checks within the cold start sequence, and then loads the operating system from the hard disk to work memory -> boot

COM interface

The COM interface is a serial V.24 interface. The interface is suitable for asynchronous data transfer.

Compact Flash cards (CF)

Compact Flash is a digital storage medium in card format and without moving parts. The CF card contains the non-volatile memory and the controller. The interface of the CF card corresponds with the IDE interface. CF cards can be operated without additional electronics on PCMCIA or IDE hard disk controllers using a plug and socket adapter. There are two design forms: CF-I (42.6 x 36.4 x 3.3 mm) and CF-II (42.8 x 36.4 x 5 mm).

Configuration files

These are files containing data which define the configuration after restart. Examples of such files are CONFIG.SYS, AUTOEXEC.BAT and the registry files .

Configuration software

The configuration software updates the device configuration when new modules are installed . This is done either by copying the configuration files supplied with the module or by manual configuration using the configuration utility.

Controller

Integrated hardware and software controllers that control the functions of certain internal or I/O devices (for example, the keyboard controller).

Device configuration

The configuration of a PC or programming device contains information on hardware and device options, such as memory configuration, drive types, monitor, network address, etc. The data are stored in a configuration file and enable the operating system to load the correct device drivers and configure the correct device parameters. . If changes are made to the hardware configuration, the user can change entries in the configuration file using the SETUP program. .

Disc-at-once

With this burning technique, data are written to a CD in a single session, and the CD is then closed. Further write access is then no longer possible.

DP

Display Port: New digital monitor interface.

Drivers

Program parts of the operating system. They adapt user program data to the specific formats required by I/O devices such as hard disk, printers, and monitors.

Dual Core CPU

Dual-core processors significantly increase the speed of computing and program execution compared to the previous generation of single-core processors with hyperthreading technology.

ECC

Error checking and correction is a method for detecting and correcting errors when saving and transferring data, frequently used in conjunction with RAM modules with and without ECC.

EMC directive

Directive concerning **E**lectromagnetic **C**ompatib**l**ity. Compliance is confirmed by the CE symbol and the EC certificate of conformity.

Energy management

The energy management functions of a modern PC allow individual control over the current consumption of vital computer components (e.g. of the monitor, hard disk and CPU), by restricting their activity based on the current system or component load. Energy management is of particular importance for mobile PCs.

Energy options

The energy options can be used to reduce energy consumption of the computer, while keeping it ready for immediate use. This can be configured in Windows by selecting Settings > Control Panel > Energy options.

Enhanced Write Filter (EWF)

Configurable write filter that allows you, for example, to boot Windows Embedded Standard from write-protected media (such as CD-ROM), to write protect individual partitions and adapt the performance of the file system to your needs (when using Compact Flash cards).

ESD directive

Directive for using electrostatic sensitive components.

Ethernet

Local network (bus structure) for text and data communication with a transfer rate of 10/100/1000 Mbps.

Execute Disable Capability

Hardware implementation that prevents mutual memory accesses by programs and applications. It is only effective when all relevant system components, such as processors, operating systems and applications are supported.

Extensible Firmware Interface (EFI)

Refers to the central interface between the firmware, the individual components of a computer and the operating system. EFI is located logically beneath the operating system and represents the successor to PC BIOS, focusing on 64-bit systems.

File Based Write Filter (FBWF)

Configurable write filter to protect individual files from write access.

Formatting

Basic partitioning of memory space on a magnetic data medium into tracks and segments. Formatting deletes all data on a data medium. All data media must be formatted prior to their first use.

Gender changer

Using the gender changer (25-pin / 25-pin), the COM1/V24/AG interface of the SIMATIC PC family can be converted to the usual 25-pin male connector.

HORM

Hibernate once, resume many is a method for fast booting from a single Hibernate file that only needs to be created once. HORM ensures restoration of a uniform, saved system state when booting. This reduces the writing to a CompactFlash medium to a minimum, for example, when starting up and shutting down Windows Embedded Standard 2009.

Hot plug

The SATA interface gives the device's hard drive system hot plugging capability. Prerequisite for this configuration is a RAID1 system with SATA RAID controller (onboard, or slot module), and at least two SATA removable cartridges. The advantage of hot plugging is that defective hard disks can be replaced without having to reboot the computer.

Hub

A term in network technology. In a network, a device joining communication lines at a central location, providing a common connection to all devices on the network.

Hyper Threading

HT technology (multi-threading) enables the parallel computing of processes. HT is only effective when all relevant system components, such as processors, operating systems and applications are supported.

IGD

Integrated Graphics Device. Graphics interface integrated in the chipset.

Image

This refers to the image, for example, of hard disk partitions saved to a file in order to restore them when necessary.

Intel Active Management Technology

This technology permits the diagnostics, management and remote control of PCs. It is only effective when all relevant system components, such as processors, operating systems and applications are supported.

Intel VT

The Intel Virtualization Technology (IVT) is the implementation of a secure closed environment for applications. Special (visualization) software on a VT-capable processor is required for its use.

Interface

- Physical interconnection (cable) of hardware elements such as PLCs, PCs, programming devices, printers or monitors.
- Interface for interactive software applications.

Interface, multi-point

MPI is the programming interface of SIMATIC S7/M7. Allows remote access to programmable modules, text-based displays and OPs from central locations. The MPI nodes can intercommunicate.

LAN

Local Area Network: LAN is a local network that consists of a group of computers and other devices that are distributed across a relatively restricted range and are linked with communication cables. The devices connected to a LAN are called nodes. The purpose of networks is the mutual use of files, printers or other resources.

Legacy Boot Device

Conventional drives can be used as USB devices.

Legacy USB support

Support of USB devices (e.g. mouse, keyboard) on the USB ports without driver.

License key

The license key represents the electronic license stamp of a license. Siemens provides the license keys for protected software.

License key disk

The license key disk contains the authorizations or license keys required to enable protected SIMATIC software.

Low-voltage directive

EC Product Safety Directive relating to the safety of products which are operated on low voltage (50 V AC to 1000 V AC, 70 V DC to 1500 V DC) and not specified in other directives. Compliance is confirmed by the CE symbol and the EC certificate of conformity.

LPT interface

The LPT interface (Centronics interface) is a parallel interface that can be used to connect a printer.

Memory card

Memory cards in credit card format. Memory for user programs and parameters, for example, for programmable modules and CPs.

Module

Modules are plug-in units for PLCs, programming devices or PCs. They are available as local modules, expansion modules, interfaces or mass storage (Mass storage module).

Motherboard

The motherboard is the core of the computer. Here, data are processed and stored, and interfaces and device I/Os are controlled and managed.

Operating system

Generic term which describes all functions for controlling and monitoring user program execution, distribution of system resources to the user programs and the operating mode in cooperation with the hardware (for example Windows XP Professional).

Packet writing

The CD-RW is used as a disk medium. The CD can then be read only by packet-writing compatible software or has to be finalized. Finalization of a CD closes the CD within an ISO9660 shell. You can still write to the CD-RW several times in spite of finalization. Not all CD drives can read packet-written CDs. There are restrictions to using this method in general data transfer.

PATA

Interface for hard disk drives and optical drives, with parallel data transmission rate up to 100 Mbps.

PC card

Trademark of the Personal Computer Memory Card International Association (PCMCIA). Designation for auxiliary cards that conform with PCMCIA specifications. A PC card that has roughly the size of a credit card can be plugged into a PCMCIA slot. Version 1 specifies cards of Type I with a thickness of 3.3 millimeters, which are designed mainly for use as external memory. Version 2 of the PCMCIA specification also defines cards of Type II with a thickness of 5 mm and cards of Type III with a thickness of 10.5 mm. Type II cards can realize devices such as modems, fax cards and network interface cards. Type III cards are equipped with devices that require more space, for example wireless communications modules, or rotary storage media such as hard disk drives, for example.

PC/104 / PC/104-Plus

Two bus architectures are especially fashionable today in the industrial world. PC/104 and PC/104-*Plus*. Both are standard in single-board computers of the PC class. The electrical and logical layout of the two bus systems is identical with ISA (PC/104) and PCI (PC/104-*Plus*). Software cannot usually detect a difference between them and normal desktop bus systems. Their advantage is the compact design and the resulting space they save.

PCMCIA

Association consisting of approx. 450 member companies of the computer industry whose focus is set on providing worldwide standards for miniaturization and flexible use of PC expansion cards in order to provide basic technologies to the market.

PEG interface

PCI Express for Graphics. Graphics interface with 16 PCIe lanes for expansions with graphics modules.

PIC mode

Peripheral interrupt controller. 15 interrupt lines are available.

Pixel

PixElement (picture point). The pixel represents the smallest element that can be reproduced on-screen or on a printer.

Plug&Play

Generally, a reference to the ability of a computer to automatically configure the system for communication with peripheral devices (for example monitors, modems or printers). The user can plug in a peripheral and "play" it at once without manually configuring the system. A Plug&Play PC requires both a BIOS that supports Plug&Play and a Plug&Play expansion card.

POST

Self-test performed by the BIOS after the computer is switched on. Performs a RAM test and a graphics controller test, for example. The system outputs audible signals (beep codes) if the BIOS detects any errors; the relevant message indicating cause of error is output on the screen.

PROFIBUS/MPI

Process Field Bus (standard bus system for process applications)

PROFINET

PROFINET is the name of the standard for Industrial Ethernet developed and maintained by the PROFIBUS user organization. PROFINET unites protocols and specifications with which Industrial Ethernet meets the requirements of industrial automation technology.

Programmable controller (PLC)

The programmable controllers (PLC) of the SIMATIC S5 system consist of a central controller, one or more CPUs, and various other modules (e.g. I/O modules).

PXE server

A **Preboot Execution Environment** server is part of a network environment and can provide software to connected computers even before they boot. This can involve operating system installations or servicing tools, for example.

RAID

Redundant Array of Independent Disks: Data storage system which is used to save data and the corresponding error correction codes (parity bits, for example) to at least two hard disk volumes in order to enhance reliability and performance. The hard disk array is controlled by management programs and a hard disk controller for error correction. The RAID system is usually implemented in network servers.

RAL

Restricted Access Location: Installation of the device in a production facility with restricted access, for example, a locked control cabinet.

Recovery CD

Contains the tools for configuring hard disks and the Windows operating system.

Reset

Hardware reset: Reset/restart of the PC using a button/switch.

Restart

Warm restart of a computer without switching the power off (Ctrl + Alt + Del)

Restore DVD

The Restore DVD is used to restore the system partition or the entire hard disk to factory state if the system has crashed. The bootable DVD contains all the necessary image files. You can also create a boot disk allowing restoration via the network.

ROM

Read-Only Memory ROM is a read-only memory in which every memory location can be addressed individually. The programs or data are permanently stored and are not lost in the event of a power failure.

S.M.A.R.T

The Self-Monitoring, Analysis and Reporting Technology (SMART or S.M.A.R.T.) is an industry standard integrated in storage media. It makes for permanent monitoring of important parameters and early detection of imminent problems.

SAS

Serial SCSI interface for connection of hard drives, for example, with serial data transmission

SATA

Serial ATA Interface for hard disk drives and optical drives with serial data transmission.

SCSI interface

Small Computer System Interface Interface for connecting SCSI devices such as hard disk drives or optical drives.

Session at once

In session at once, the CD can be written to both with an audio session and a data session. The two sessions are written to at once (as in disc at once).

SETUP (BIOS Setup)

A program in which information about the device configuration (that is the configuration of the hardware on the PC/PG) is defined. The device configuration of the PC/PG is preset with defaults. Changes must therefore be entered in the SETUP if a memory expansion, new modules or a new drive are added to the hardware configuration.

SSD (Solid State Drive)

A Solid State Drive is a drive that can be installed like any other drive; it does not contain a rotating disk or other moving parts because only semiconductor memory chips of similar capacity will be used. This design makes SSDs more rugged, provides shorter access times, low energy consumption and rapid data transfer.

STEP 7

Programming software for the creation of user programs for SIMATIC S7 controllers.

Track-at-once

In track-at-once recording, a CD can be written to in bits in several sessions if the CD was not closed.

Troubleshooting

Error cause, cause analysis, remedy

Trusted Execution Technology

Hardware implementation that allows secured execution of programs and applications. It is only effective when all relevant system components, such as processors, operating systems and applications are supported.

Turbo Mode

In this mode individual processor cores can be clocked higher in accordance with the load from the user programs and as required. It is only supported by Core i5 and Core i7 processors.

V.24 interface

V.24 is a standardized interface for data transfer. Printers, modems, and other hardware modules can be connected to a V.24 interface.

Wake on LAN (WoL)

Wake on Local area network. This function allows the PC to be started via the LAN interface.

Warm restart

The restart of a computer after a program was aborted. The operating system is loaded and restarted again. The CTRL+ ALT+ DEL hotkey can be used to initiate a warm restart.

WLAN

Wireless LAN is a local network that transmits data via radio waves, infrared light or another wireless technology. Wireless LAN is mainly used for mobile computer applications in office or factory environments.

ZMM

Zero Maintenance Cache Protection Module is a functional unit of the SAS Raid controller that stores the data in the cache of the controller in the case of a voltage failure. This functional unit is maintenance-free.

Index

A

- Abbreviations, 213, 218
- AHCI controller
 - Introducing to the operating system (Windows XP), 101
- Allocation of resources, 74
- Angle brackets
 - Mounting methods, 33
- Antivirus software, 42
- APIC mode, 167
- Approvals, 31, 206
- Assignment
 - External interfaces, 139
 - Memory addresses, 168
- Authorization, 99

B

- Battery, 12, 91
- Battery monitoring, 66
- Battery replacement, 91
- BEEP codes, 110
- BIOS, 136
 - Beep codes, 110
- BIOS Setup, 169
 - Default settings, 191
 - Menu layout, 170
 - Menus, 170
- BIOS Setup menus
 - Advanced, 173
 - Boot, 186
 - Main, 172
 - Security, 184
 - Version, 189
- Boot sequence
 - Error messages, 109
- Burner software, 43
- Bus board, 95
 - Installation, 155
 - Removing, 95

- Bus expansion, 147

C

- CD-RW, 43
- CE marking, 205
- Certificates, 206
- Charge
 - Electrostatic, 211
- Chipset, 123, 136
- COM, 125
- Connecting
 - I/Os, 35, 205
 - Power supply, 36
- Connection elements, 21, 23
- Connector pin assignment
 - PCI Express slot, 161
- CPU, 136
- Current delivery, 121

D

- Data backup, 106
- Data carrier controller
 - Introducing to the operating system (Windows XP), 101
- Data exchange, 59
- Declaration of conformity, 205
- Degree of protection, 121
- Device
 - Open, 70
 - Unpacking, 29
- Device configuration, 191
- Device fan, 87, 147
- DiagBase software, 63
- DiagMonitor
 - Fan monitoring, 65
 - Temperature monitoring, 64
- DiagMonitor software, 63
- Diagnostics
 - BIOS beep codes, 110
 - DiagBase software, 63
 - DiagMonitor software, 63
- Dimensional drawing
 - Expansion module, 132
 - Telescopic rails, 132
- Dimensions, 121

Disclaimer of liability, 85
Documentation and Drivers DVD, 98
Drive
 Installing, 82, 83
 Removing, 83
Drive bay, 78
 Removing, 79
Drives, 17, 123
 Expansion, 78
Dust protection, 121
DVD burner, 124
DVD drive, 20
DVD player, 43
DVD ROM, 43, 124
 Installing burner or DVD software, 105

E

Electrostatic charge, 211
Electrostatic sensitive devices, 12
EMC directive, 205, 206
Equipotential bonding, 39
Error messages
 BIOS beep codes, 110
 Startup, 109
ESD directives, 12
ETHERNET, 26
Ethernet address, 30
Ethernet interface, 16
Expansion
 Drives, 78
 Memory, 71
 Slots, 16
Expansion module, 74
Expansion slots, 123
External interfaces, 139

F

Fan, 21
 Removing, 87
FAN, 27
Fan bracket, 87
Fan connector, 88
Fan monitoring, 65
Fields of application, 13
Filter mat, 20
Firewall, 42
Floppy, 147
Front cover, 87
Front door, 20

Front door, 20
Front door, 20
Front panel interface, 147
Front view, 20

G

Graphics, 124, 136
 Technical specifications, 124

H

Hard disk drive, 78, 123
Hard disks
 Partitions, 46
Hardware interrupt
 Assigning, 163
Hexagonal bolts, 96

I

I/Os, 35
 Connecting, 205
Identification data, 29
Image
 creating, 106
Initial commissioning, 41
installation
 Installation locations, 33
 Mounting methods, 33
Installation
 Burner / DVD software, 105
 Memory modules, 71
 Modules, 74
Installation of operating system
 Windows XP, 100
Installing
 Drive, 79, 81, 82, 83
Installing language package, 102
Interface, 16
Interface pinout
 DVI, 145
Interfaces, 23
 COM, 24, 137
 COM1, 16, 139
 DVI-D, 24
 DVI-I, 24
 Ethernet, 16, 137
 Ethernet, 16, 137
 Ethernet, 16, 137
 ETHERNET, 24

Ethernet RJ 45, 59
 External devices, 138
 Internal components, 138
 Keyboard, 16
 KEYBOARD, 24
 KEYBOARD, 24
 Line Out, 146
 LPT, 24, 137
 LPT1, 16
 Microphone, 146
 Mouse, 16
 MOUSE, 24
 Parallel, 125, 140
 PROFIBUS, 125, 137
 PROFIBUS/MPI, 16, 24, 59, 60, 141
 PROFINET, 24
 PS/2, 16
 PS/2 keyboard, 141
 PS/2 mouse, 140
 Serial, 125
 USB, 16, 24, 125, 137, 141
 VGA, 16, 24
 Interrupt assignment, 163
 IRQ assignment, 168

K

Keyboard, 136

L

License key, 99
 Line Out interface, 146
 Localized information, 37
 Lock for mains connector, 38
 Low-voltage directive, 205
 LPT1, 125

M

Memory, 136, 147
 Memory addresses
 Assignment, 168
 Memory expansion, 123
 Memory expansion, 123
 Memory modules
 Installing, 71
 Removing, 72
 Messages
 BIOS beep codes, 110
 Microphone interfaces, 146

Microsoft Windows Product Key, 29
 Microsoft Windows Product Key, 29
 Module retainer, 74, 82
 Modules, 73
 Installing, 71
 Monitoring
 Fan, 65
 Function overview, 17
 Status displays, 26, 28
 Temperature, 64
 Watchdog, 64
 Watchdog, 64
 Monitoring functions, 17
 Monitoring software, 64
 Motherboard, 96
 External interfaces, 139
 Internal interfaces, 147
 Position of the interfaces, 138
 Removal, 96
 Mounting holes, 33
 Mouse, 136
 MUI, 102

N

Noise emission, 121

O

On/off button, 20, 21, 154
 Online ordering system, 60
 Open
 Device, 70
 Open the front door, 70
 Operating system, 19, 41
 Initial commissioning, 41
 Updates, 105
 Operator panel, 96
 Installation, 154
 Removal, 96
 Order no., 30
 Output voltage, 128, 129

P

Partition
 Windows XP delivery state, 101
 Partitions
 Hard disks, 46
 PCI Express slot
 Connector pin assignment, 161

- PCI interface, 151
- PCI IRQ Line, 74
- PCI modules, 73
- PEG interface, 149
- PEG slot, 155
- PIC mode, 167
- Pin assignment
 - Operator panel, 154
- Pinout
 - PEG interface, 158
- POST codes
 - BIOS beep codes, 110
- Power connection socket, 25
- Power consumption, 121
- Power Good Signal, 128
- Power requirements, 127
- power supply
 - Removing, 92
- Power supply, 16, 21, 25, 92, 147
 - AC power supply, 128
 - AC supply voltage, 129
 - Connecting, 36
- Processor, 17, 123, 136
 - Removing, 98
- PROFIBUS, 125
- PROFIBUS/MPI, 26, 59, 60
- PROFIBUS/MPI interface, 16
- PROFINET, 200, 204
- Protection class, 31, 121
- Protective measure
 - Static electricity, 212

R

- RAID, 119
- RAID controller
 - Introducing to the operating system (Windows XP), 101
- RAID Level 1, 48, 55
- RAID system, 47, 53
 - Integrated SATA RAID, 47
 - Management functions, 47, 54
 - SAS hardware RAID, 53
- RAID1, 14
- RAID5, 14
- RAM, 123
- Rating plate, 21, 30
- Real-time protection, 42
- Rear view, 21
- Recovery DVD, 98
- Redundant power supply, 66
 - Status, 66

- Removable hard disk, 44
- Removable rack
 - Installing, 79, 81
- Removing
 - Bus board, 95
 - Drive, 83
 - Drive bay, 79
 - Fan, 87
 - Motherboard, 96
 - Operator panel, 96
 - Power supply, 92
 - Processor, 98
- Removing the operator panel, 96
- Repairs, 11, 85
- Replacing
 - Battery, 91
- Replacing filters, 86
- Reset button, 20, 21, 154
- Restore DVD, 98
- Restoring the delivery state, 99
- Retrofitting instructions, 208
- RJ45 Ethernet, 59, 142, 143

S

- Safety instructions, 11
- Safety regulations, 121
- SAS, 53
- SAS controller
 - Introducing to the operating system (Windows XP), 101
- SAS hardware RAID system, 53
- SAS RAID system, 53
- SATA, 47
- SATA, 47
- SATA RAID system, 47
- SATA/PATA Configuration, 175
- SCSI interface, 147
- Secure the power plug, 37
- Serial number:, 30
- Setting up partitions
 - Windows XP, 101
- Setting up the language selection, 102
- Slot cover, 74
- Slots, 16
- Software, 98
- Startup
 - Error messages, 109
- Static electricity
 - Protective measures, 212
- Status displays, 20, 26, 28
 - Ethernet, 26

- FAN, 27
- PROFIBUS/MPI, 26
- TEMP, 27
- WATCHDOG, 27
- Strain relief
 - Ethernet cable, 39
- Supply voltage, 37, 121
- System BIOS, 109
- System partition, 99
- System resources, 164

T

- Telescopic rails
 - Mounting methods, 33
- TEMP, 27
- Temperature, 122
- Temperature monitoring, 64
- Temperature ranges
 - Approved configuration versions, 208
- Troubleshooting, 119

U

- Updates
 - Operating system, 105
 - User programs and drives, 105
- USB interface, 16, 20
- USB socket, 96

V

- Ventilation slots, 31
- VGA interface, 16

W

- Warranty, 11
- Watchdog, 17
 - Monitoring function, 64
- WATCHDOG, 27
- Watchdog monitoring times, 65
- Windows Security Center, 42
- Windows XP
 - Installation, 100

